

PARTS LIST

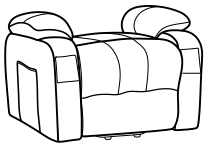

Ax1

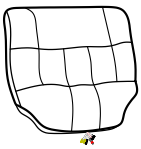


Bx1




Cx1




Dx1

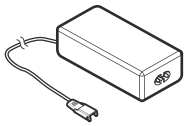


Ex1

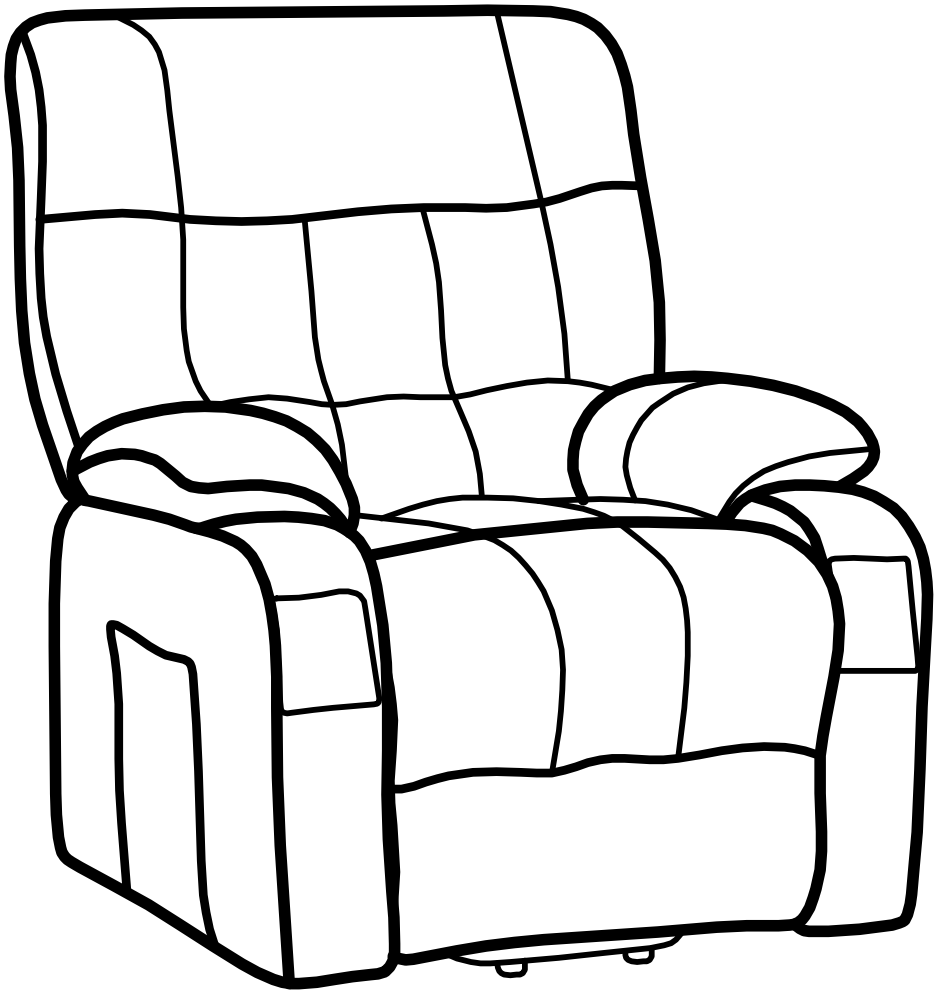

STEP 1

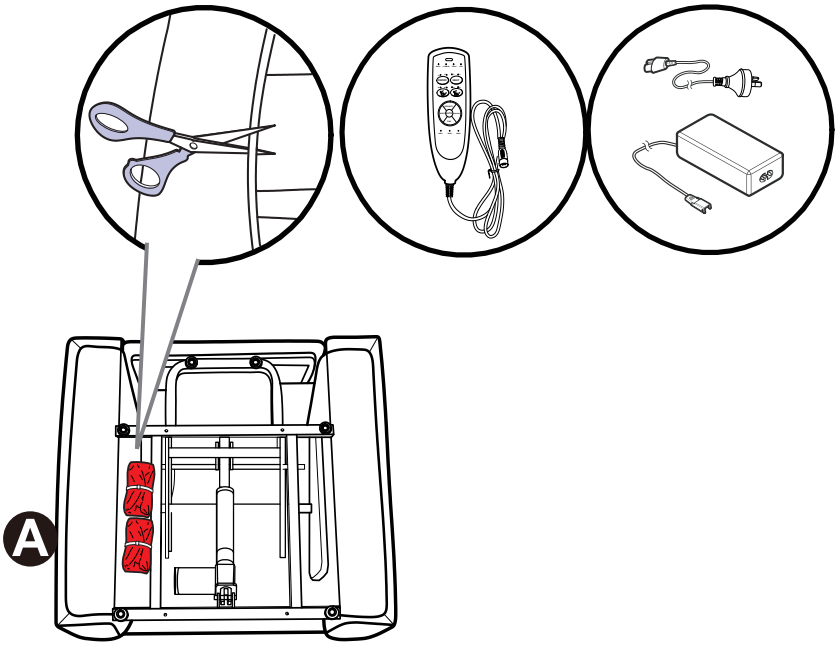


STEP 2

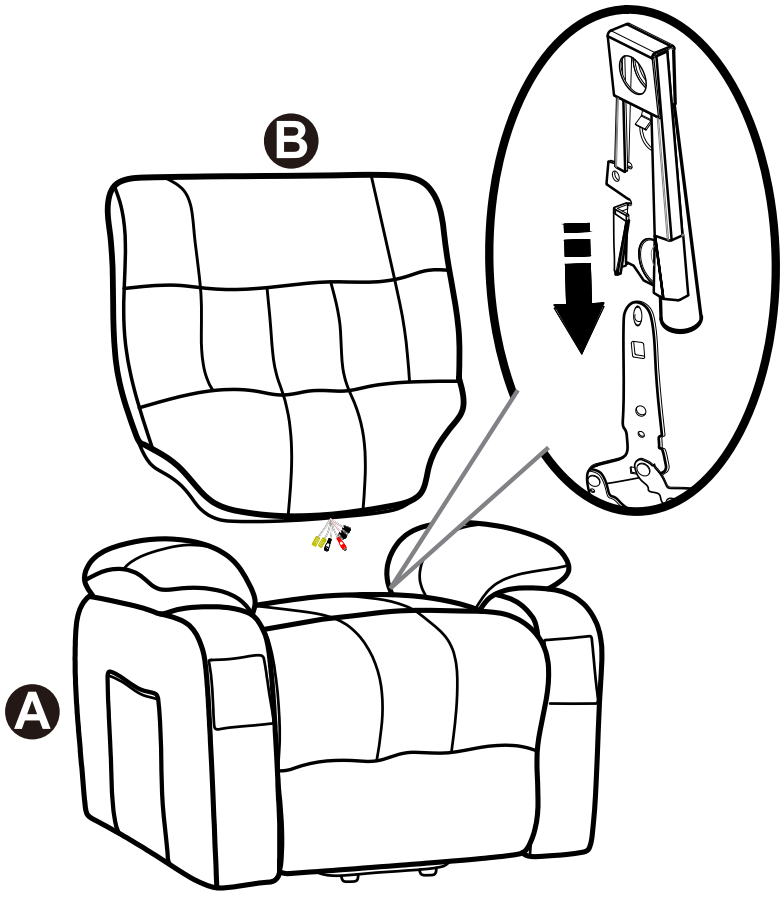


STEP 3



Note: After assembly, slight indentations may appear on the surface. Gently pat the area and let the product sit for 1–2 weeks. The surface will gradually return to its original condition.

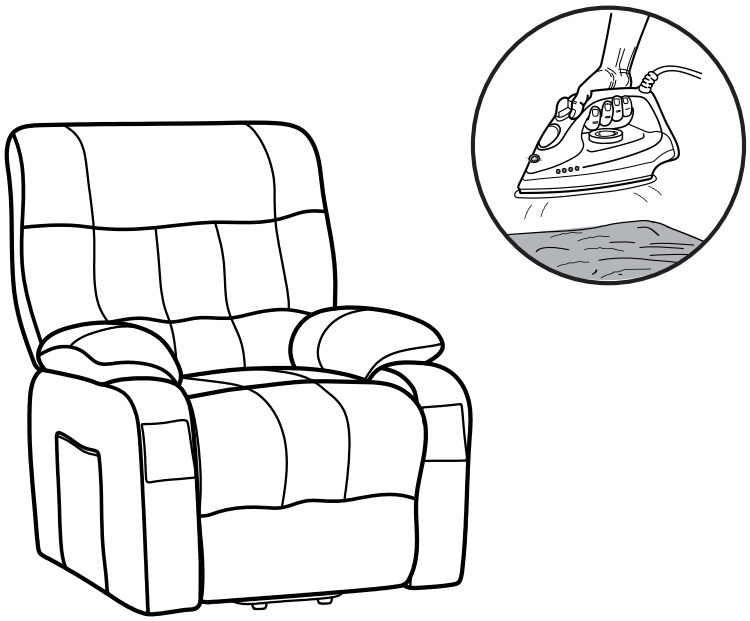


STEP 4

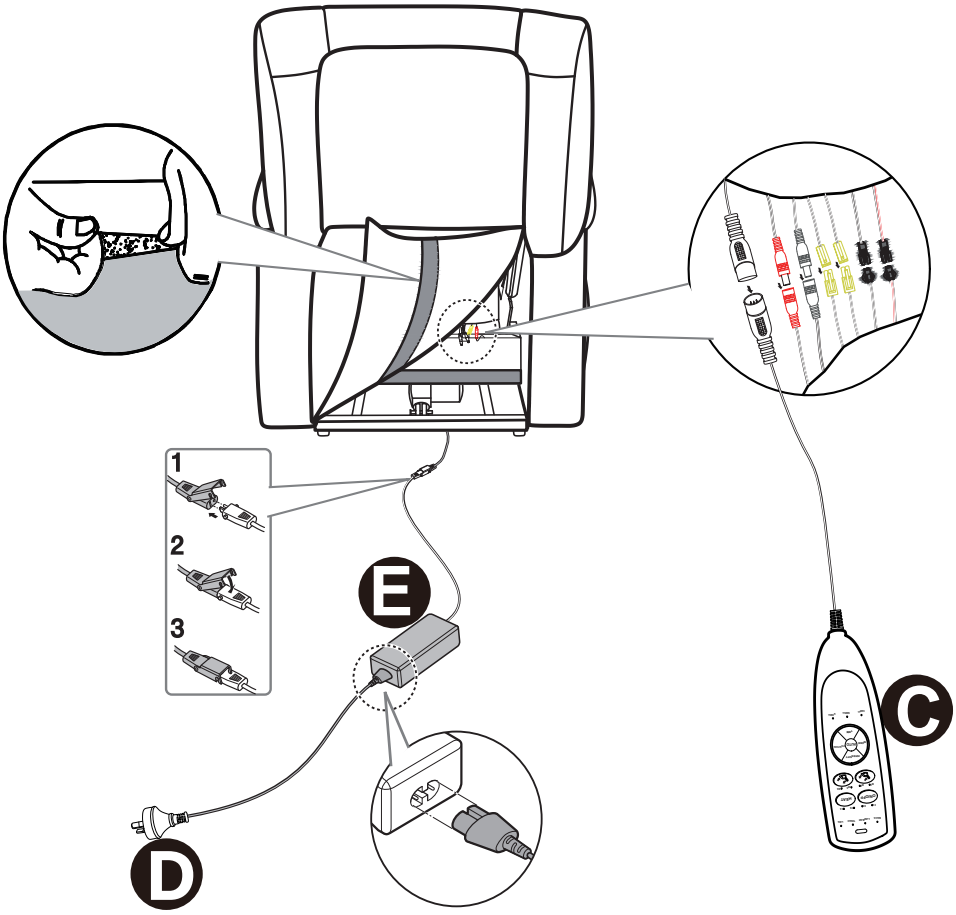


STEP 5

product function demonstration

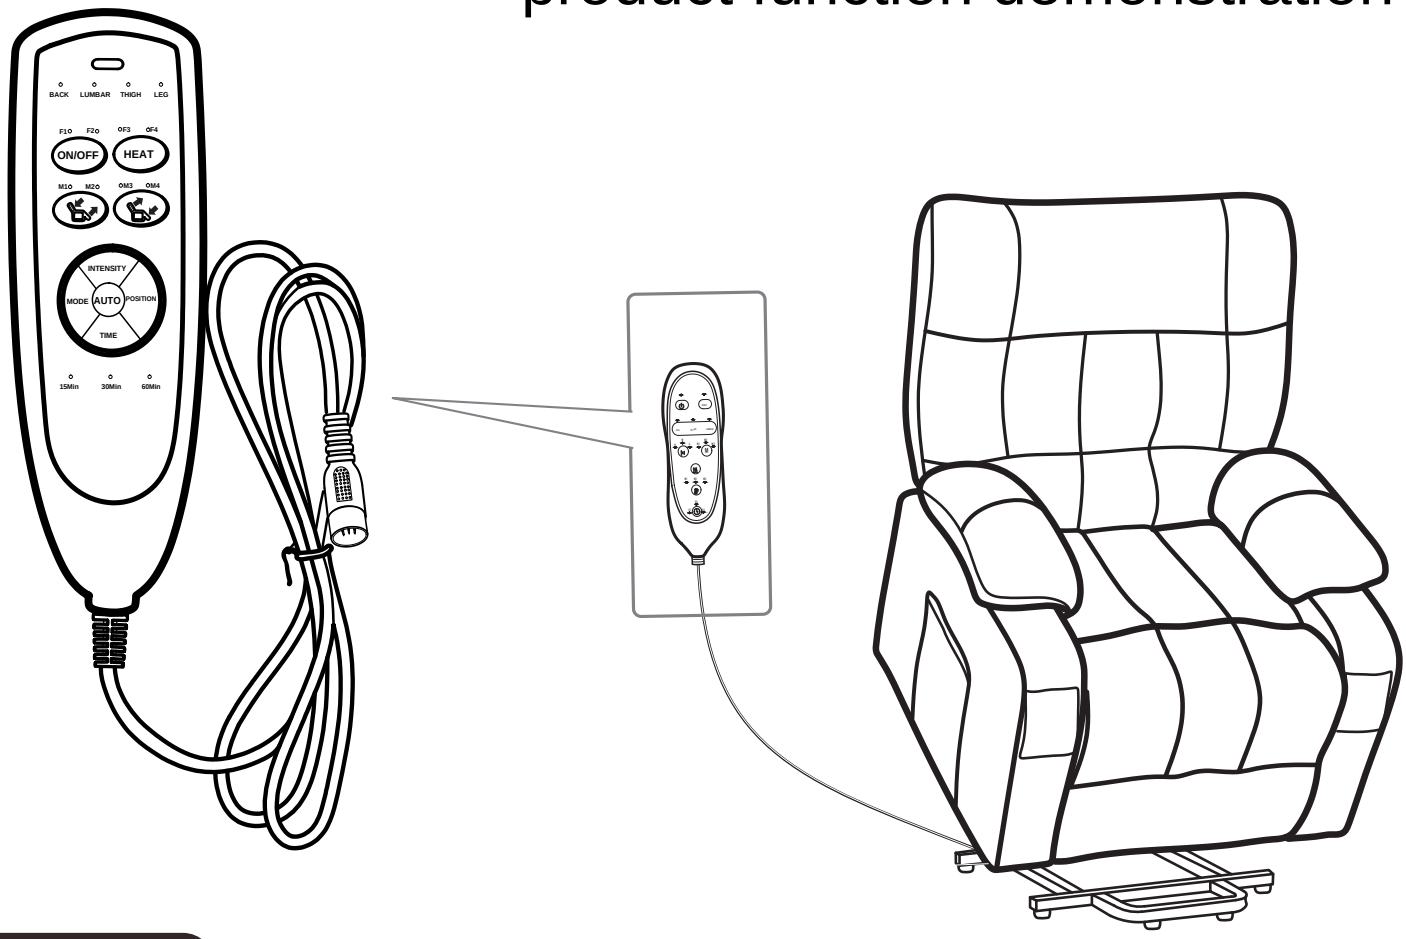

STEP 6

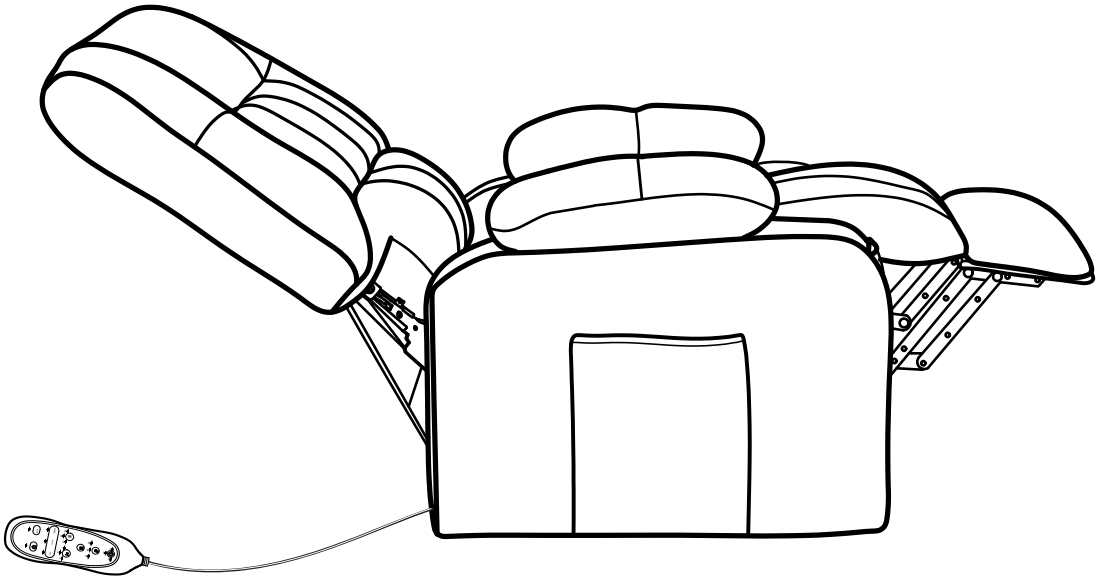


REMOTE CONTROL

Power Specifications:

1.Voltage: AC110-240V; DC29V
2.Current: 2A
3.Power: 58W
4.Voltage Grade: Class III
5.Frequency:50-60Hz


PRODUCT FEATURE

- Heating function-- Maximum temperature of 65°C.
- 8 Vibration Motors.
- 4 Vibration Modes.
- 4 Vibration intensity levels.
- 4 Vibration areas-- Each vibration zone can be operated independently, and the lumbar and thigh areas can be activated together.
- Timer options-- Set to 15, 30, or 60 minutes for convenience.

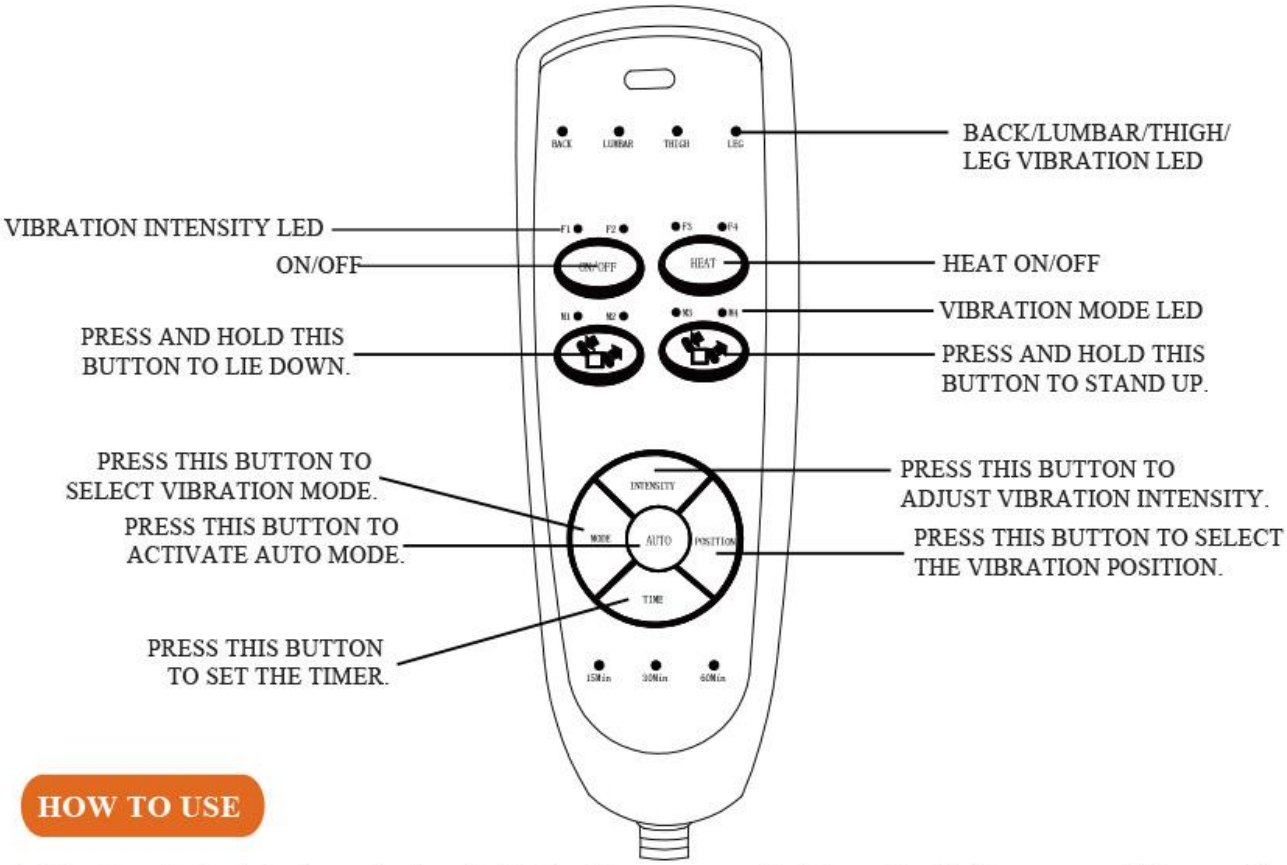

HOW TO USE

1. Plug the adapter into the socket on the back of the massage chair (see Fig.A), then connect it to a wall outlet.

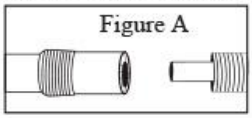

2. Press the "ON/OFF" button once to turn on the unit , and the LED indicator on the top will light up to show the power is on.

3. Press the "ON/OFF" button, and the four vibration zones will activate simultaneously. To disable the massage function, please press the button again.

4. Press the "POSITION" button, and the vibration will cycle through the following sequence: all areas vibrating together - BACK - LUMBAR - THIGH - LEG - LUMBAR & THIGH - all areas vibrating together. When each area is activated, the corresponding LED indicator will also light up.

5. To select a desired vibration mode, press the "MODE" button. To switch between modes, press the "MODE" button repeatedly until the LED for the desired mode (M1, M2, M3, or M4) lights up.

M1: Intermittent vibration at 8 points simultaneously.
M2: Vibration at the back and lumbar, followed by vibration at the thighs and calves, alternating between the two.
M3: Vibration at each of the four areas, one by one.
M4: The back, lumbar and thighs together, and calves vibrate in a continuous alternating loop, then starting again from the back.

6. To adjust the vibration intensity, press the "INTENSITY" button. The corresponding LED (F1, F2, F3, or F4) will light up to indicate the selected intensity level. The vibration intensity ranges from F1 to F4, with the strength gradually increasing. Please choose the intensity level that you find acceptable.

NOTE: Discontinue use immediately if you feel any discomfort or pain.
NOTE: For your safety, the massage chair features an auto-shut-off function. The vibration will stop automatically after the selected time: 15, 30, or 60 minutes.

7. Do not use for more than 60 minutes at a time.

8. Press the "AUTO" button, and the modes M1 to M4 will cycle once, followed by continuous vibration, then the four modes will cycle again.

IMPORTANT SAFETY INSTRUCTIONS

The following basic precautions should always be observed when using electrical appliances:

1. This product is for use on a 29V circuit. Make sure to connect the product to an outlet with the same plug configuration.
2. Always unplug the massager after use and before cleaning.
3. If the massager falls into water, do not reach for it. Please unplug it immediately.
4. Do not leave the appliance unattended when it is plugged in. When not in use, unplug it from the outlet before installing or removing parts or accessories.
5. Do not use it outdoors.
6. Do not carry the supplied cord as a handle with the device.
7. Keep the cord away from heated surfaces.
8. Close supervision is required when using this equipment near children or disabled people.
9. Do not operate where aerosol (spray) products are used or oxygen is inhaled in case of danger.
10. To disconnect, press the "ON/OFF" button on the Massage and Heating Remote Control. After ensuring all functions have stopped, unplug the massage chair.
11. When using the chair, keep the cord away from heat-generating surfaces.
12. Use this equipment for the purposes described in this manual. Do not use accessories not supplied with this equipment.

HEALTH CAUTION

- If you have any concerns regarding your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you experience pain in a muscle or joint for a prolonged period, discontinue use and consultyour doctor. Persistent pain could be a symptom of a more serious condition.

MAINTENANCE INSTRUCTIONS

TO STORE:

Place the unit in its box or in a safe, dry, and cool place. Avoid contact with sharp edges or pointed objects that might cut or puncture the fabric. Do not wrap the power cord around the unit.

TO CLEAN:

- To clean the unit, make sure the massager is unplugged. Allow the unit to cool, then wipe it down with a damp, clean cloth. Do not use any strong chemical cleaners.
- Do not submerge the unit in any liquid.
  detergent or suds. Clean with a dry cloth.
- Do not use abrasive cleaners, brushes, gasoline, kerosene, or glass /furniture polish.
  waterhotter than 212℉ to clean the unit.