

Assembly Instruction


Description : Chest of Drawer

Product Name : 6-Drawer Tallboy*Black&Chestnut


Product Id: 806-007

Hardware List

A		Short Cabinet Screw (M8.5 x 20MM)	1 pc
B		Long Cabinet Screw (M8 x 52MM)	1 pc
C		Nylon Restraint Strap	1 pc
D		Mounting Brackets	2 pcs

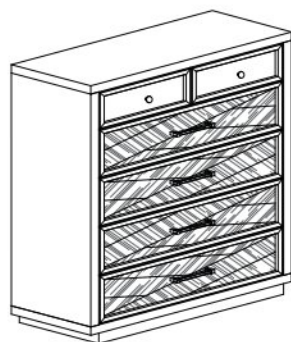


Part List

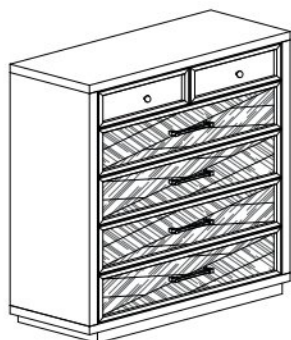

Note


1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packing materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care assembly to prevent injuries.

- 1** Attach (D) Mounting Bracket to the back top rail of the Chest of Drawer using the (A) Short Cabinet Screw (M8.5 x 20MM) provided through the smaller hole.

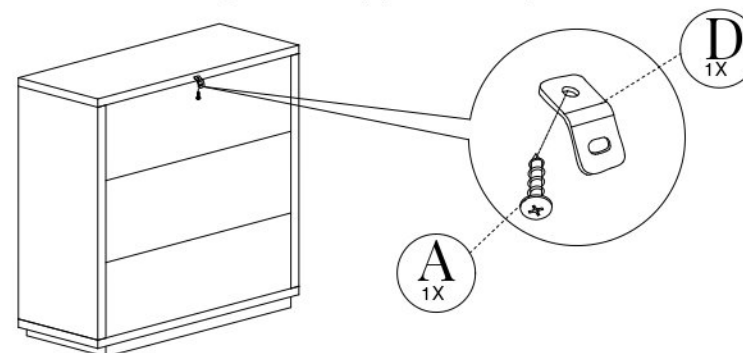

Locate the other bracket on the wall over a wall stud and 2 inches below the (D) mounting bracket secured to the back of your unit. Attach to the wall stud using the (B) Long Cabinet Screw (M8 x 52MM) through the smaller hole.

2

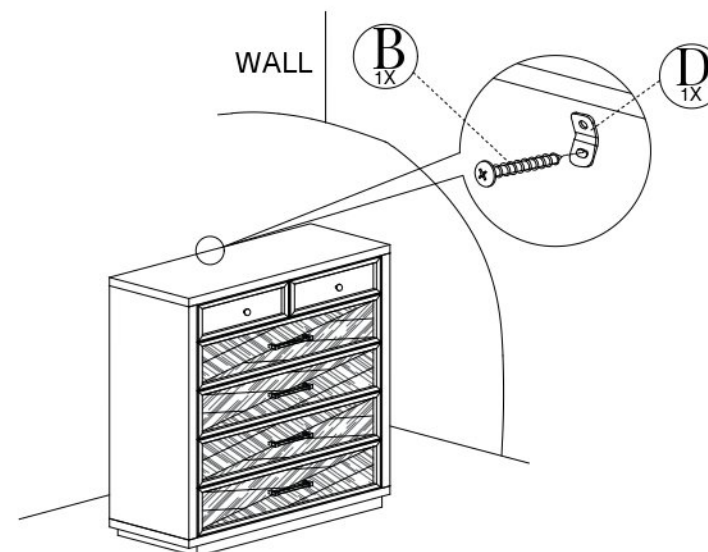

3

Lace the end of (C) Restraint Strap through the hole in each mounting bracket. Bring both ends together, slide the flat end through the locking end draw it through until all slack is remove. Confirm that the strap is securely laced and locked.

