


Assembly Instructions

816 - 008/816 - 009



1/4

Part in Box

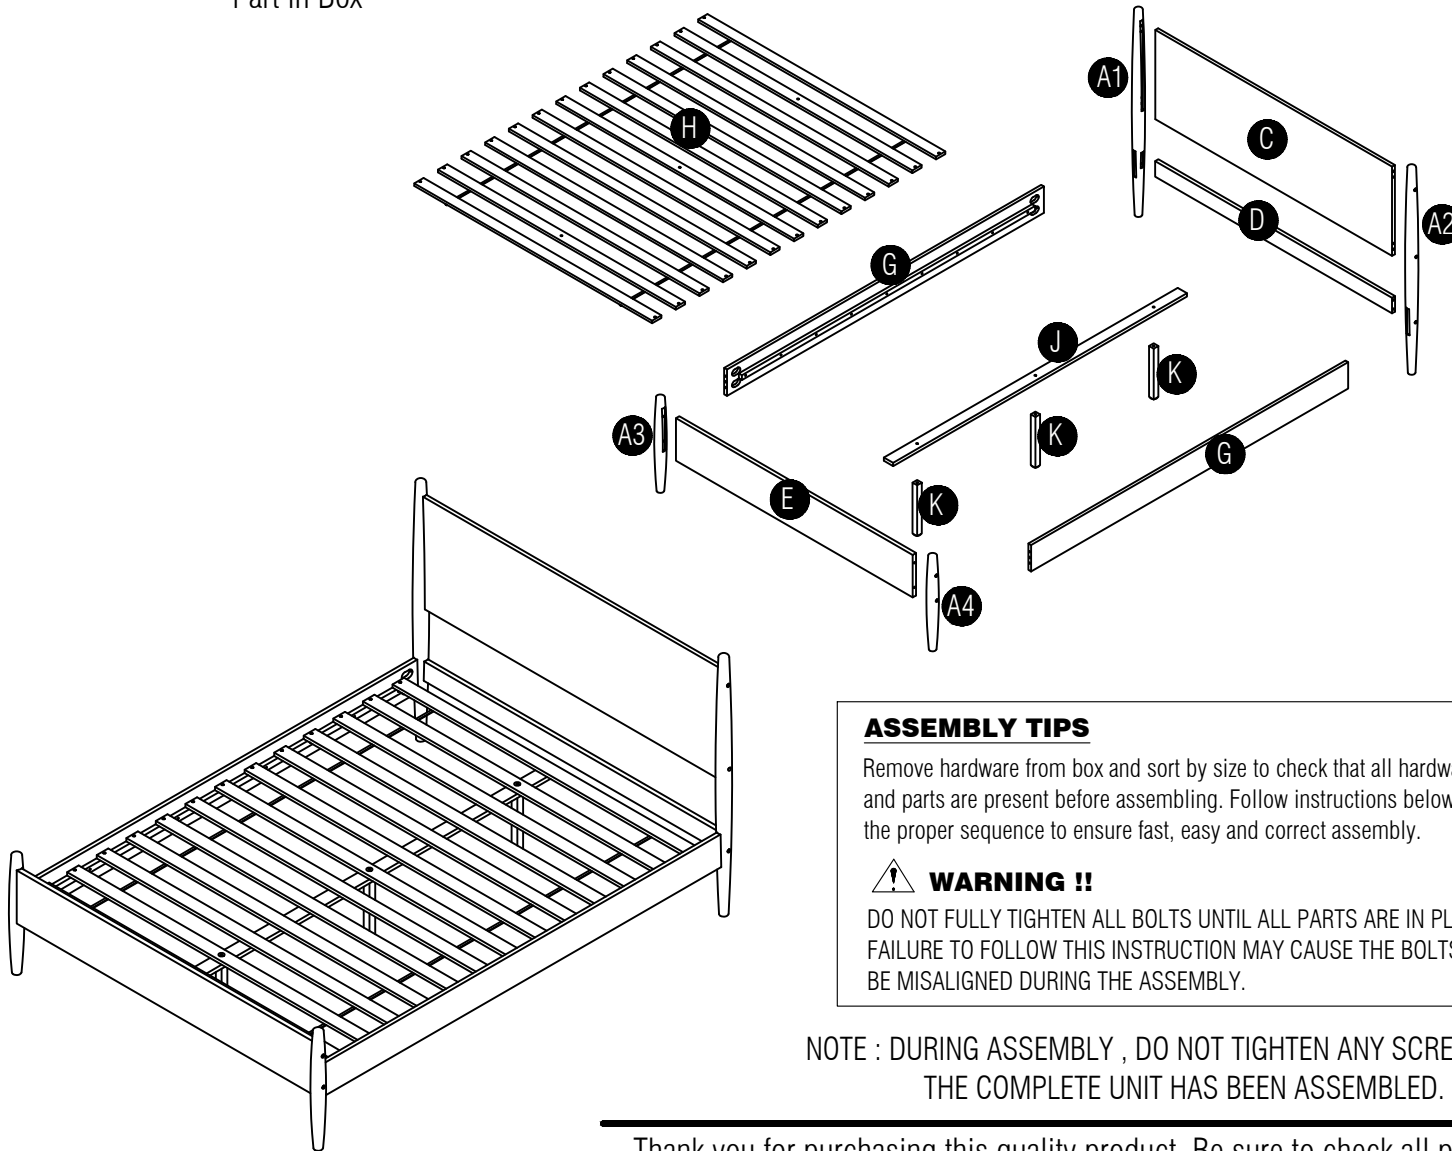

NOTE : DURING ASSEMBLY , DO NOT TIGHTEN ANY SCREWS UNTIL THE COMPLETE UNIT HAS BEEN ASSEMBLED.

Hardware List

1.	JCBC M6 x 90mm		x 10
2.	M6 x 15mm Barrel Nut		x 10
3.	Wood Dowel M10 x 30mm		x 14
4.	JCBC M6 x 60mm		x 8
5.	M6 Half Moon Nut		x 8
6.	M6 Flat Washer		x 8
7.	Split Lock Washer		x 8
8.	Adjustable Screw		x 3
9.	Csk Screw M4 x 25mm		x 26
10.	Wooden Button 14.5mm		x 10
11.	M8 Flat Washer		x 3
12.	JCBB M8 x 80mm		x 3
13.	M4 Allen Key		x 1
14.	M5 Allen Key		x 1

Tool required for assembly :

- * Allen Key (supplied)
- * Phillips Screwdriver
(not supplied)

Thank you for purchasing this quality product. Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment. Place all parts on a clean , smooth surface such as a rug or carpet to avoid scratching the parts. Be sure you have all the parts and hardware before you begin assembly.

Assembly Instructions


816 - 008/816 - 009

2/4

1

Assemble the Hb. Panel (C) & Support Bar (D) to Bed Post (A1,A2).


1.	JCBC M6 x 90mm		x 6
2.	M6 x 15mm Barrel Nut		x 6
3.	Wood Dowel M10 x 30mm		x 6

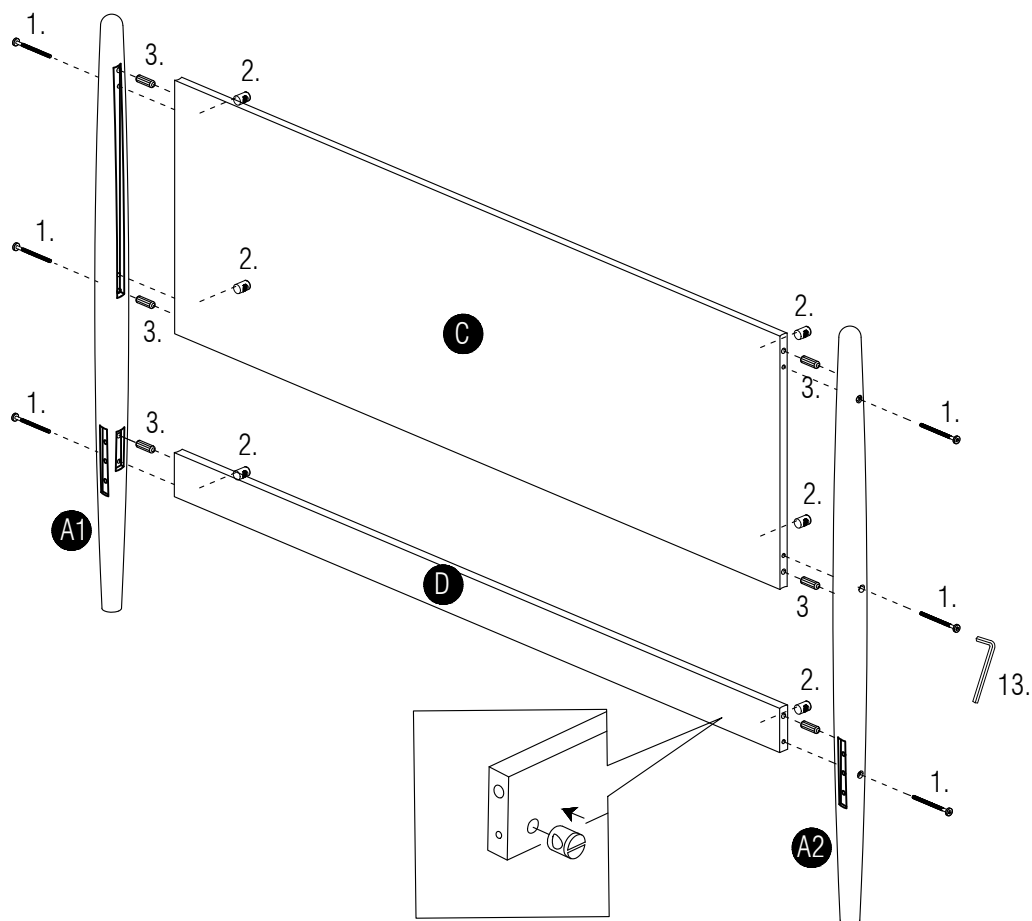

2

Assemble the Footboard Panel (E) to Bed Post (A3&A4).

1.	JCBC M6 x 90mm		x 4
2.	M6 x 15mm Barrel Nut		x 4
3.	Wood Dowel M10 x 30mm		x 4

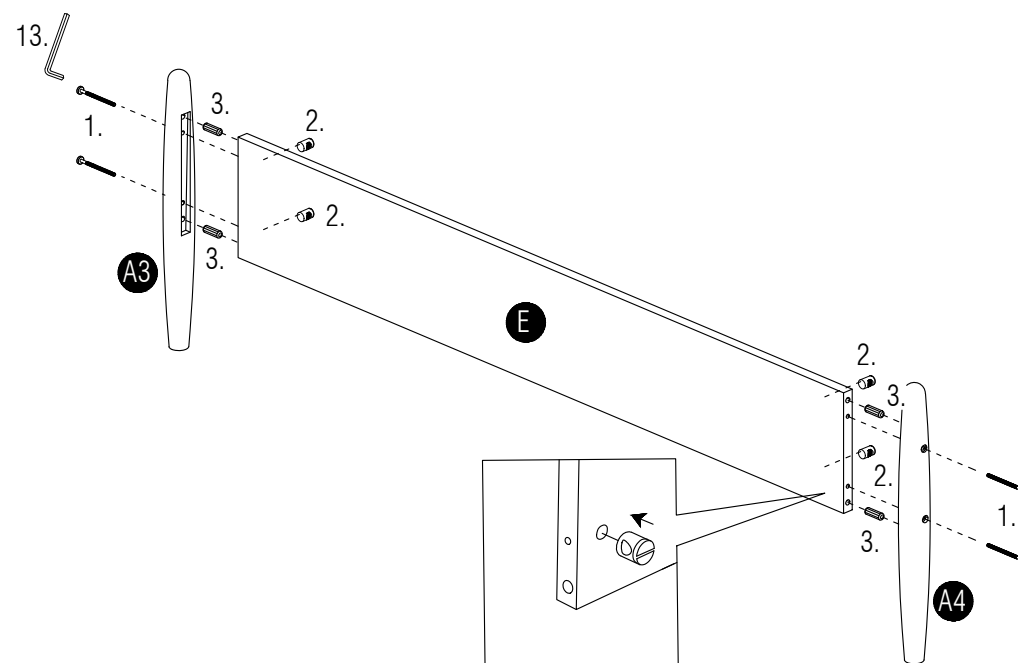

Assembly Instructions


816 - 008/816 - 009

3/4

3

Attach the Side Rails (G) to the Headboard and Footboard.

3.	Wood Dowel M10 x 40mm		x 4
4.	JCBC M6 x 60mm		x 8
5.	M6 Half Moon Nut		x 8
6.	M6 Flat Washer		x 8
7.	Split Lock Washer		x 8

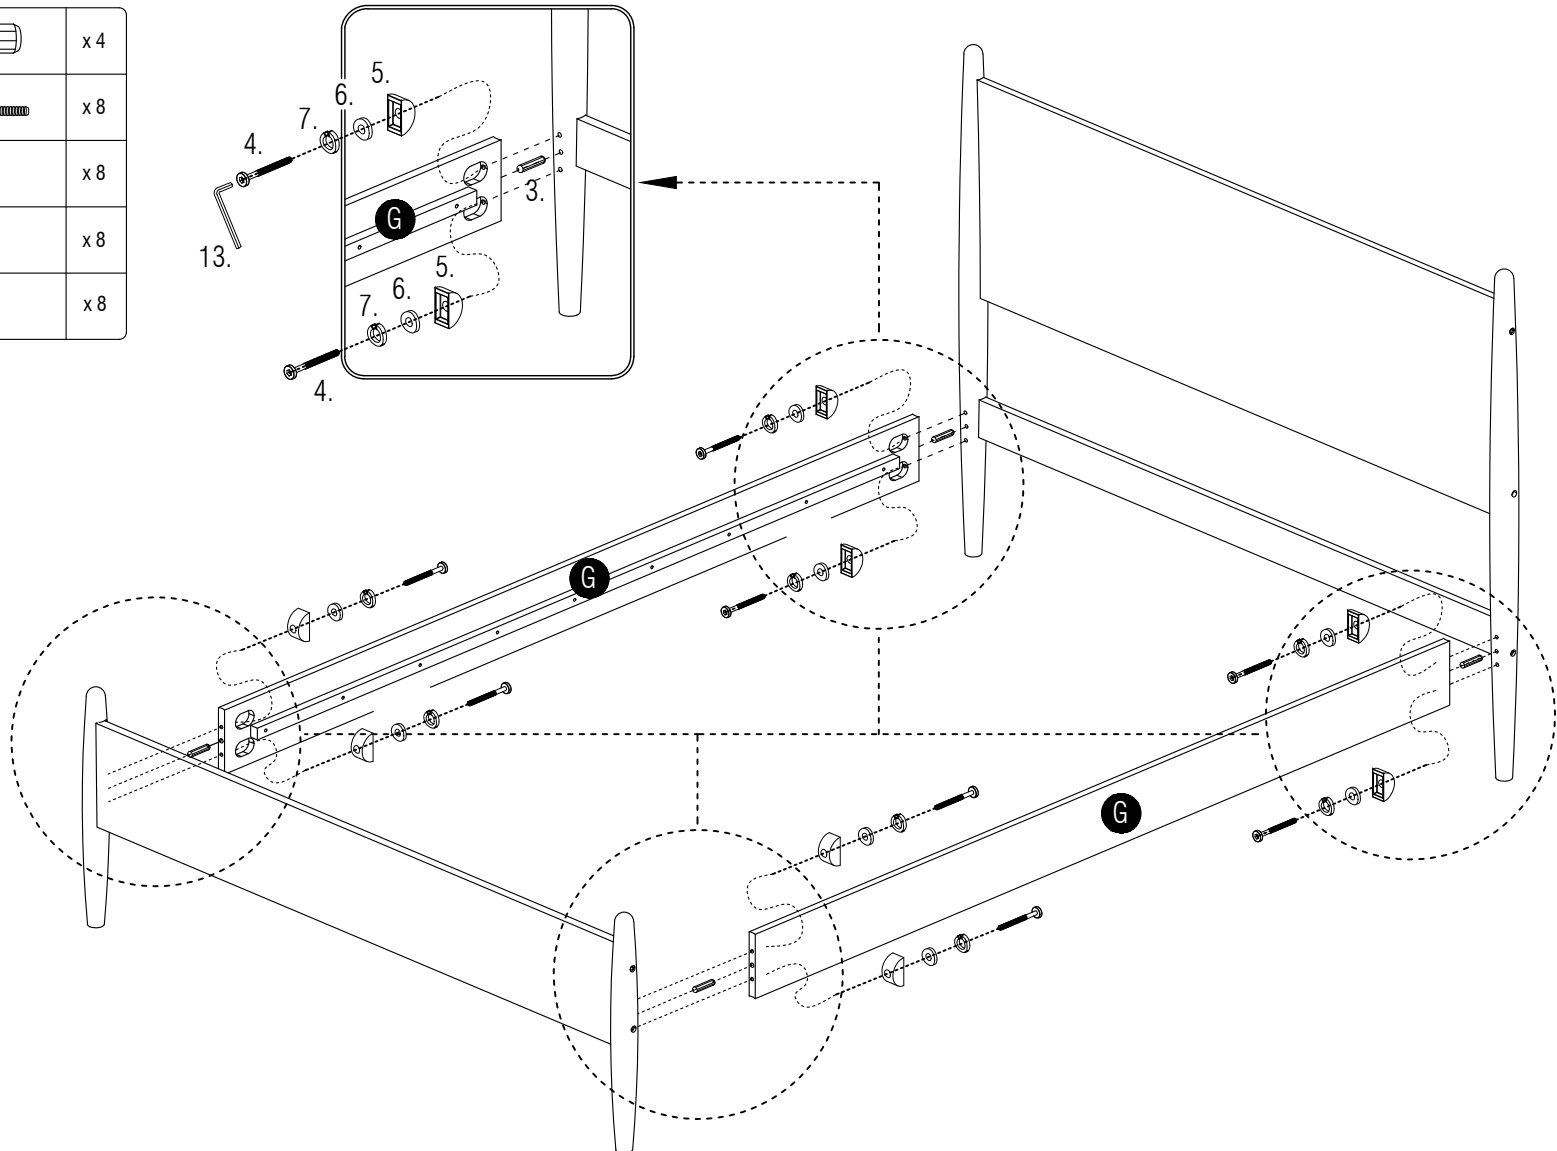

Assembly Instructions

816 - 008/816 - 009


4/4

4



Lock the Support Legs (K) on Slats (H) & Center Rail (J).
Please Note that the Support Legs (K) have the Adjuster
at the Bottom. Unscrew to Adjust if necessary.
Assemble the Slats (H) in the Place.
Fit the Wood Buttons into the holes.

8.	Adjustable Screw		x 3
9.	Csk Screw M4 x 25mm		x 26
11.	M8 Flat Washer		x 3
12.	JCBB M8 x 80mm		x 3

1.

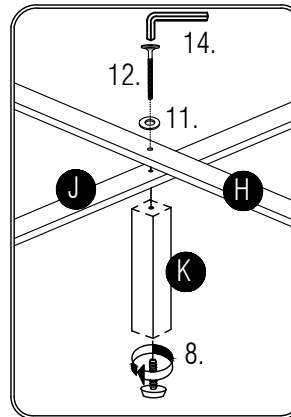

2.

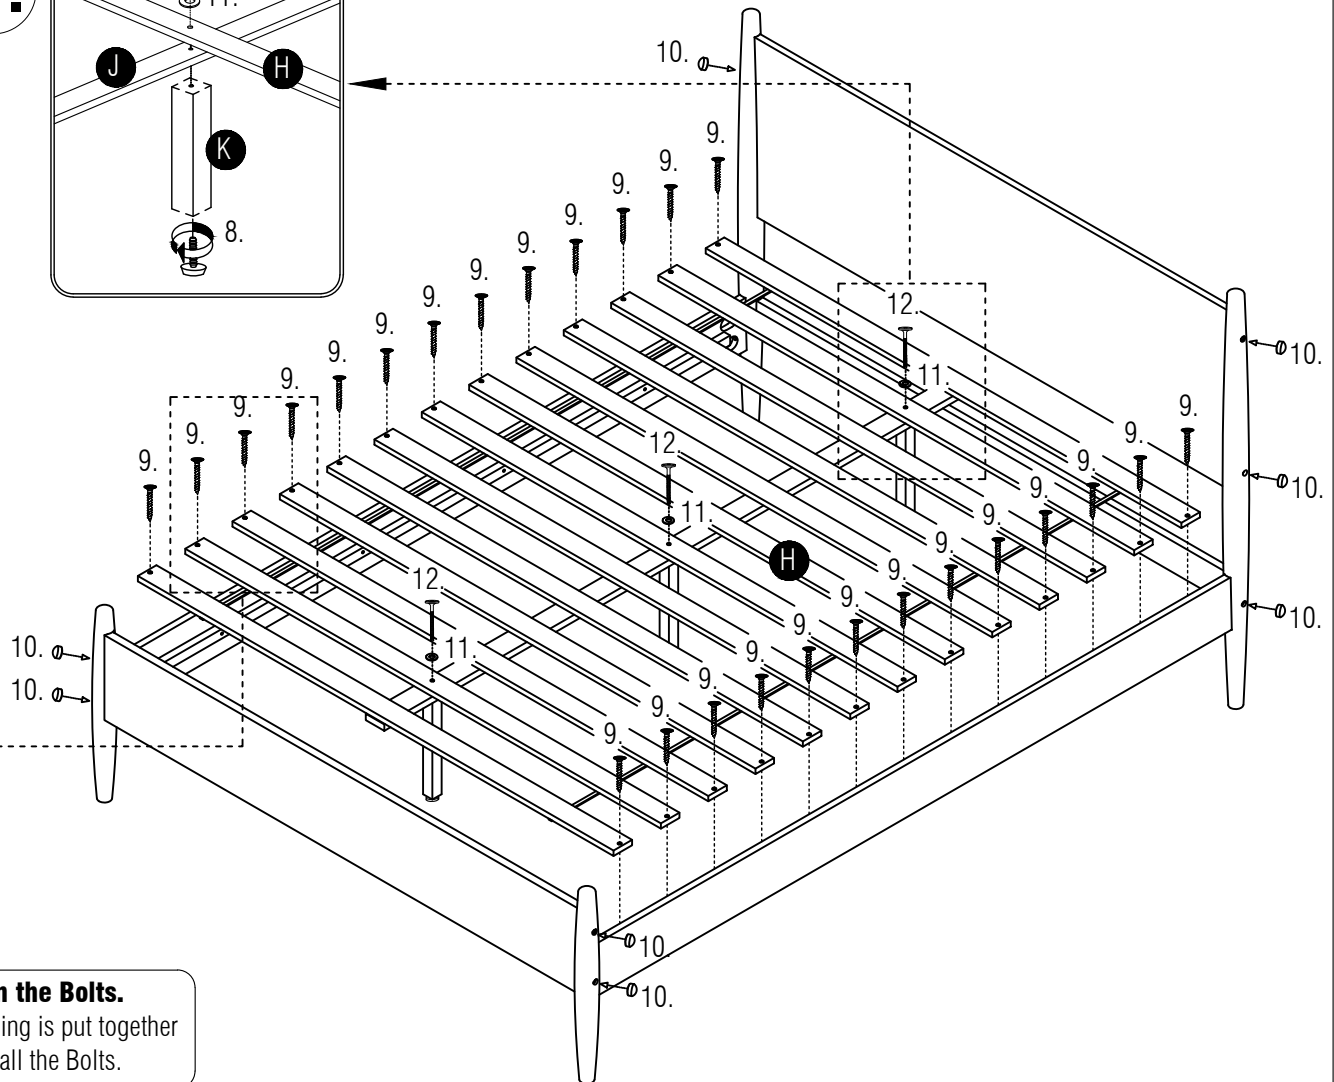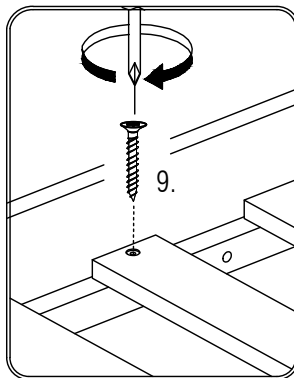

Tighten the Bolts.

When everything is put together
tighten all the Bolts.