

Assembly Instructions

816 - 011

1/5

WARNING :

TOP BUNKS AND ELEVATED BEDS ARE DANGEROUS AND ARE NOT RECOMMENDED FOR CHILDREN UNDER THE AGE OF 9

Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. This is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is :

10 x greater for 7-8 year olds



7 x greater for 9-10 year olds

3 x greater for 11-12 year olds

TO HELP PREVENT serious or fatal injuries from entrapment of falls :

- Use the correct size mattress as specified.
- It must be at least 6.25" (160mm) below upper edge of guardrails.
- Follow written instructions with this bed.
- Use guardrails on both sides of upper bunk.
- Prohibits horseplay on or under bed.
- Check the bunk bed periodically to ensure that the guardrail, access device and other components are maintained in the correct position and state of repair and that all connectors are tight.
- Prohibit more than one person on upper bunk.

WARNING: The upper bunk must be more than 2 m from any ceiling fan.

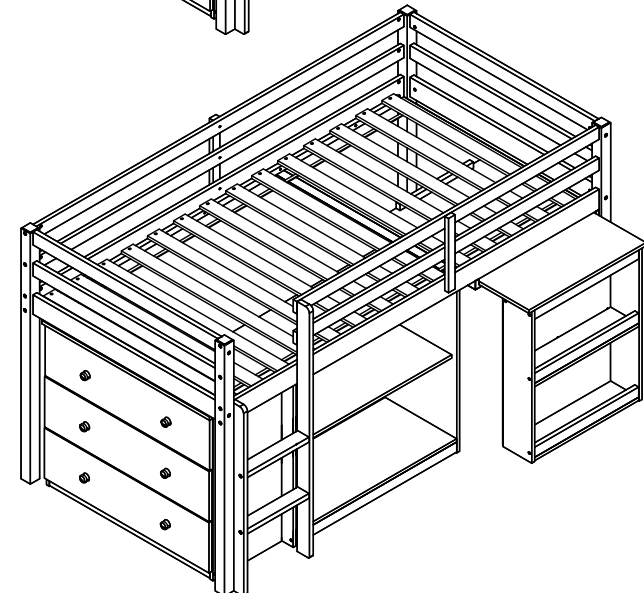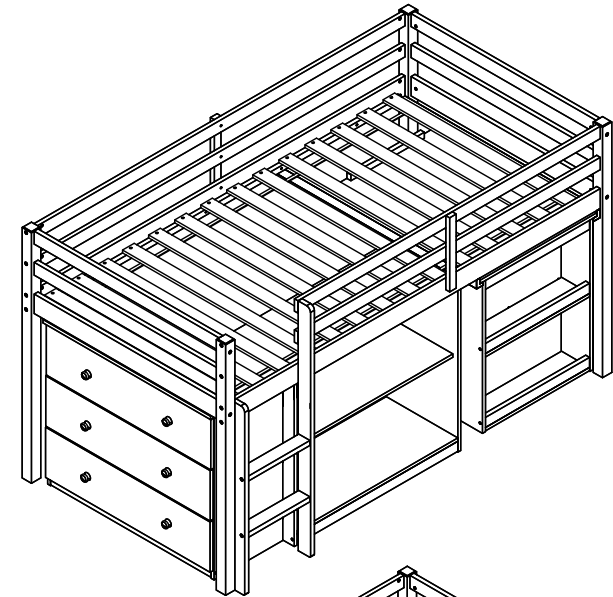


Assembly Instructions


816 - 011

2/5

Part in Box

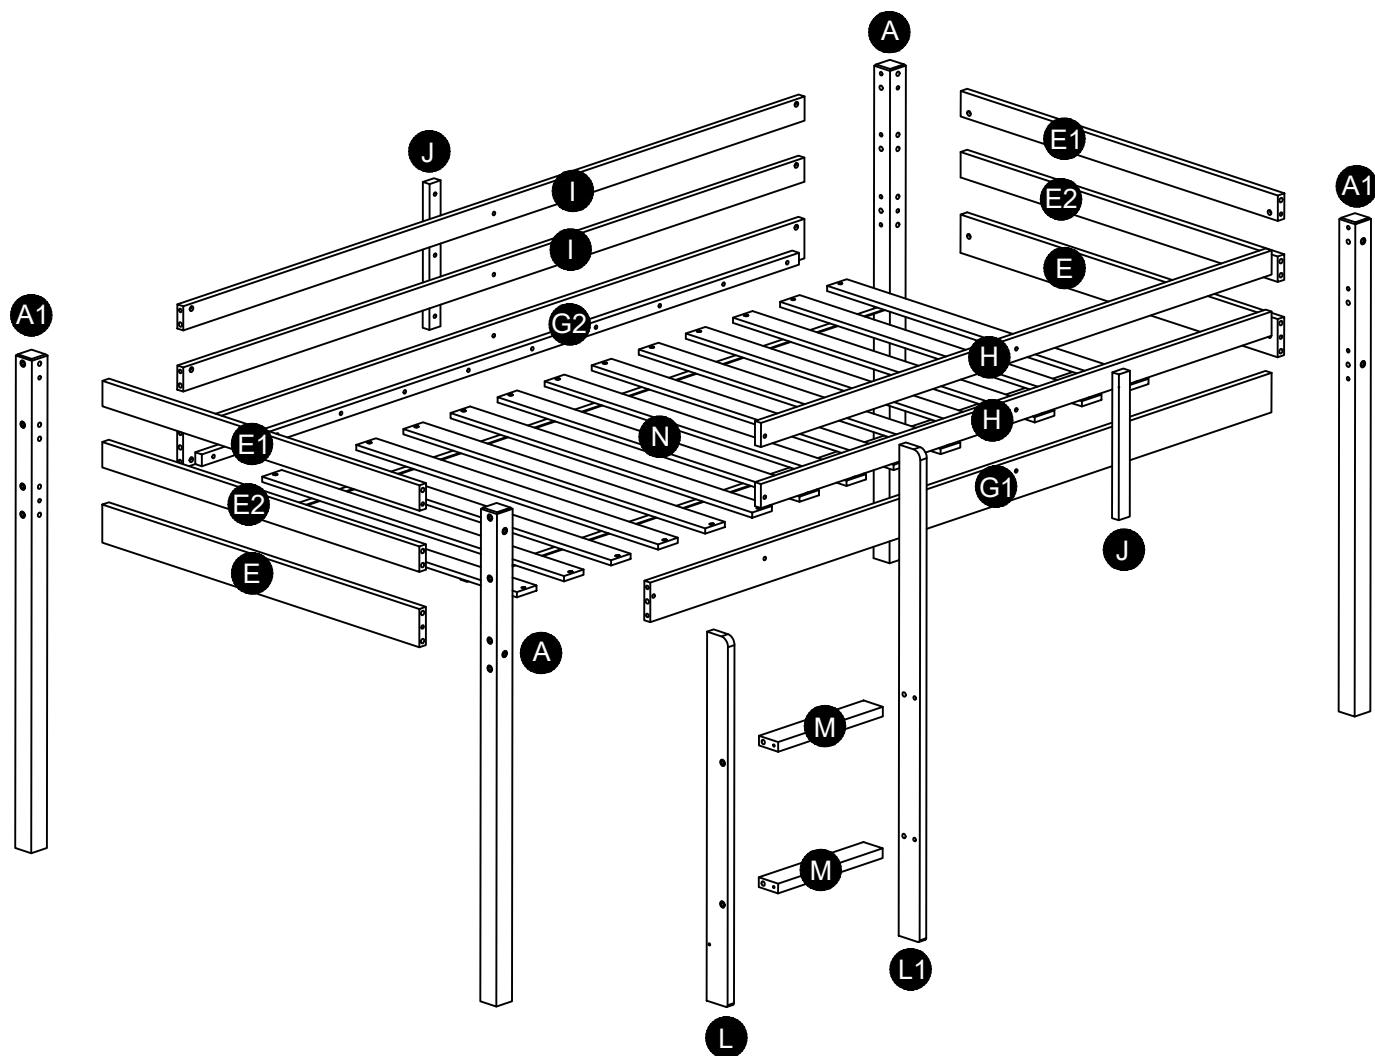

HARDWARE LIST

1.	JCBC M6 x 90mm		x 22
2.	JCBC-W M6 x 50mm		x 8
3.	M6 x 15mm Barrel Nut		x 22
4.	Wood Dowel M10 x 30mm		x 34
5.	Csk Screw M4 x 38mm		x 1
6.	Csk Screw M4 x 25mm		x 24
7.	JCBC M6 x 30mm		x 6
8.	JCBC-W M6 x 30mm		x 4
9.	Sticker Cap		x 6
10.	M4 Allen Key		x 1

Tool required for assembly :


- * Allen Key (supplied)
- * Phillips Screwdriver
(not supplied)


Assembly Instructions

816 - 011

3/5


1 Assemble the Upper Bunk End Frames.

1.	JCBC M6 x 90mm		x 8
3.	M6 x 15mm Barrel Nut		x 8
4.	Wood Dowel M10 x 30mm		x 20

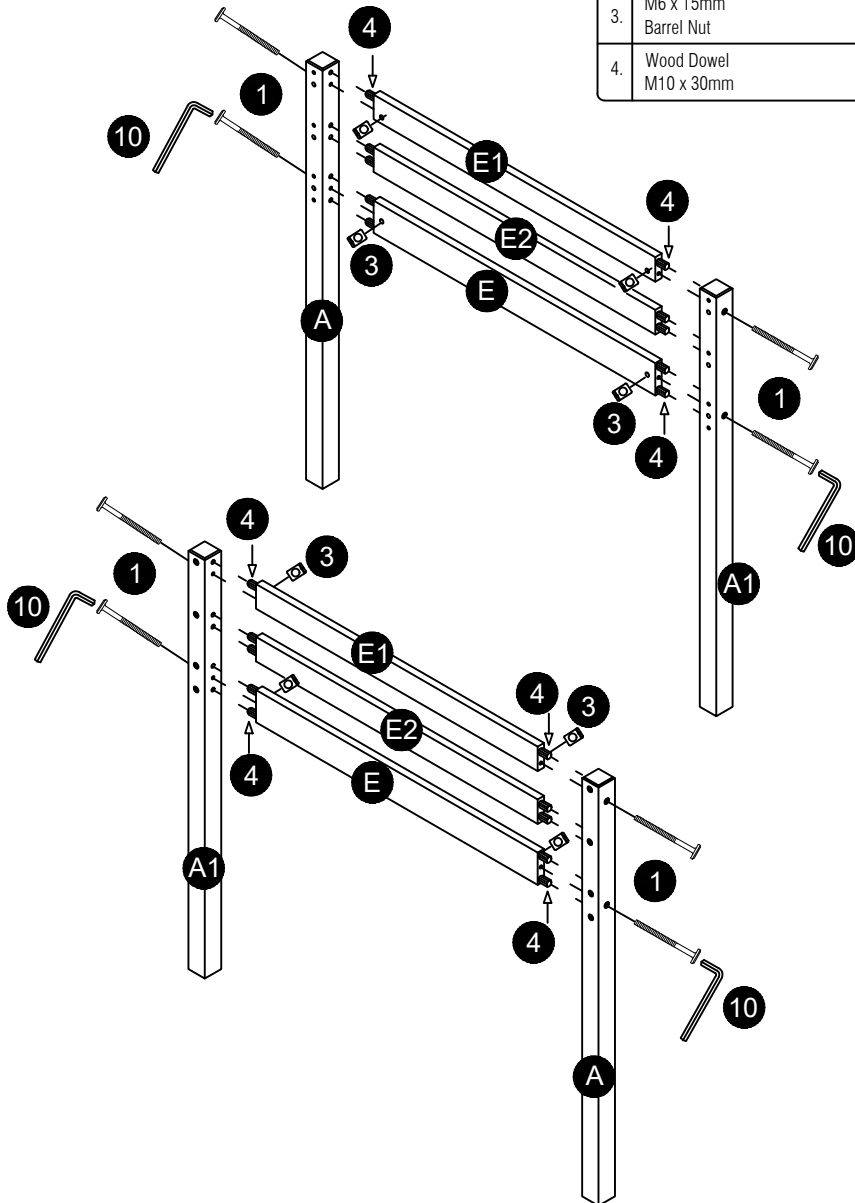

2 Assemble the Upper Bunk End Frames with the Side Rails (G1&G2), Back Guard Rail (I) and Guardrail Spindle (J).

1.	JCBC M6 x 90mm		x 12
3.	M6 x 15mm Barrel Nut		x 12
4.	Wood Dowel M10 x 30mm		x 8
7.	JCBC M6 x 30mm		x 4

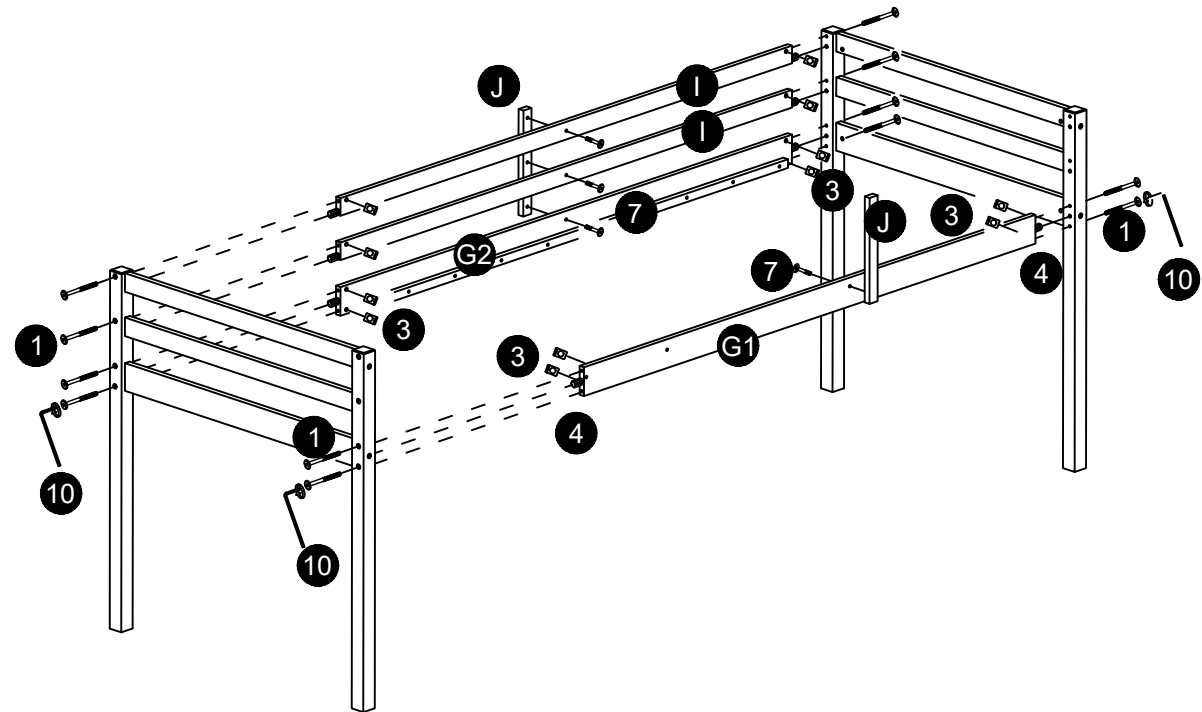


Assembly Instructions


816 - 011

4/5

3


Assemble the Upper Front Guard Rail (H) and Guardrail Spindle (J).


1.	JCBC M6 x 90mm		x 2
3.	M6 x 15mm Barrel Nut		x 2
4.	Wood Dowel M10 x 30mm		x 2
7.	JCBC M6 x 30mm		x 2

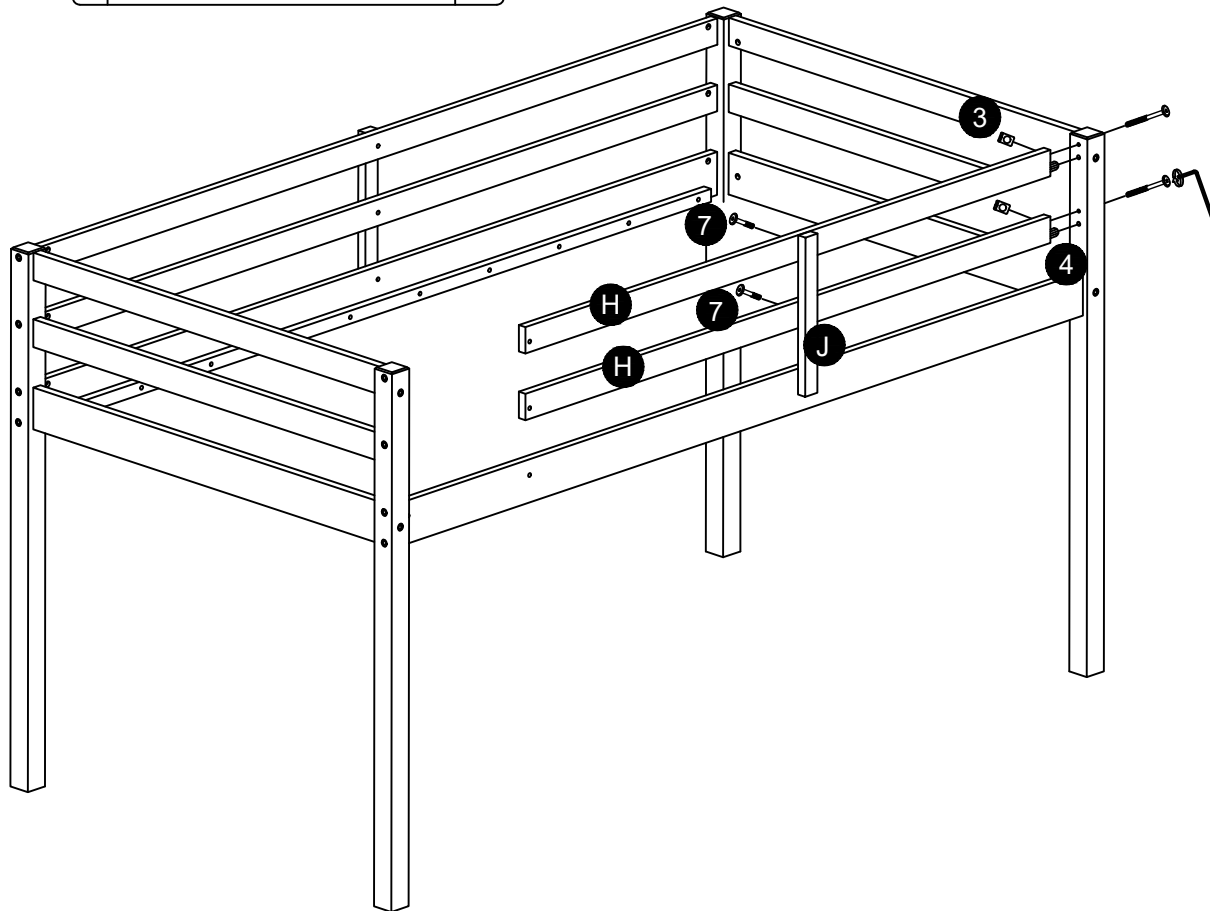

4

Assemble the Ladder (L, L1 & M).

2.	JCBC-W M6 x 50mm		x 4
4.	Wood Dowel M10 x 30mm		x 4

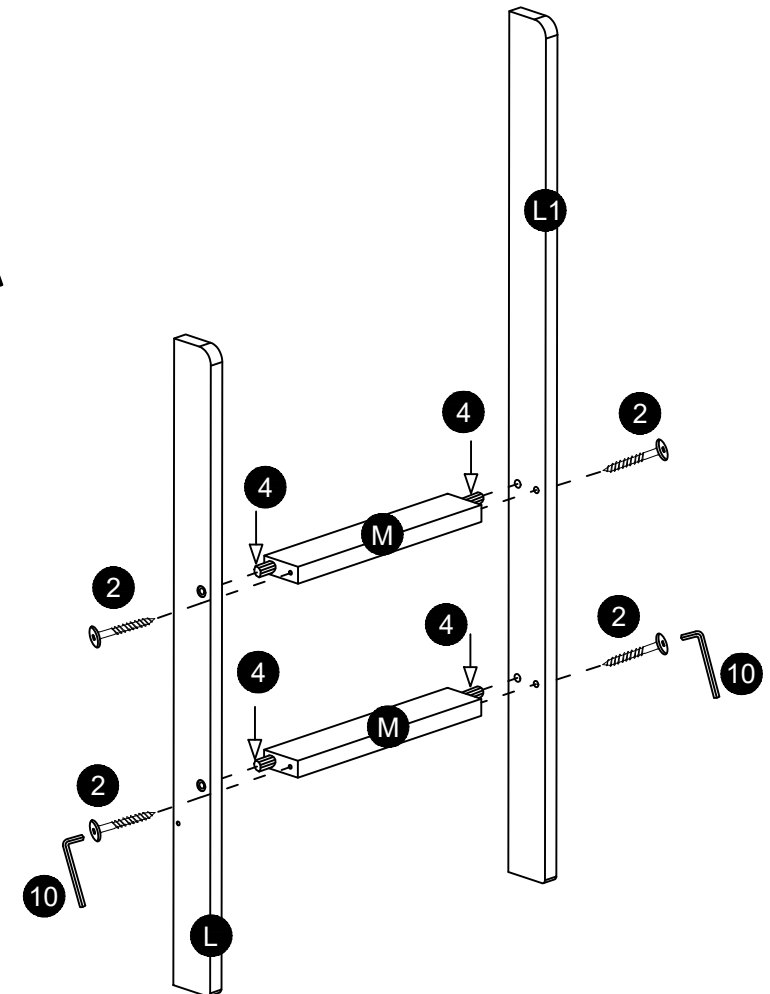



Assembly Instructions


816 - 011

5/5

5

Attach the Ladder.


2.	JCBC-W M6 x 50mm		x 4
6.	Csk Screw M4 x 38mm		x 1

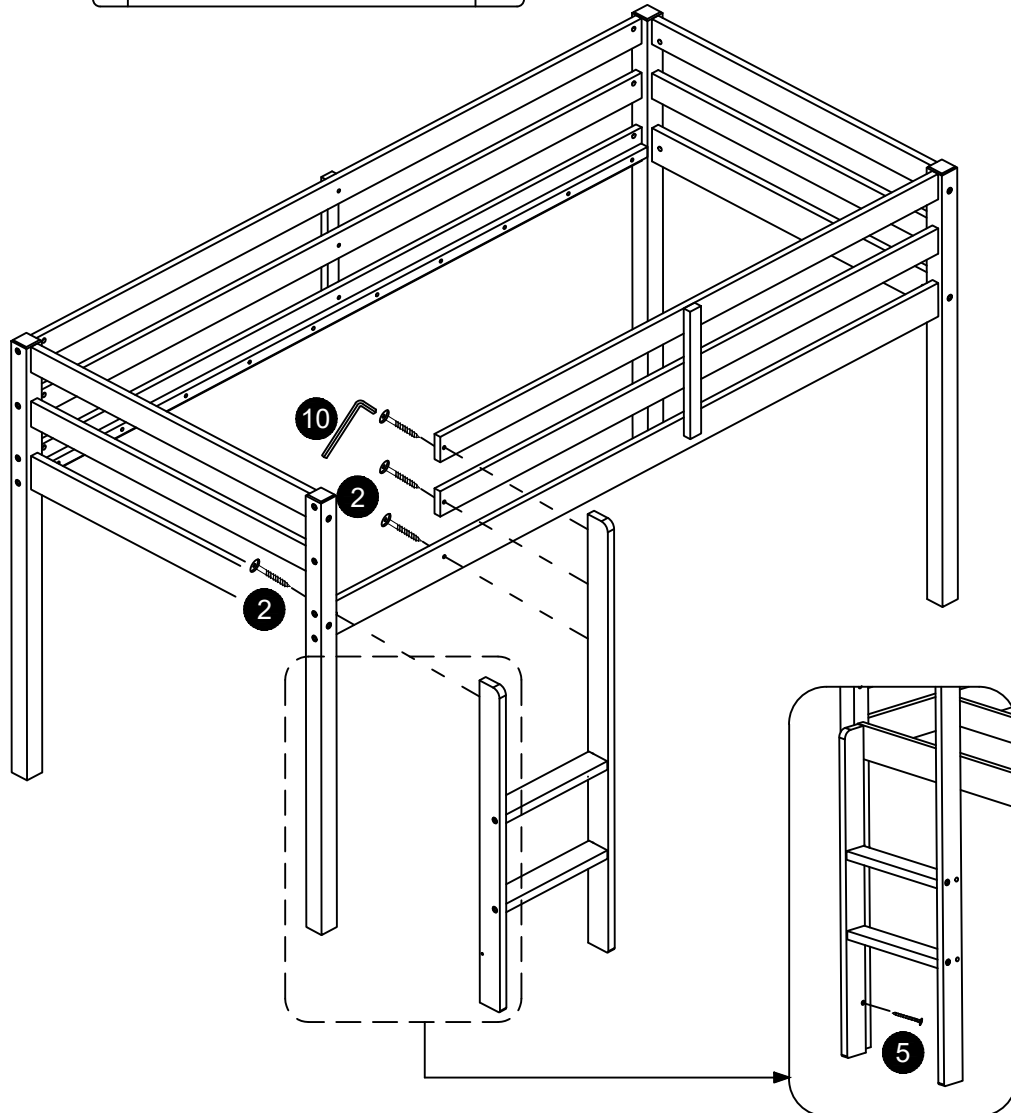

6

Put the Sticker Cap.

9.	Sticker Cap		x 6
----	-------------	---	-----

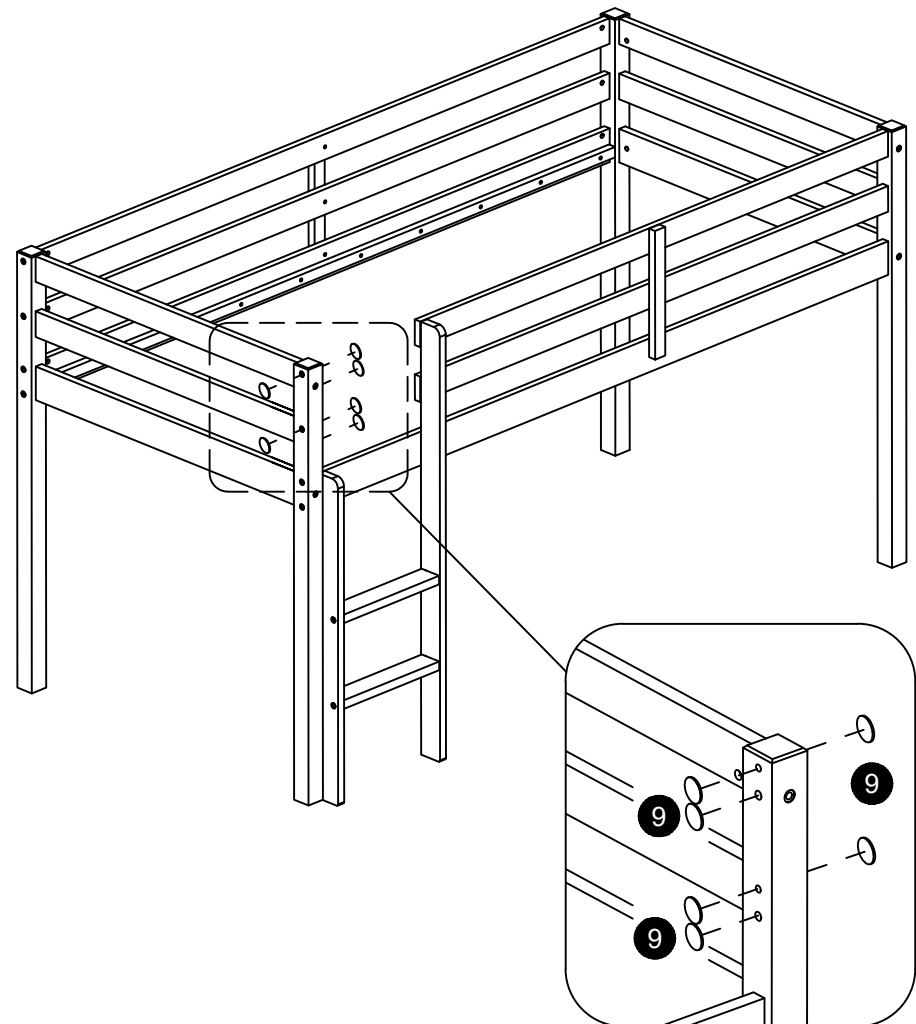

Assembly Instructions

816 - 011

1/8

WARNING :

TOP BUNKS AND ELEVATED BEDS ARE DANGEROUS AND ARE NOT RECOMMENDED FOR CHILDREN UNDER THE AGE OF 9

Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. This is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is :

10 x greater for 7-8 year olds



7 x greater for 9-10 year olds

3 x greater for 11-12 year olds

TO HELP PREVENT serious or fatal injuries from entrapment of falls :

- Use the correct size mattress as specified.
- It must be at least 6.25" (160mm) below upper edge of guardrails.
- Follow written instructions with this bed.
- Use guardrails on both sides of upper bunk.
- Prohibits horseplay on or under bed.
- Check the bunk bed periodically to ensure that the guardrail, access device and other components are maintained in the correct position and state of repair and that all connectors are tight.
- Prohibit more than one person on upper bunk.

WARNING: The upper bunk must be more than 2 m from any ceiling fan.

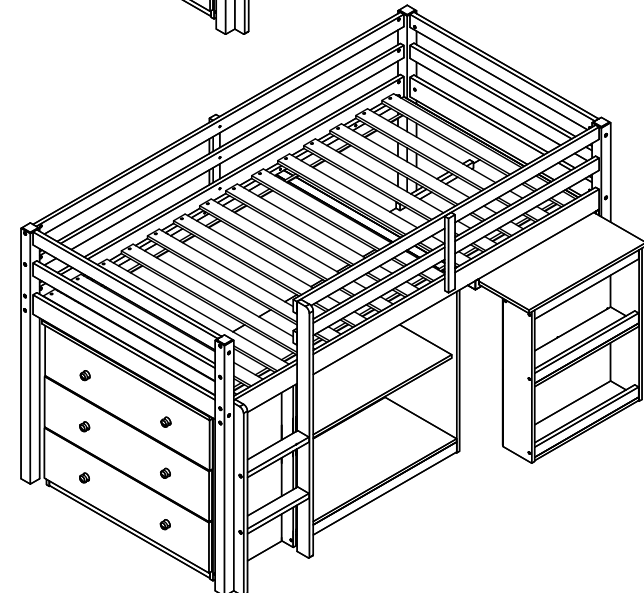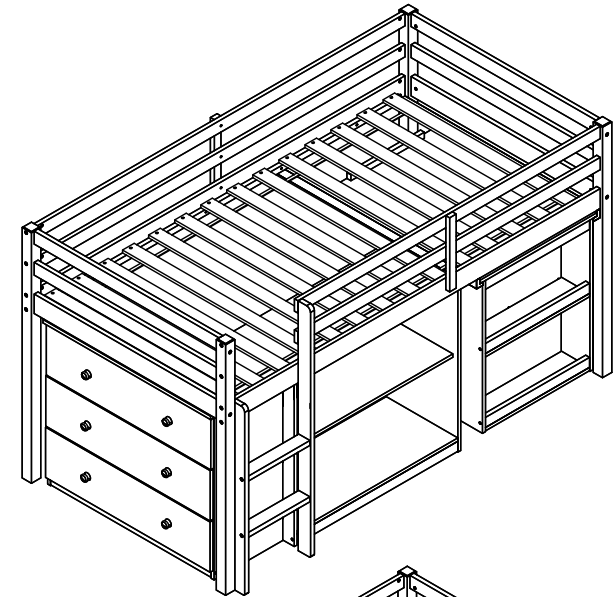


Assembly Instructions


816 - 011

2/8

Part in Box

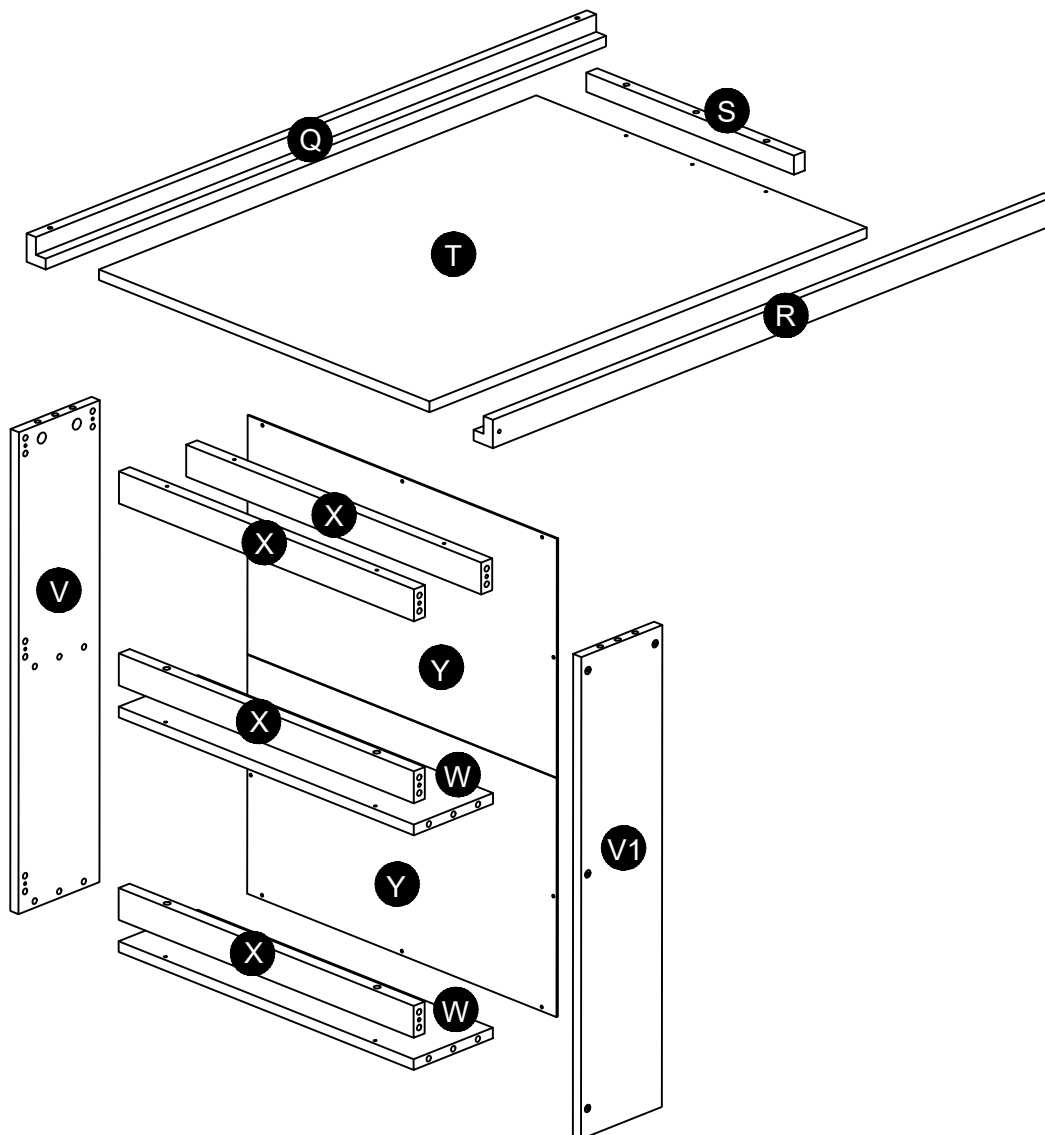

HARDWARE LIST

1.	Wood Dowel M8 x 30mm		x 22
2.	Csk Screw M4 x 32mm		x 19
3.	Connecting Bolt		x 12
4.	Minifix Housing		x 12
5.	Back Panel Metal Plate		x 3
6.	Csk Screw M4 x 38mm		x 4
7.	Pan Head Screw M3.5 x 16mm		x 21
8.	Caster		x 2
9.	Sticker Cap		x 8

Tool required for assembly :

- * Allen Key (supplied)
- * Phillips Screwdriver
(not supplied)


Assembly Instructions

816 - 011


3/8


1 Insert the Wood Dowel into the both end of Top Support Rail (X).

1.	Wood Dowel M8 x 30mm		x 16
----	-------------------------	---	------

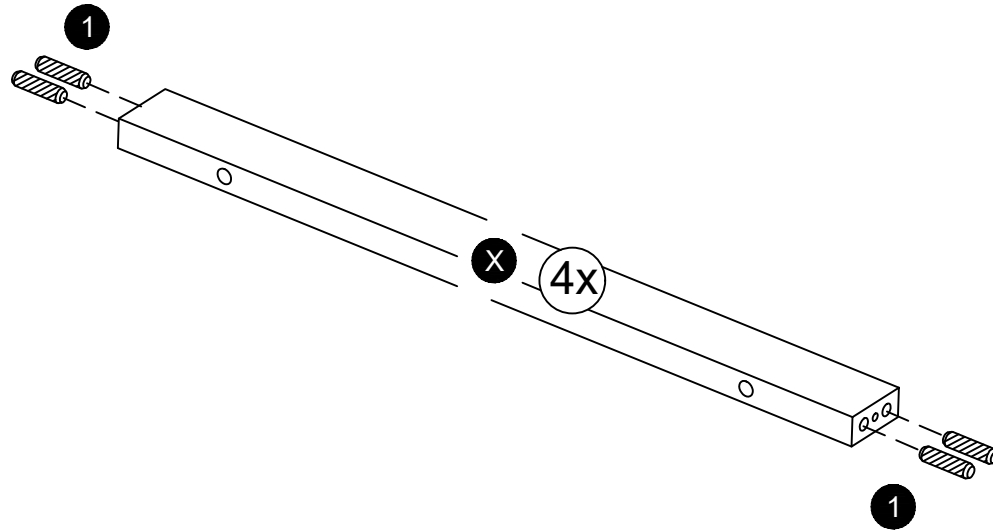

2 Insert the Wood Dowel and Connecting Bolt into the both Side Panel (V&V1) and Shelf & Bottom Panel (W).

1.	Wood Dowel M8 x 30mm		x 4
3.	Connecting Bolt		x 8

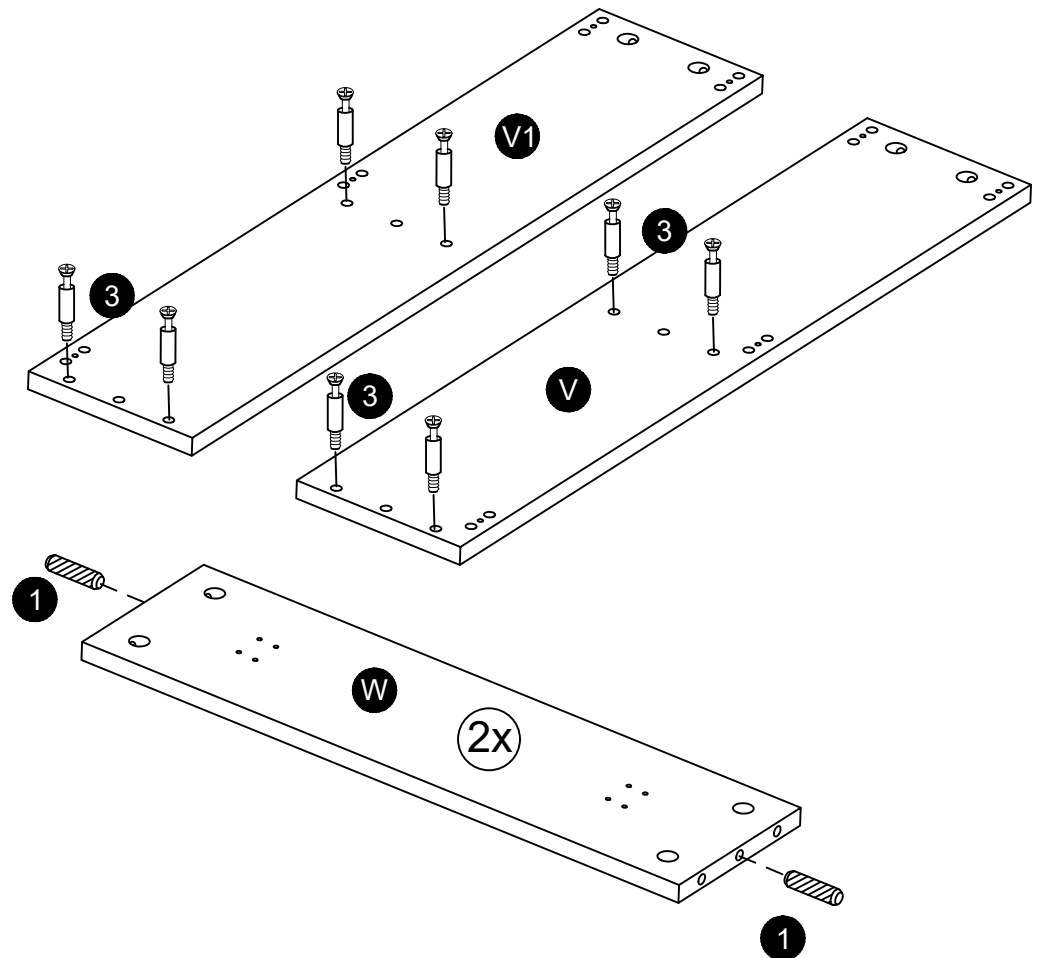

Assembly Instructions


816 - 011

4/8

3

Attach the Caster to the Bottom Panel (C).


7.	Pan Head Screw M3.5 x 16mm		x 8
8.	Caster		x 2

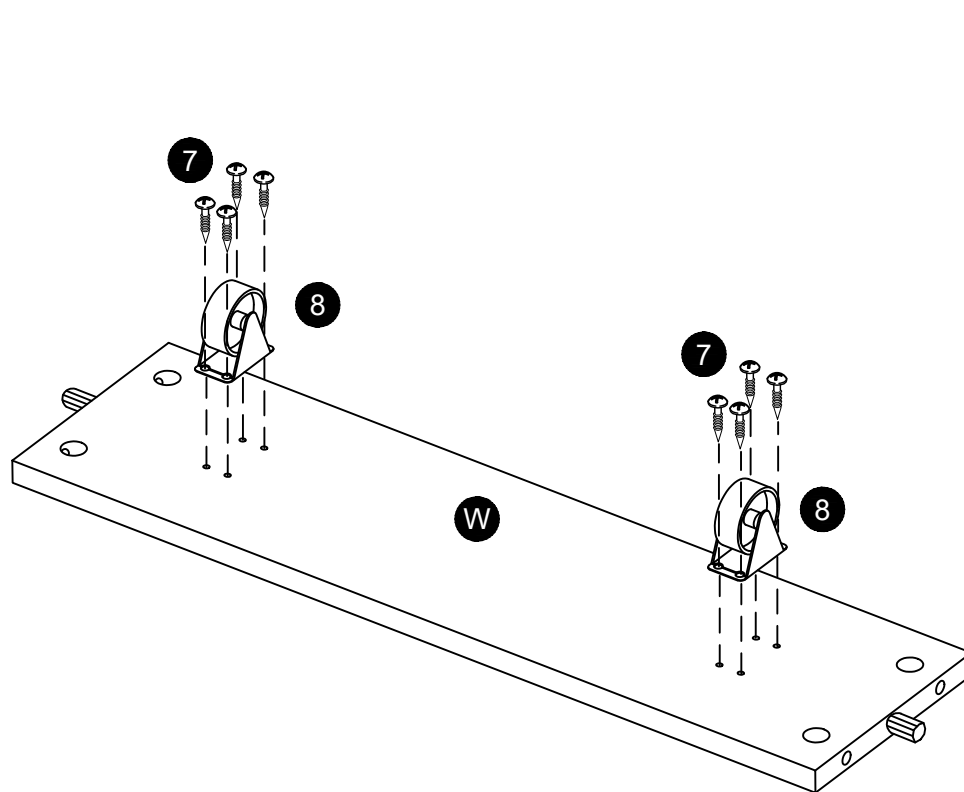

4

Attach the Shelf & Bottom Panel (C), Top Support Panel (E) to the Side Panel (F&G).

4.	Minifix Housing		x 8
----	-----------------	---	-----


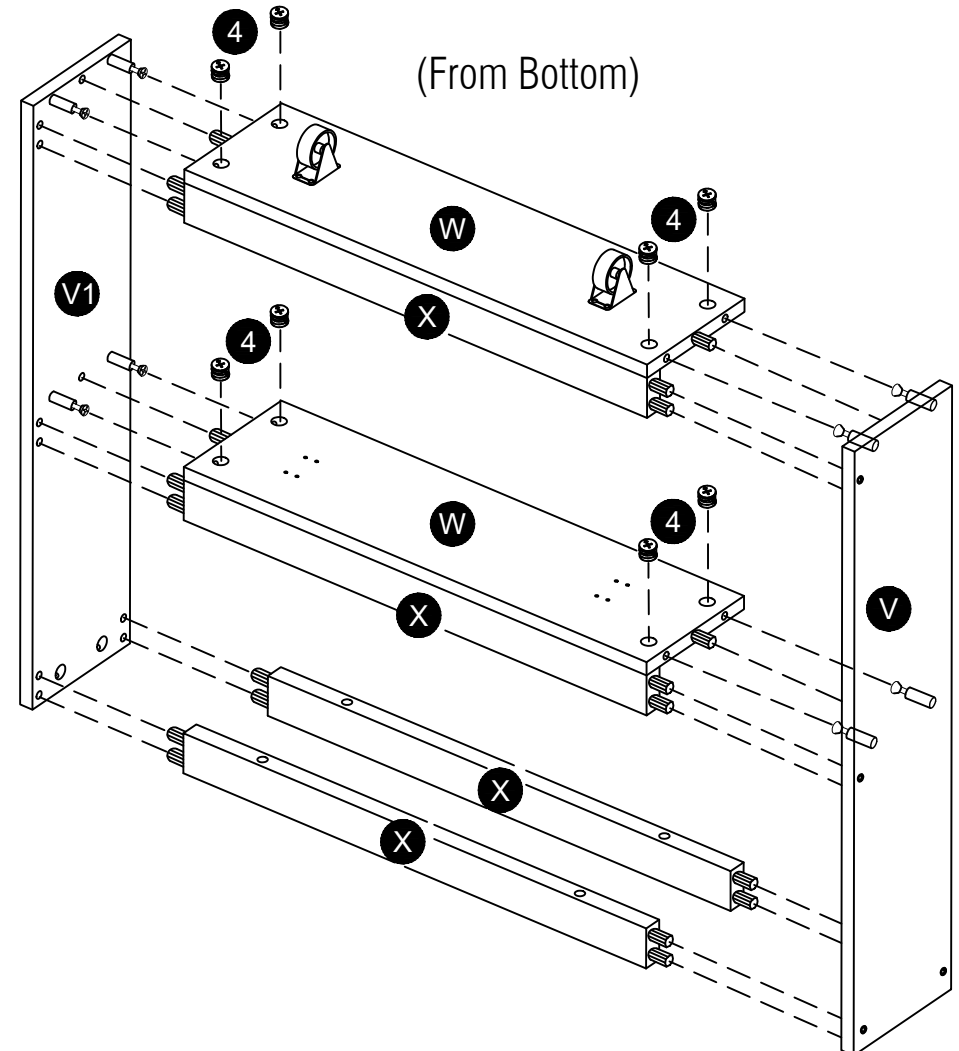



Assembly Instructions

816 - 011


5/8


5 Screw the Side Panel.

1.	Wood Dowel M8 x 30mm		x 2
2.	Csk Screw M4 x 32mm		x 12
9.	Sticker Cap		x 8

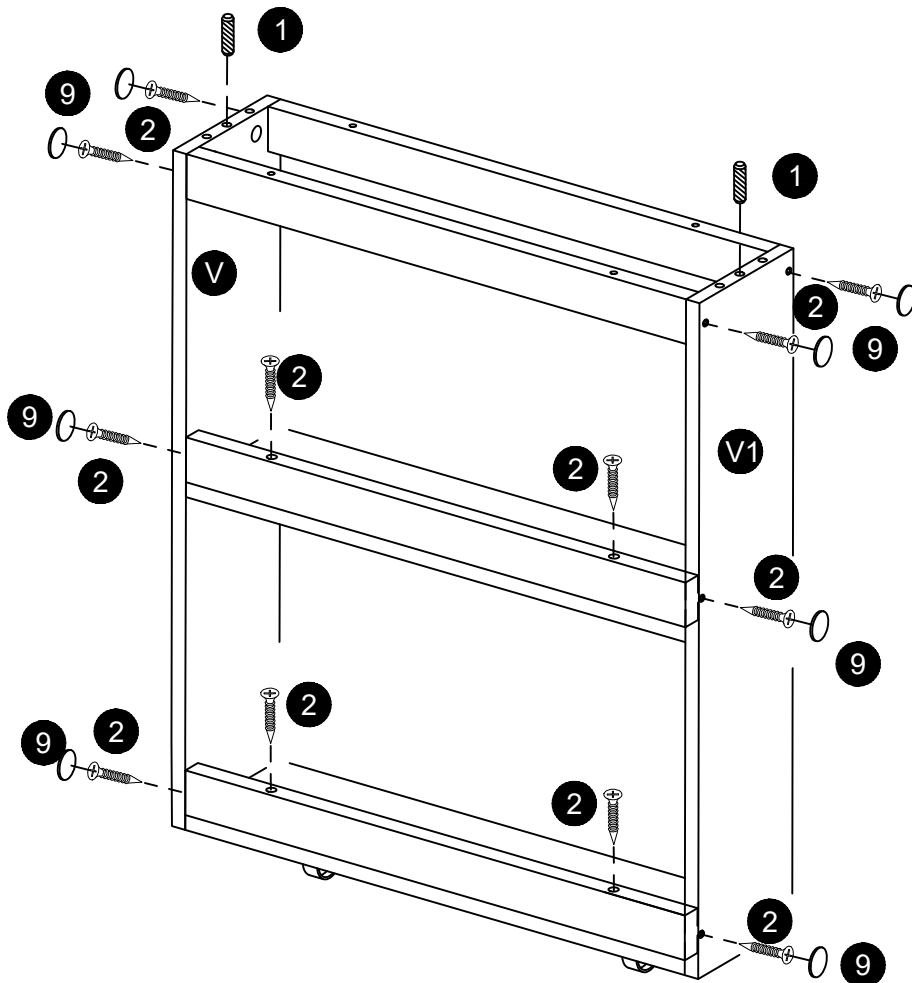

6 Insert the Connecting Bolt to the bottom of the Top Panel (T).

2.	Connecting Bolt		x 4
----	-----------------	---	-----

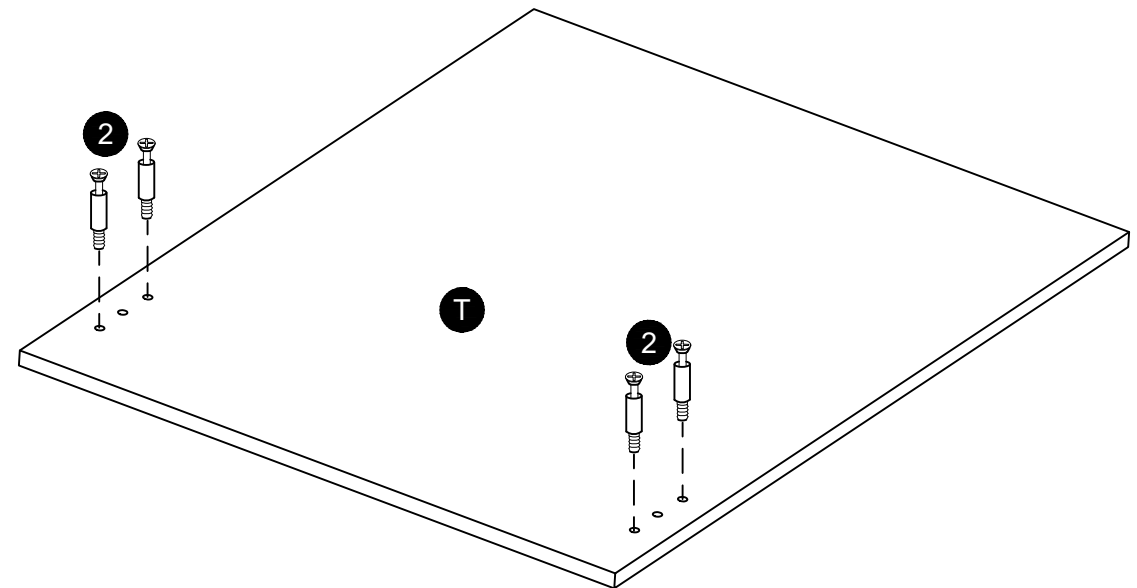


Assembly Instructions

816 - 011


6/8


7 Attach the Back Panel (Y).

5.	Back Panel Metal Plate		x 3
7.	Pan Head Screw M3.5 x 16mm		x 13

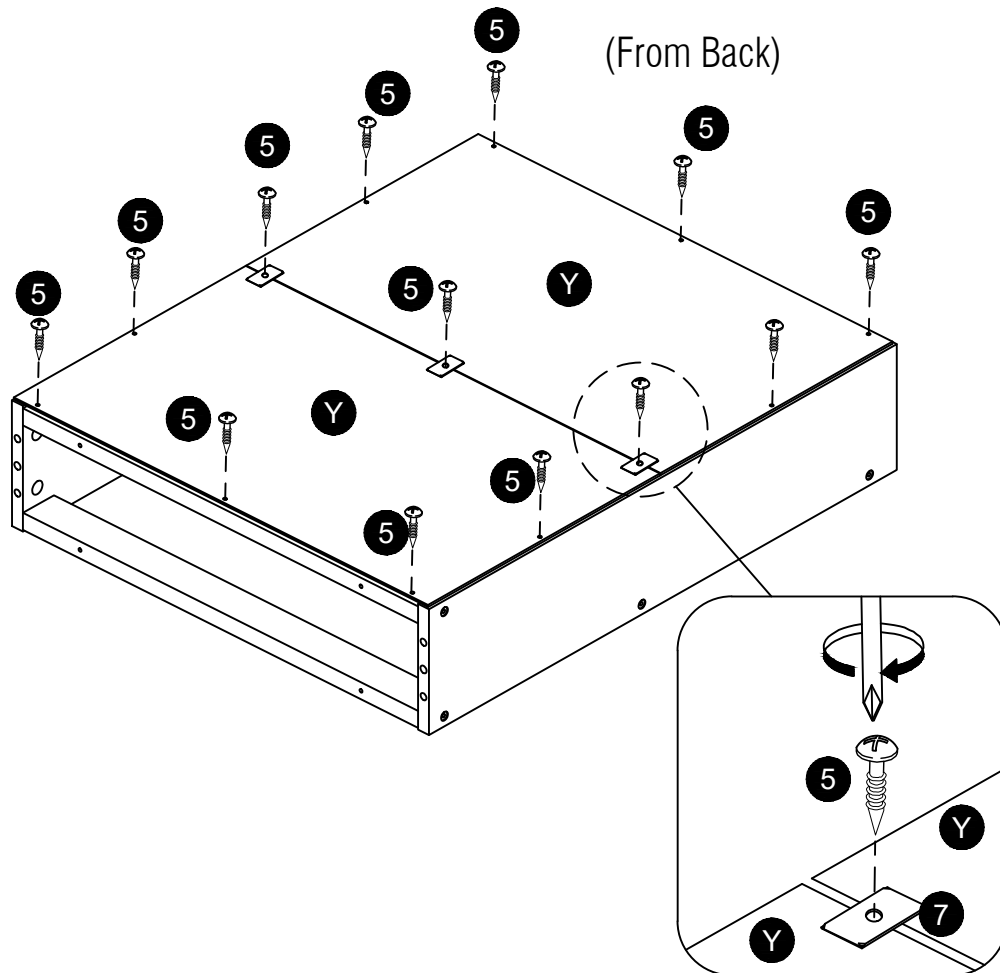

8 Attach the Top Panel (T).

2.	Csk Screw M4 x 32mm		x 4
4.	Minifix Housing		x 4

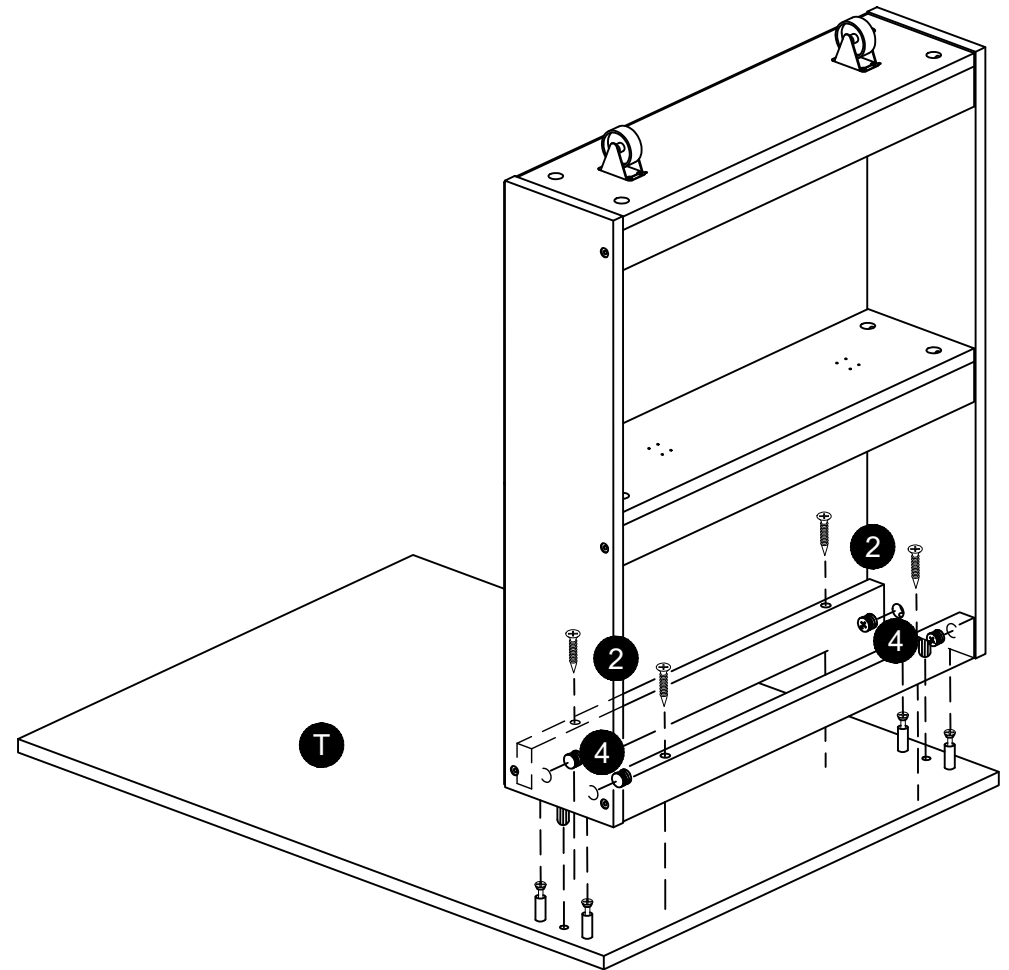






Assembly Instructions

816 - 011


7/8



9 Attach the Desk Rail Left & Right (Q&R).

6.	CSK Screw M4 x 38mm		x 4
----	------------------------	---	-----

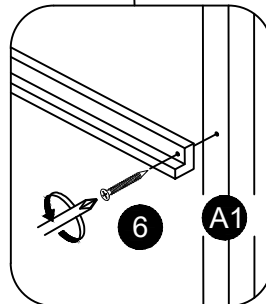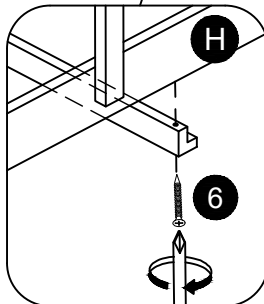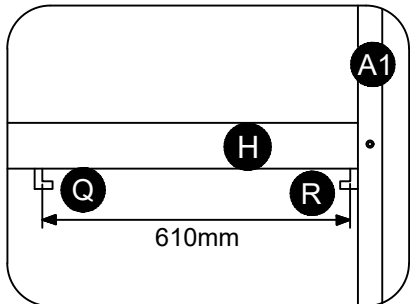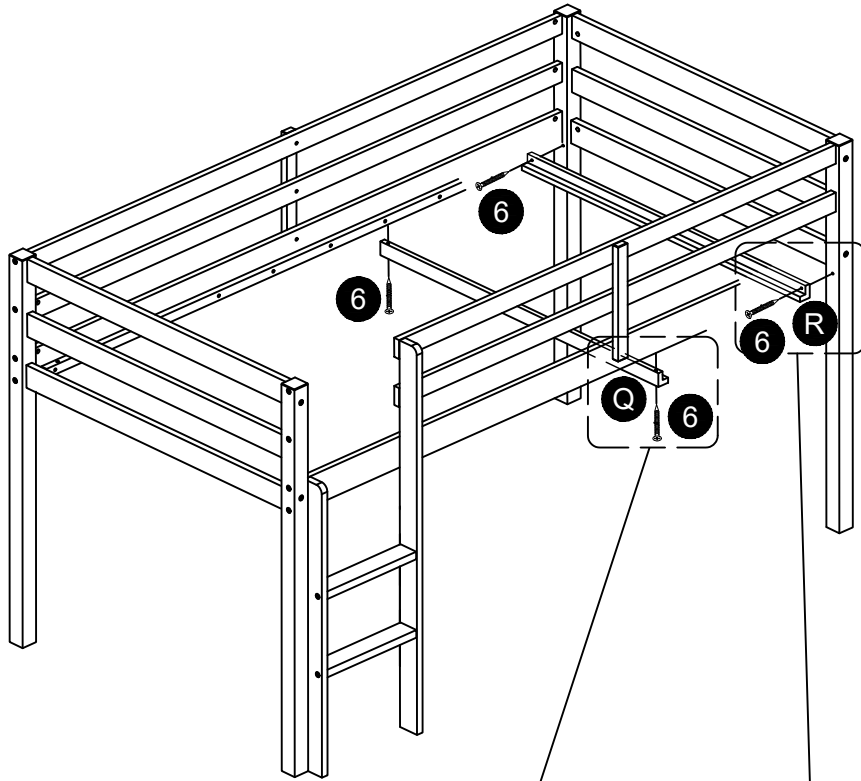

10 Attach the Top Panel Stopper (S).



2.	Csk Screw M4 x 32mm		x 3
----	------------------------	---	-----

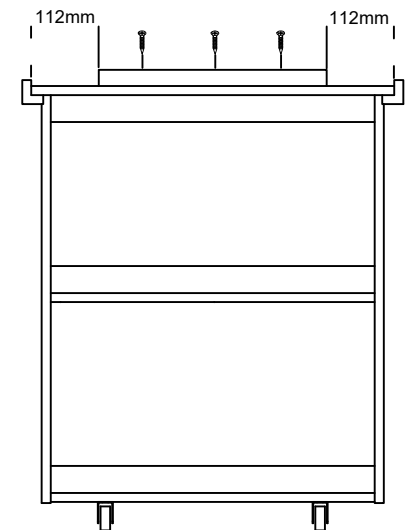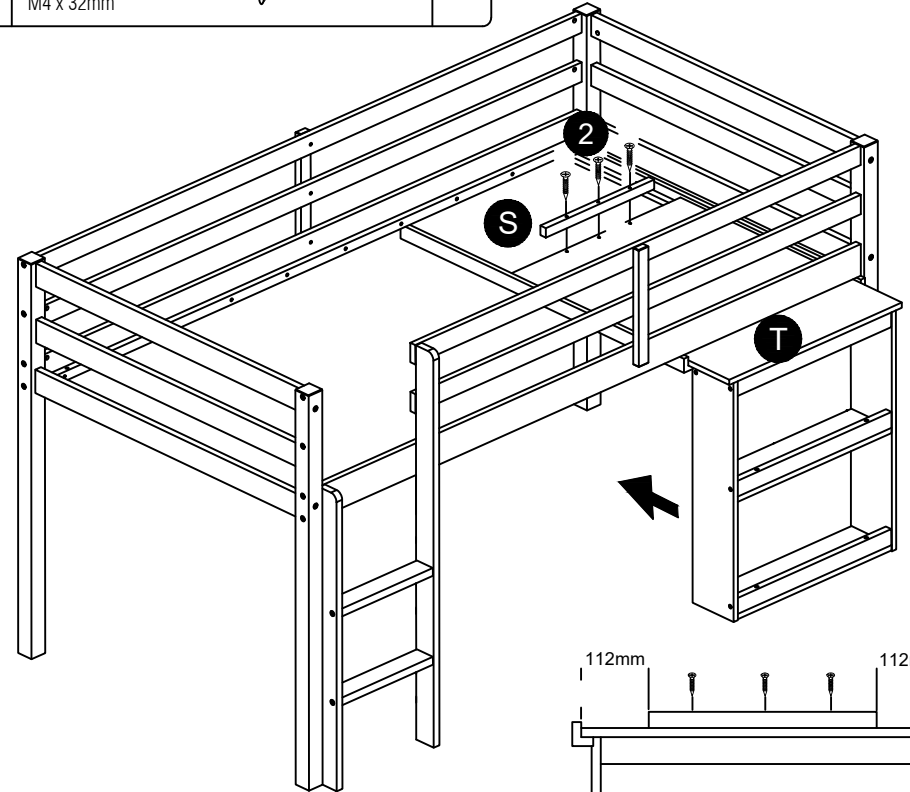

Assembly Instructions 816 - 011

8/8



11 Attach the Bed Slats (N).

6.	Csk Screw M4 x 25mm		x 24
8.	JCBC-W M6 x 30mm		x 4

REMARKS:

Get the
JCBC-W M6 x 30mm (8)
and CSK Screw M4 x 25mm (6)
from the Bed Hardware.

***BE CAREFUL!**

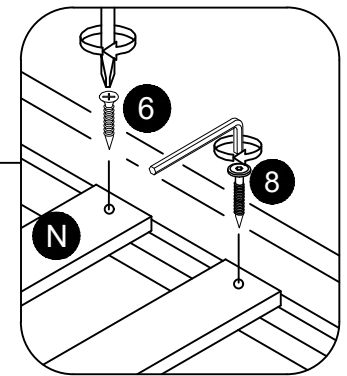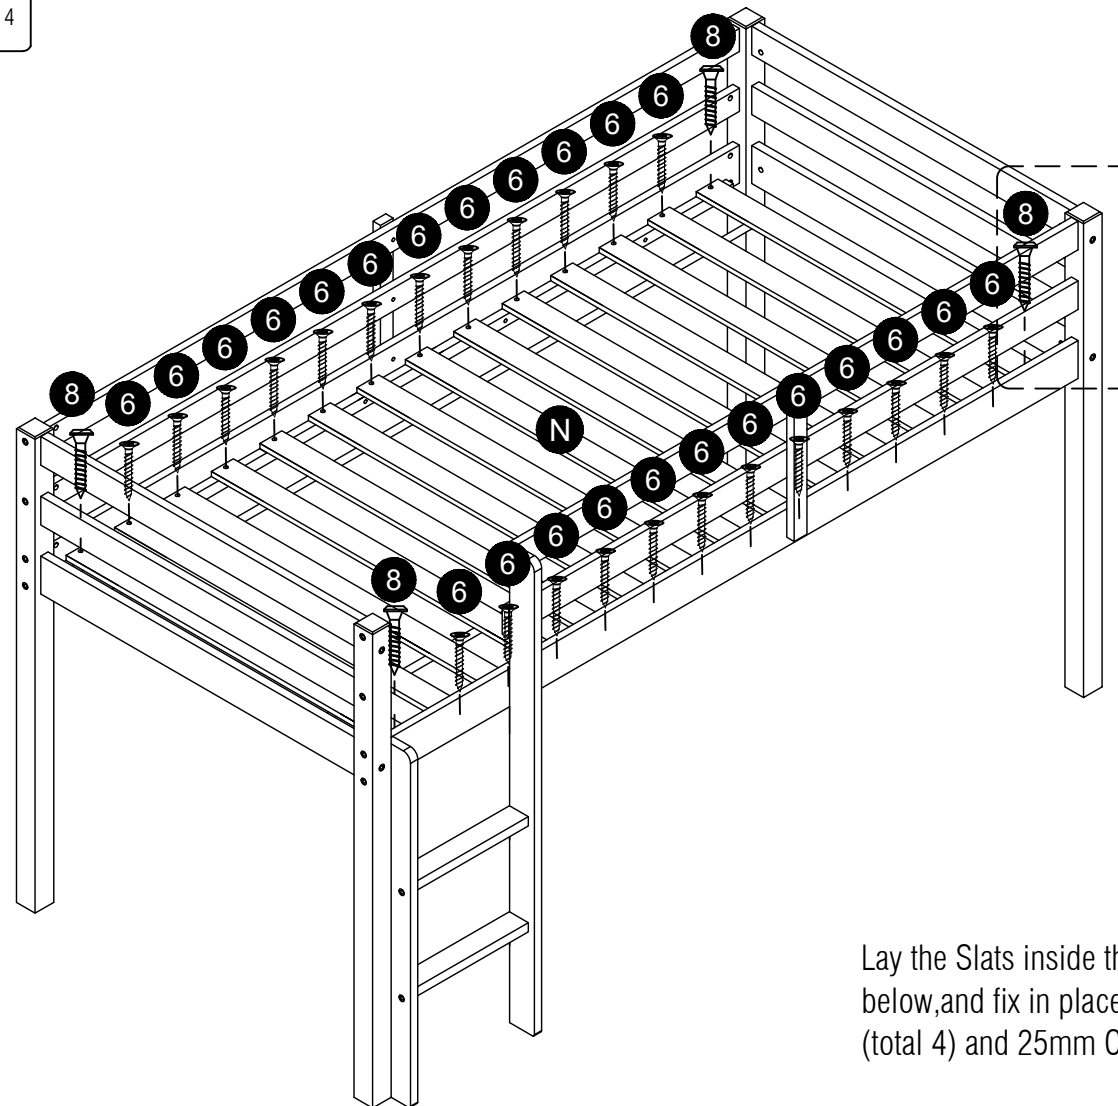

Lay the Slats inside the Stretechers as shown below, and fix in place with 30mm JCBC-W (total 4) and 25mm Csk Screws (total 24).

Assembly Instructions

816 - 011

1/6

WARNING :
TOP BUNKS AND ELEVATED BEDS ARE DANGEROUS AND ARE NOT
RECOMMENDED FOR CHILDREN UNDER THE AGE OF 9

Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. This is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is :

10 x greater for 7-8 year olds



7 x greater for 9-10 year olds

3 x greater for 11-12 year olds

TO HELP PREVENT serious or fatal injuries from entrapment of falls :

- Use the correct size mattress as specified.
- It must be at least 6.25" (160mm) below upper edge of guardrails.
- Follow written instructions with this bed.
- Use guardrails on both sides of upper bunk.
- Prohibits horseplay on or under bed.
- Check the bunk bed periodically to ensure that the guardrail, access device and other components are maintained in the correct position and state of repair and that all connectors are tight.
- Prohibit more than one person on upper bunk.

WARNING: The upper bunk must be more than 2 m from any ceiling fan.

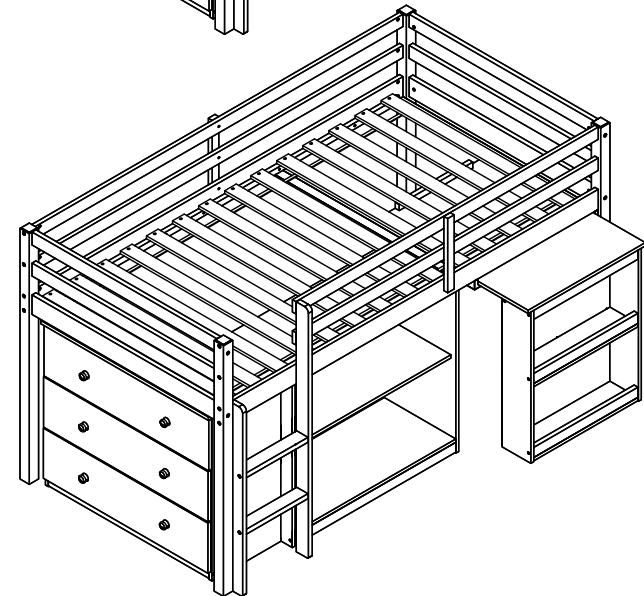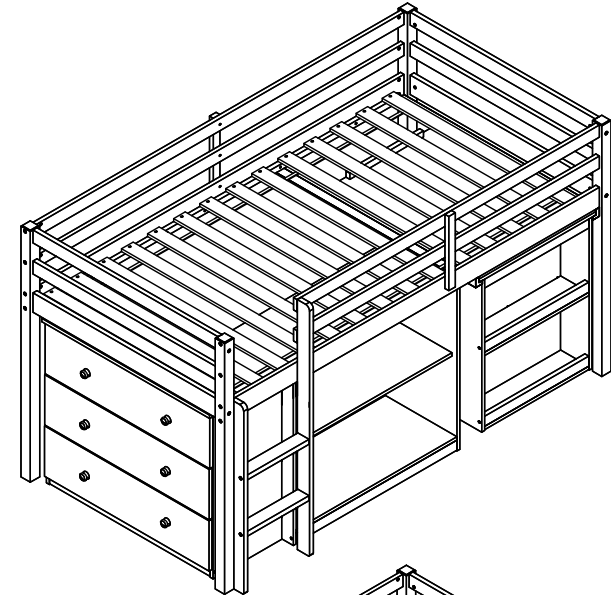


Assembly Instructions


816 - 011

2/6

Part in Box

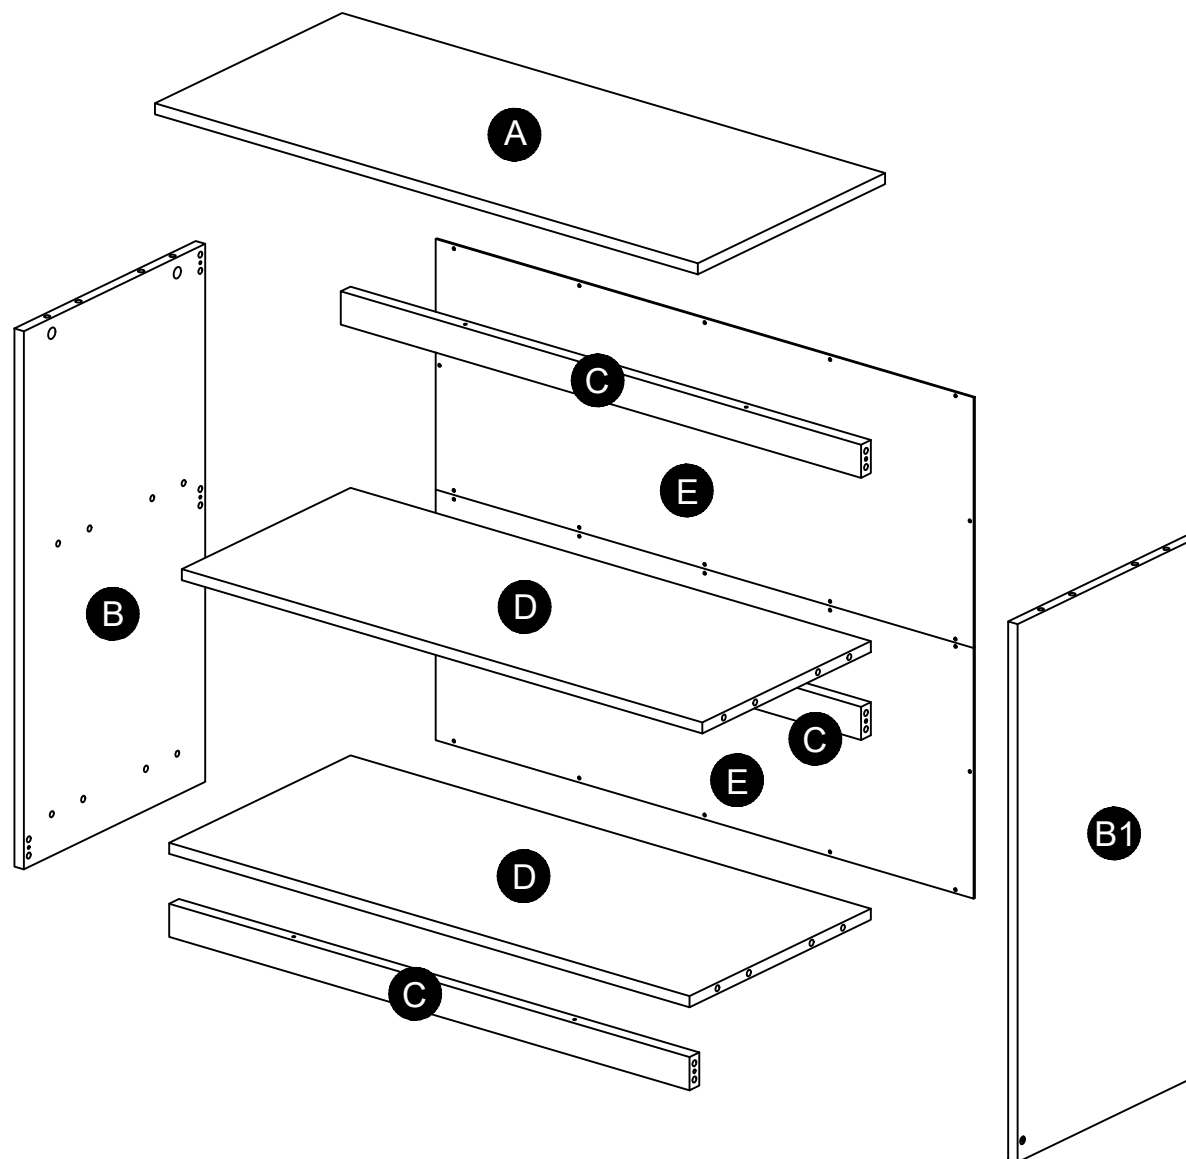

HARDWARE LIST

1.	Wood Dowel M8 x 30mm		x 24
2.	Csk Screw M4 x 32mm		x 12
3.	Connecting Bolt		x 12
4.	Minifix Housing		x 12
5.	Pan Head Screw M3.5 x 16mm		x 24
6.	Sticker Cap		x 6

Tool required for assembly :


- * Allen Key (supplied)
- * Phillips Screwdriver
(not supplied)

Assembly Instructions



816 - 011



3/6

- 1 Insert the Wood Dowel into the both end of Support Rail (D).

1.	Wood Dowel M8 x 30mm		x 12
----	-------------------------	---	------

- 2 Insert the Wood Dowel and Connecting Bolt into the both Side Panel (E&F).

1.	Wood Dowel M8 x 30mm		x 8
3.	Connecting Bolt		x 8

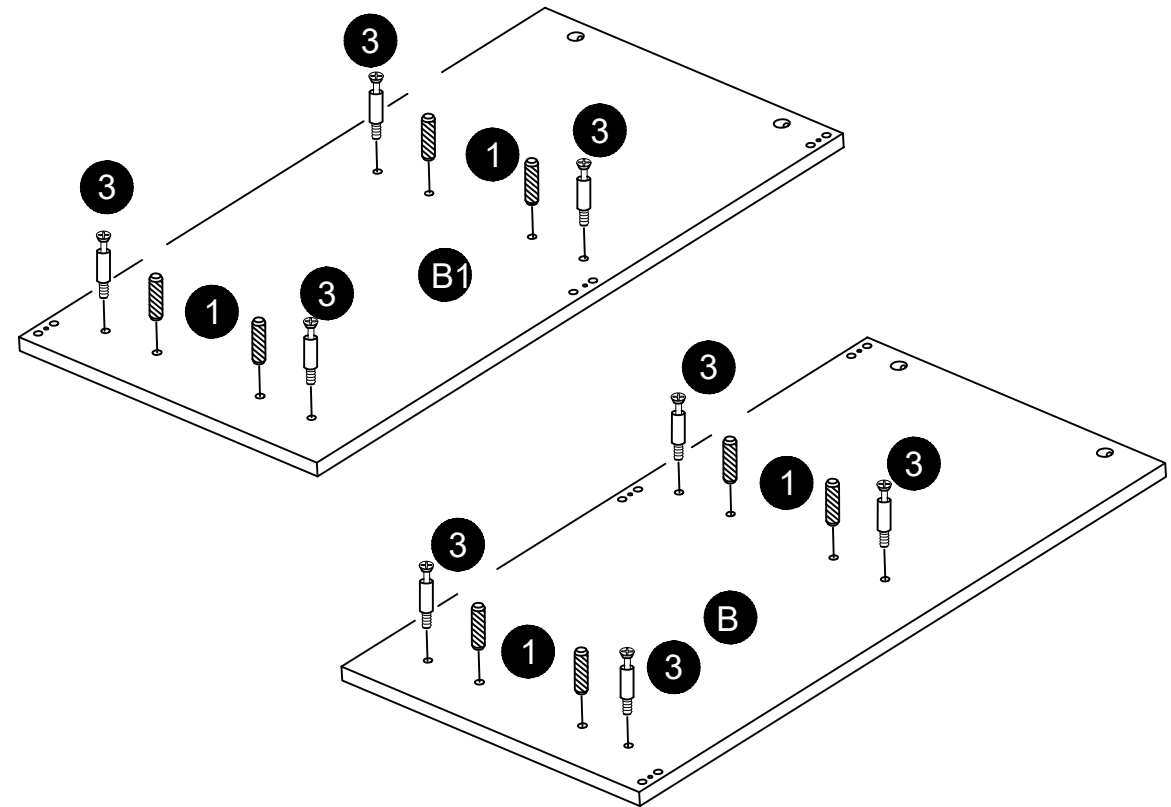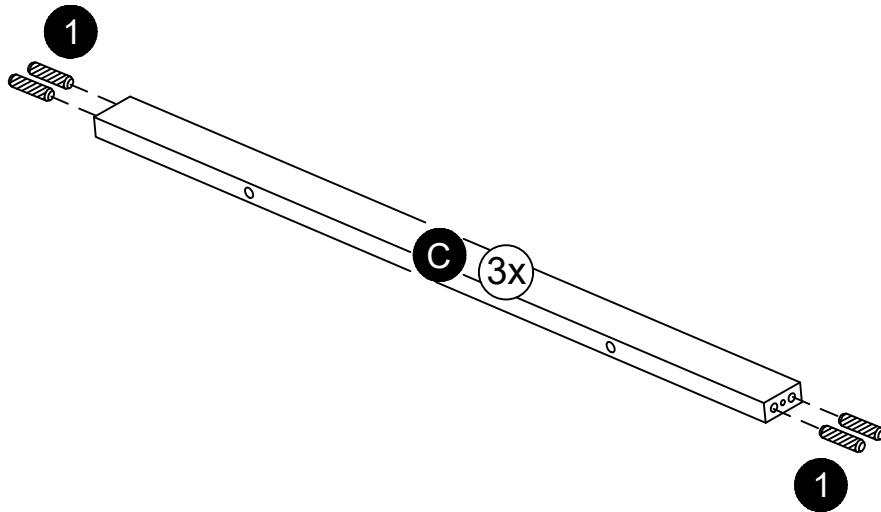

Assembly Instructions


816 - 011



4/6

- 3 Assemble the Support Rail (D), Bottom Panel (C), Shelf Panel (B), Left & Right Panel (B&B1).

4.	Minifix Housing		x 8
----	-----------------	---	-----

- 4 Screw the Side Panel.

2.	Csk Screw M4 x 32mm		x 10
6.	Sticker Cap		x 6

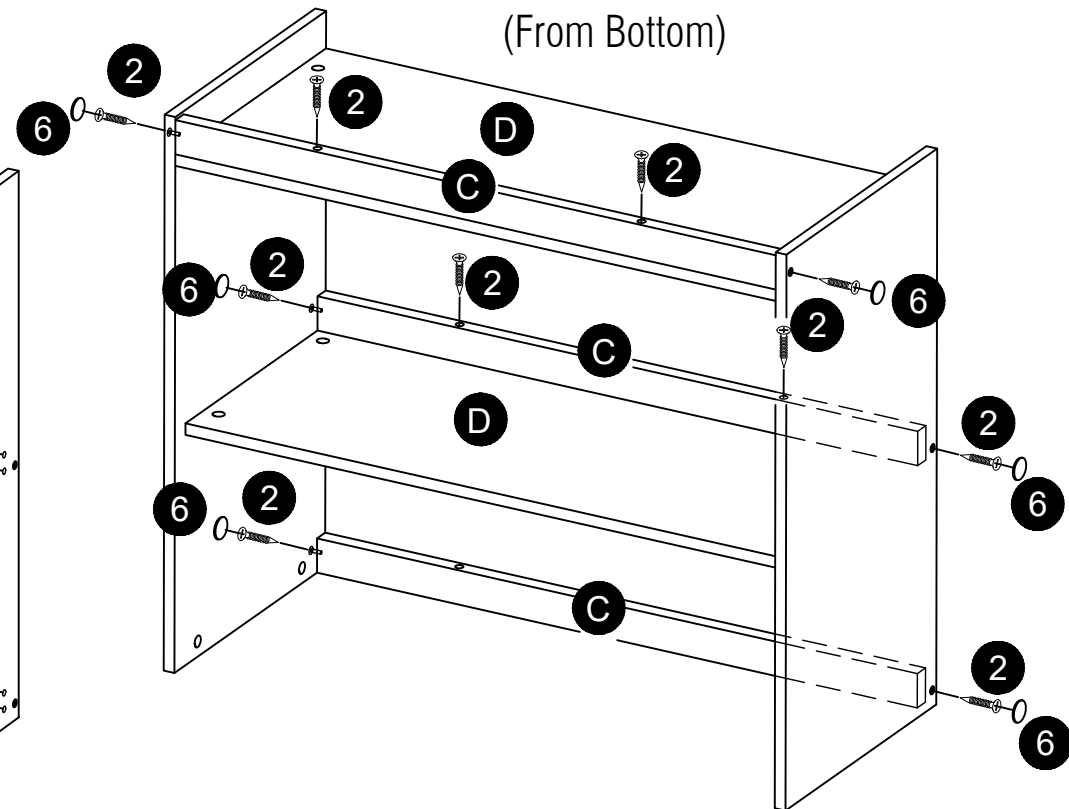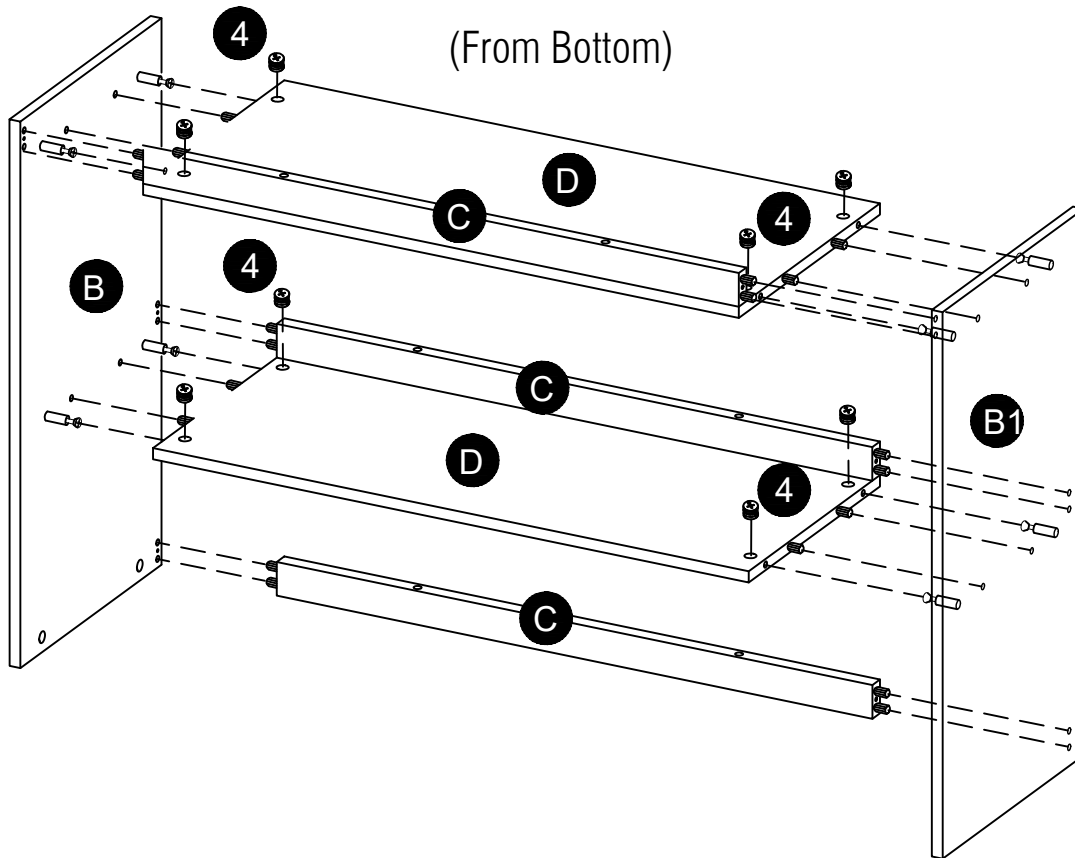


Assembly Instructions


816 - 011



5/6

- 5 Insert the Wood Dowel to the both Side Panel (E&F) and Wood Dowel to the Top Panel (A).

1.	Wood Dowel M8 x 30mm		x 4
3.	Connecting Bolt		x 4

- 6 Assemble the Top Panel (A).

2.	Csk Screw M4 x 32mm		x 2
4.	Minifix Housing		x 4

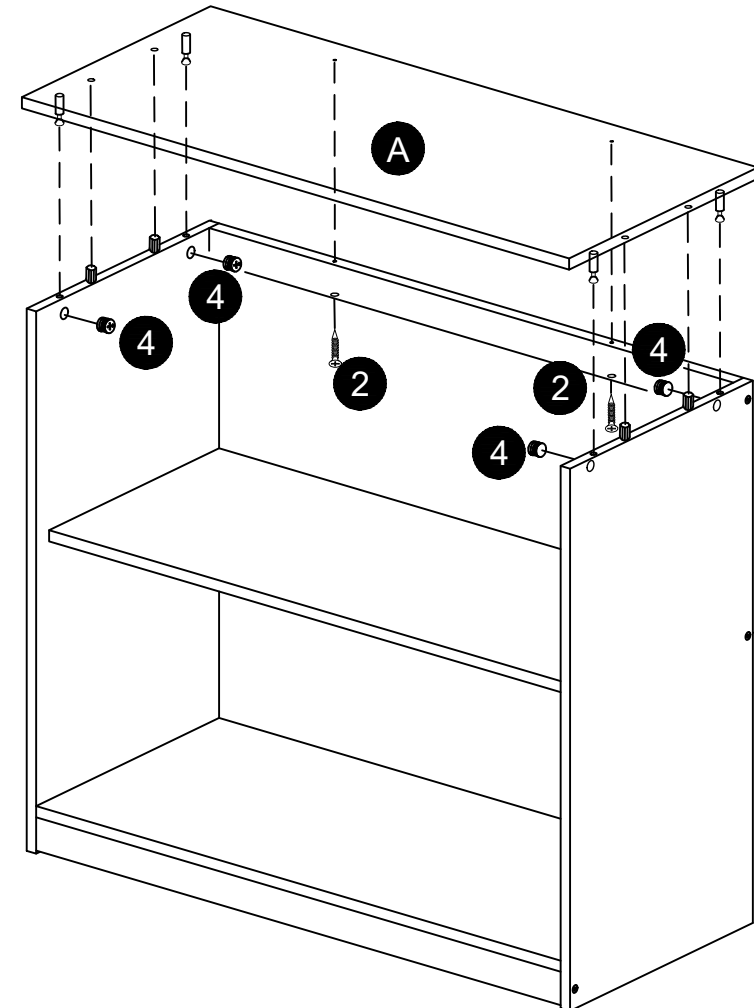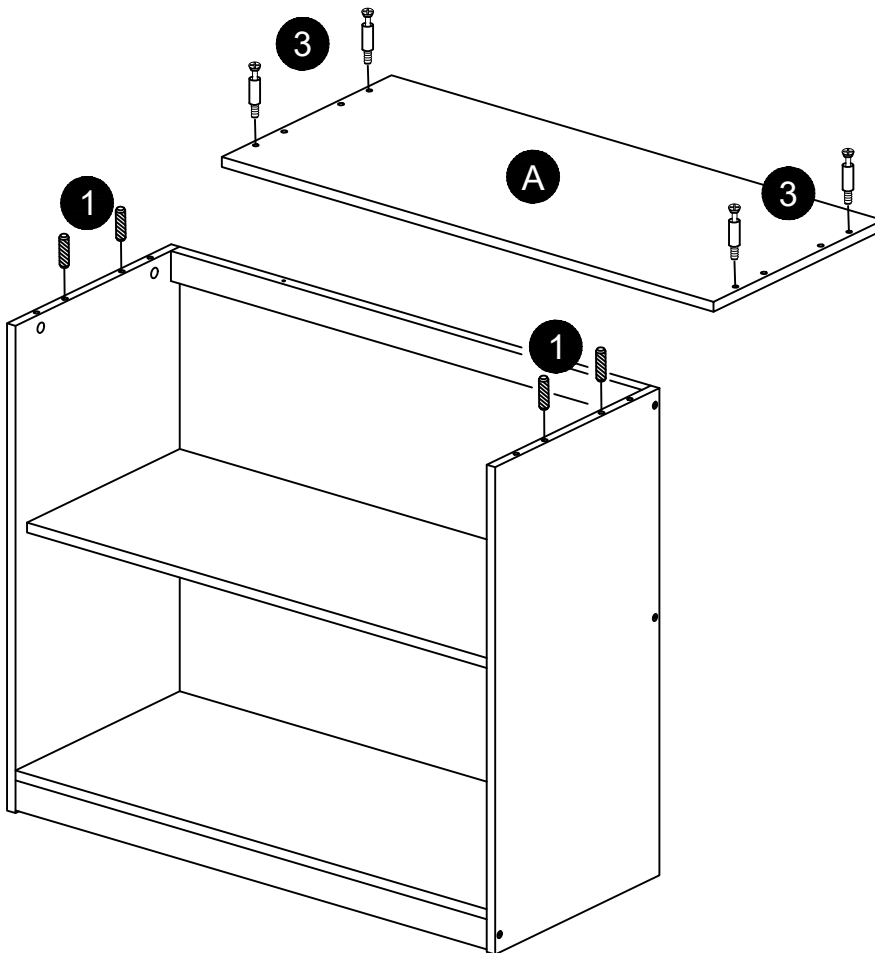


Assembly Instructions

816 - 011


6/6

7 Assemble the Back Panel (E).

5.	Pan Head Screw M3.5 x 16mm		x 24
----	-------------------------------	---	------

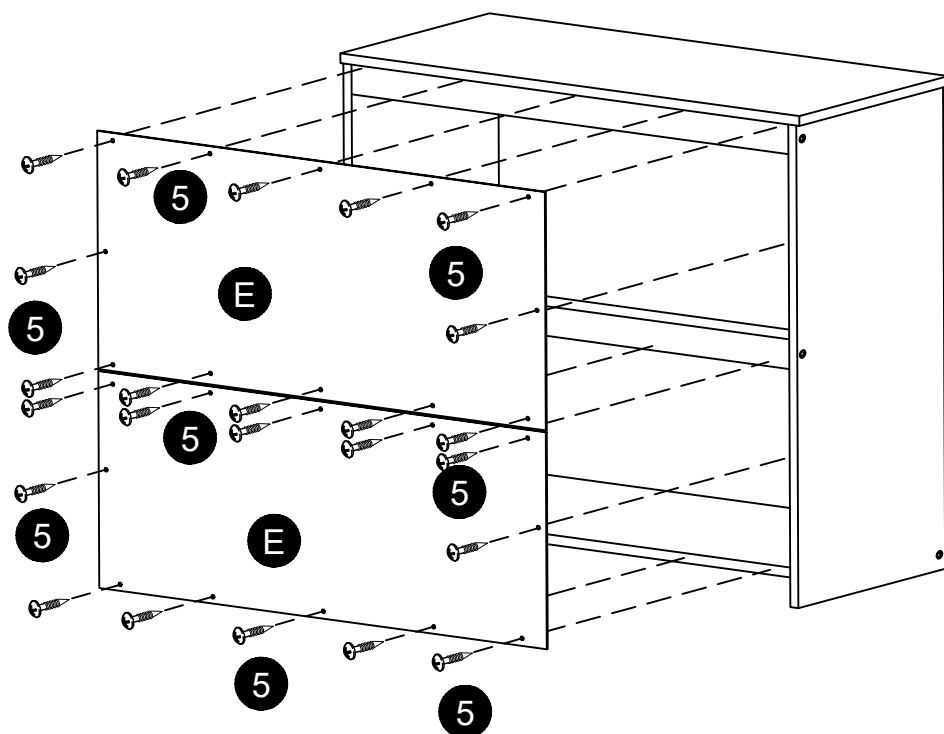

8 Place the the Bookcase Shelf under the bed.

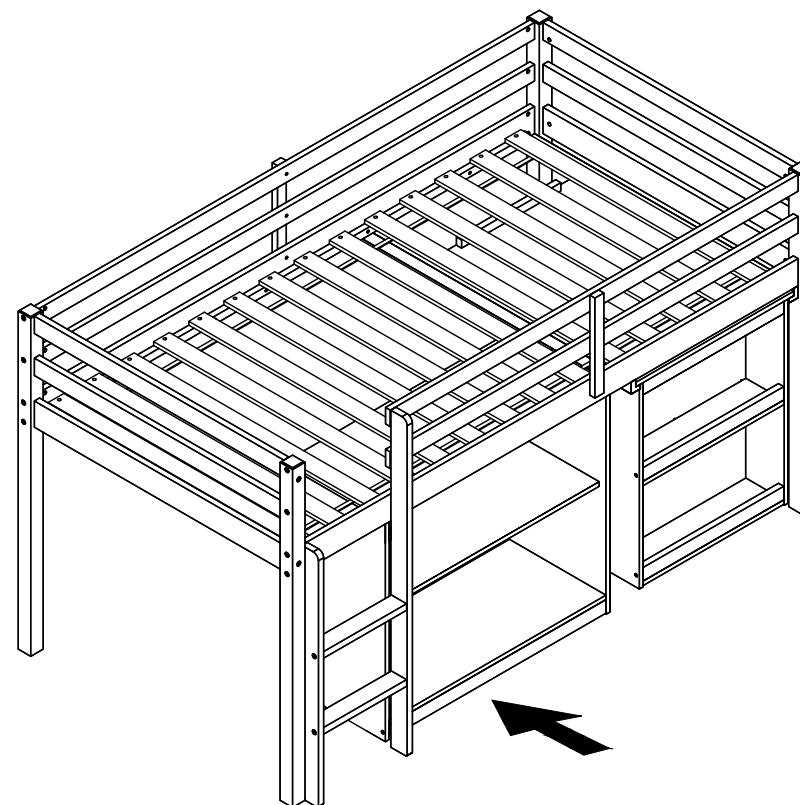

Assembly Instructions

816 - 011

1/7

WARNING :

TOP BUNKS AND ELEVATED BEDS ARE DANGEROUS AND ARE NOT RECOMMENDED FOR CHILDREN UNDER THE AGE OF 9

Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. This is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is :

10 x greater for 7-8 year olds



7 x greater for 9-10 year olds

3 x greater for 11-12 year olds

TO HELP PREVENT serious or fatal injuries from entrapment of falls :

- Use the correct size mattress as specified.
- It must be at least 6.25" (160mm) below upper edge of guardrails.
- Follow written instructions with this bed.
- Use guardrails on both sides of upper bunk.
- Prohibits horseplay on or under bed.
- Check the bunk bed periodically to ensure that the guardrail, access device and other components are maintained in the correct position and state of repair and that all connectors are tight.
- Prohibit more than one person on upper bunk.

WARNING: The upper bunk must be more than 2 m from any ceiling fan.

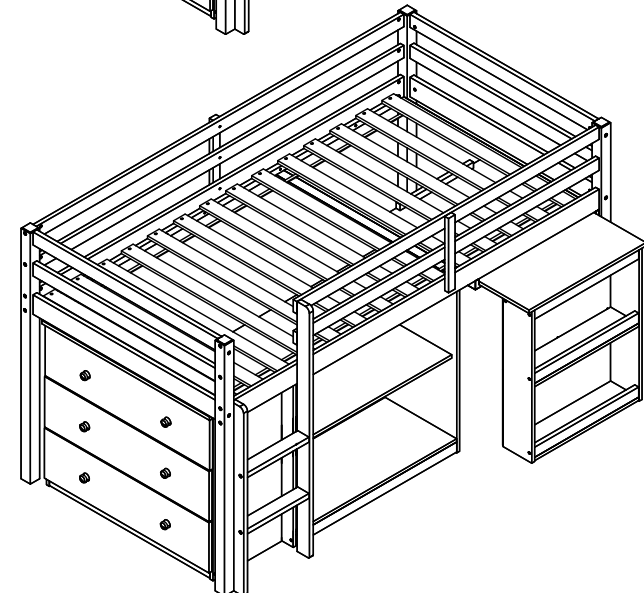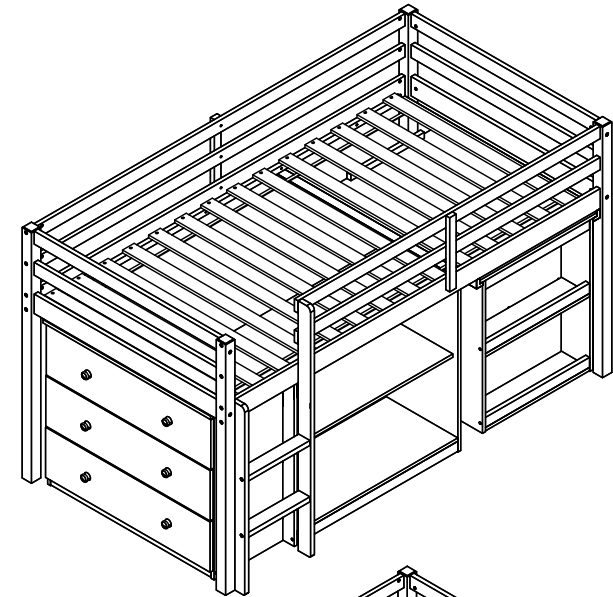


Assembly Instructions


816 - 011

2/7

Part in Box

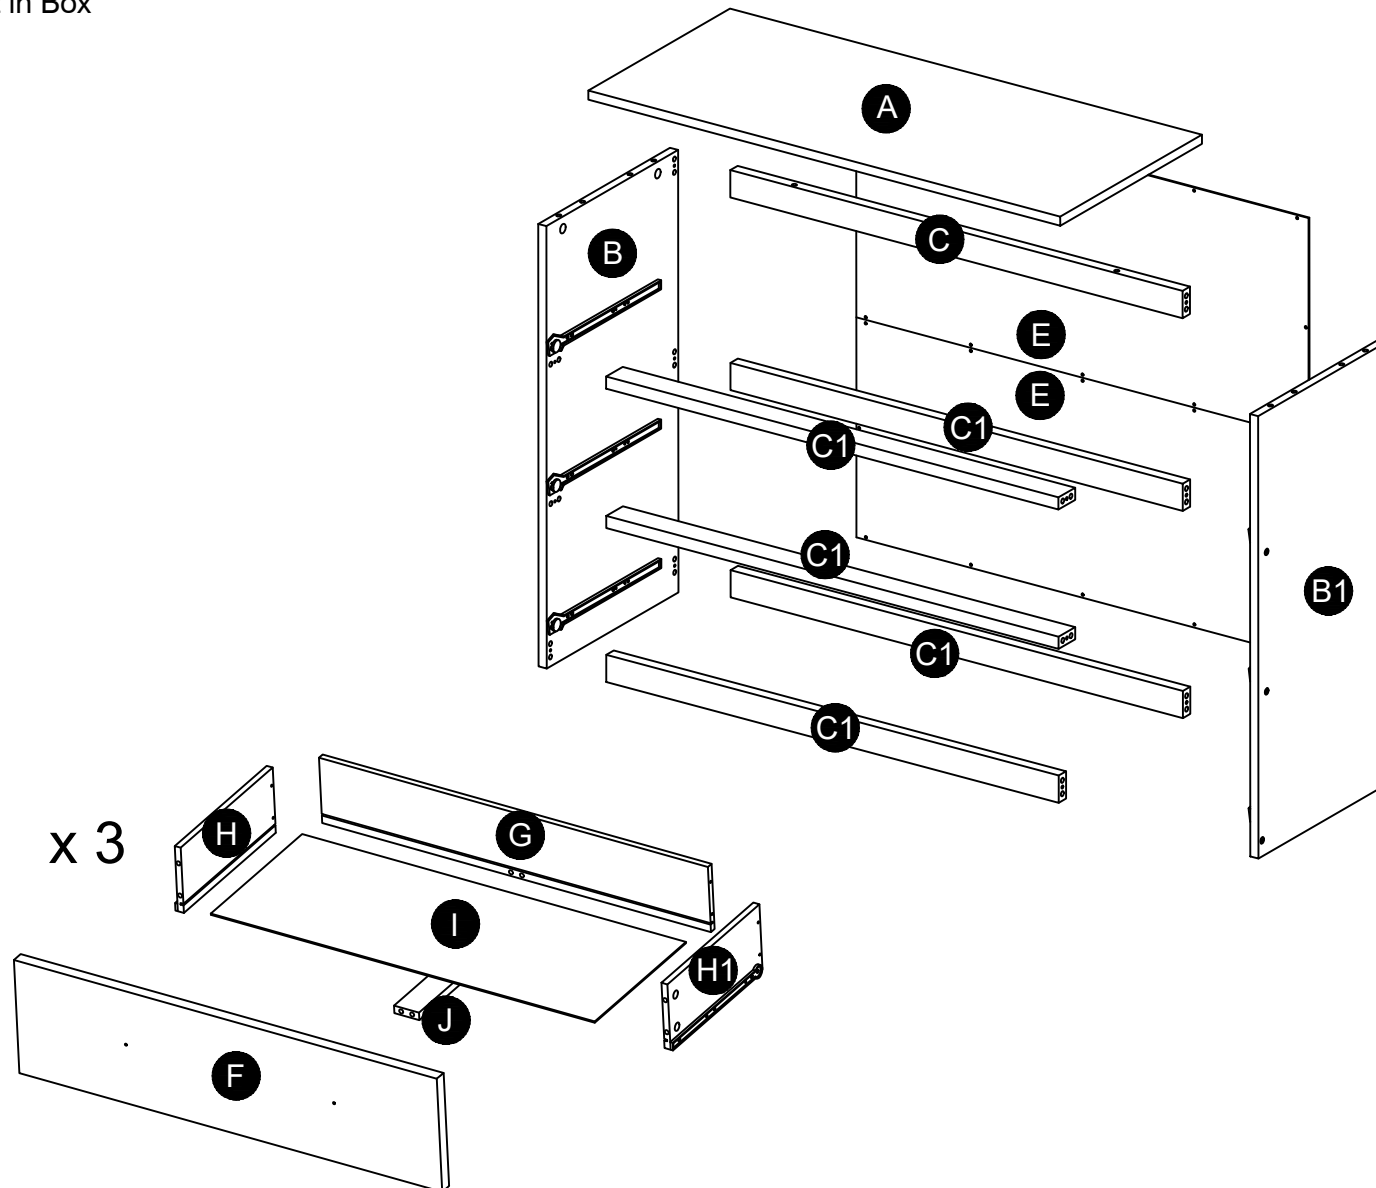

HARDWARE LIST

1.	Wood Dowel M8 x 30mm		x 28
2.	Csk Screw M4 x 32mm		x 14
3.	Connecting Bolt		x 16
4.	Minifix Housing Long		x 4
5.	Pan Head Screw M3.5 x 16mm		x 24
6.	Csk Screw M4 x 25mm		x 12
7.	Minifix Housing Short		x 12
8.	Wood Dowel M6 x 25mm		x 12
9.	Sticker Cap		x 12
10.	Handle Screw M4 x 28mm		x 6
11.	Handle		x 6

Tool required for assembly :


- * Allen Key (supplied)
- * Phillips Screwdriver
(not supplied)

Assembly Instructions


816 - 011



3/7

- 1 Insert the Wood Dowel into the both end of Top support rail (C) and Support Rail (C1).

1.	Wood Dowel M8 x 30mm		x 24
----	-------------------------	---	------

- 2 Insert & Tighten No.(2) to the both Side Panel (B & B1) with Top Support Panel (C) & Support Rail (C1).

2.	Csk Screw M4 x 32mm		x 12
9.	Sticker Cap		x 12

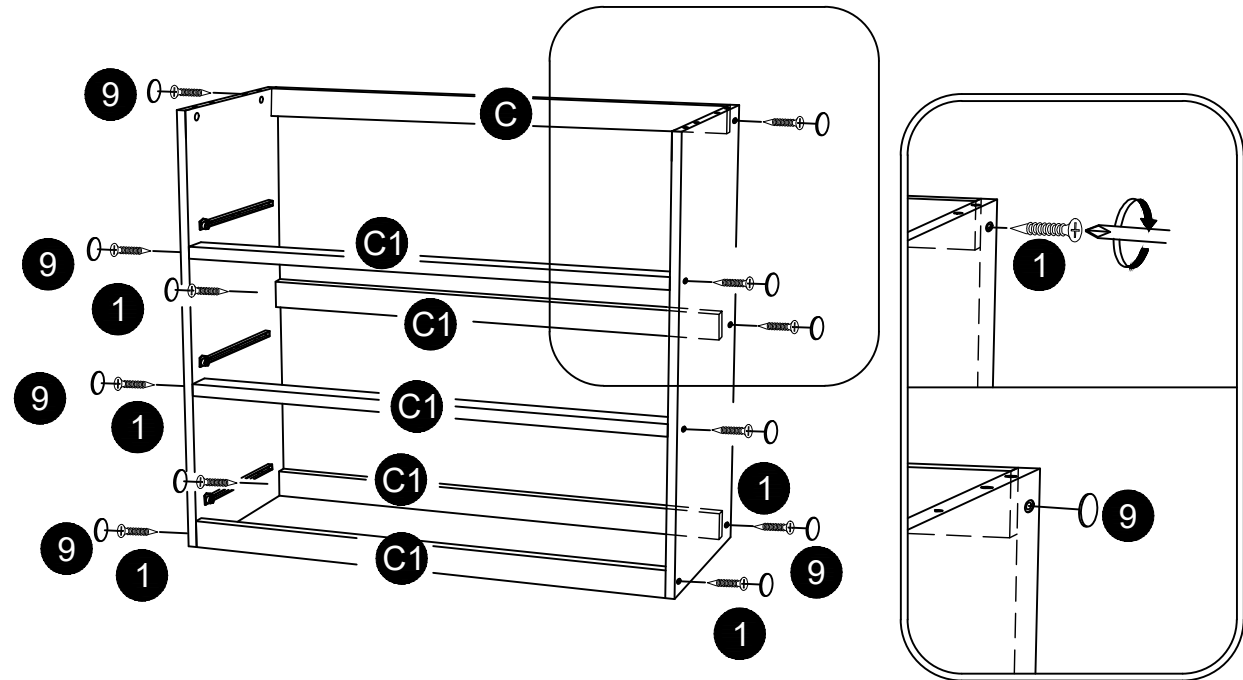
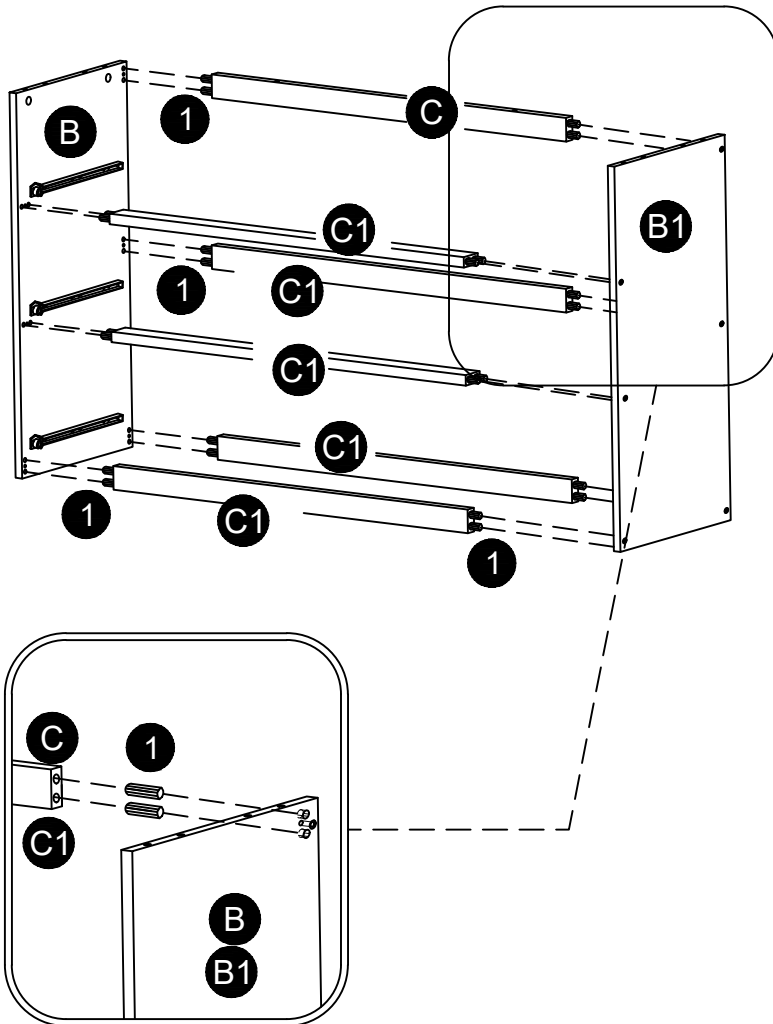



Assembly Instructions

816 - 011


4/7


3 Assemble the Top Panel (A).

1.	Wood Dowel M8 x 30mm		x 4
3.	Connecting Bolt		x 4
4.	Minifix Housing Long		x 4

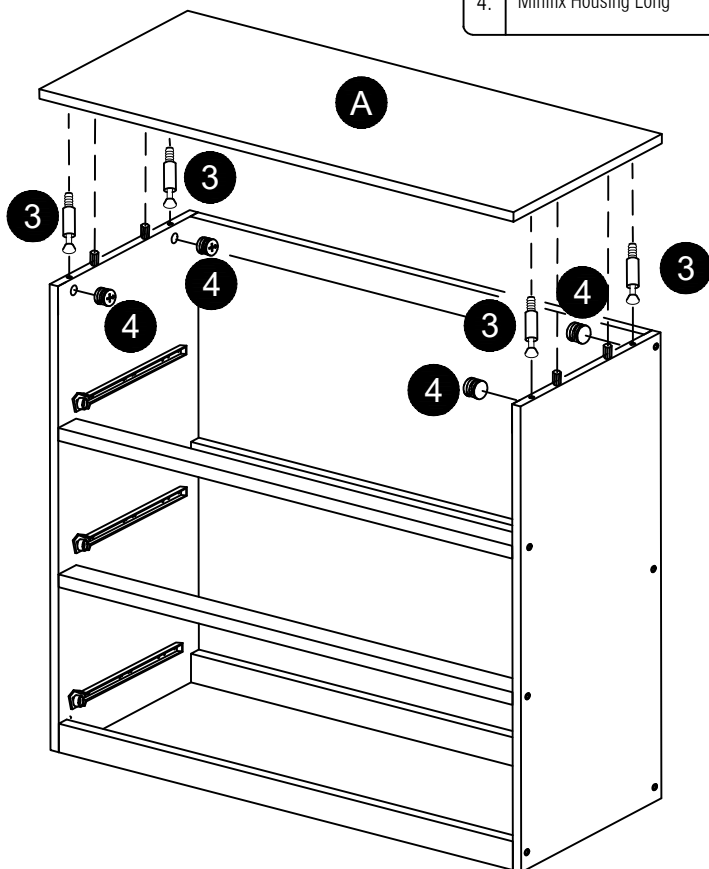

4 Tighten the Top Support Panel.

2.	Csk Screw M4 x 32mm		x 2
----	------------------------	---	-----

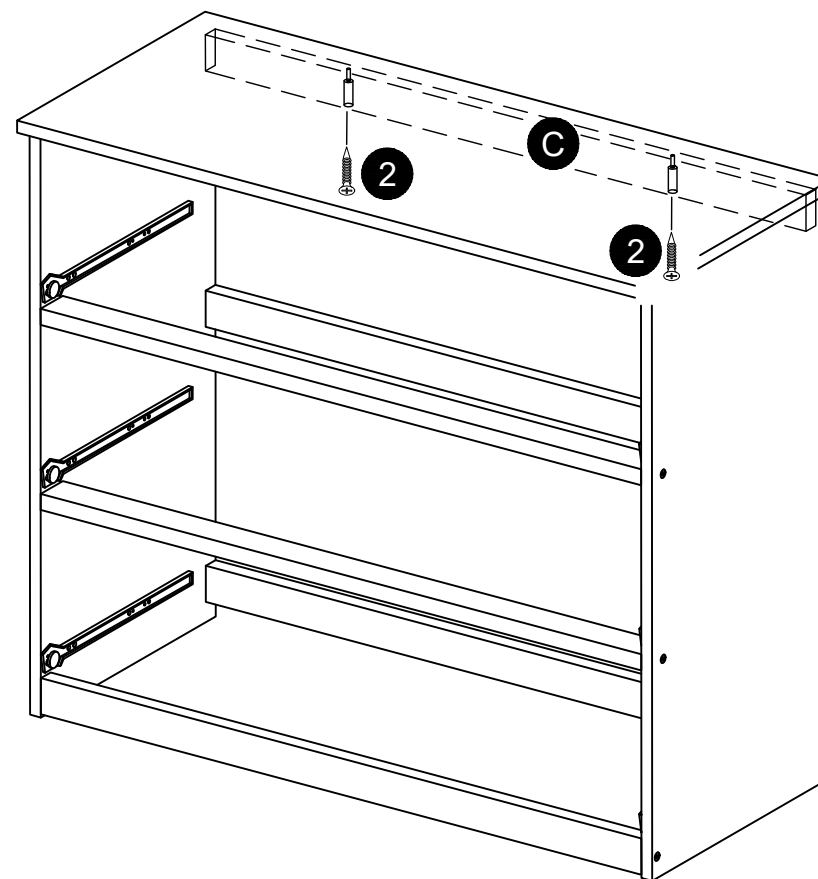

Assembly Instructions


816 - 011


5/7

5 Attach the Back Panel (E) .


6.	Pan Head Screw M3.5 x 16mm		x 24
----	-------------------------------	---	------

6 Assemble the Drawer Side ((H)(H1) & Support Drawer Bottom (J) onto Drawer Front Panel (F).

3.	Connecting Bolt		x 12
7.	Minifix Housing Short		x 12
8.	Wood Dowel M6 x 25mm		x 6

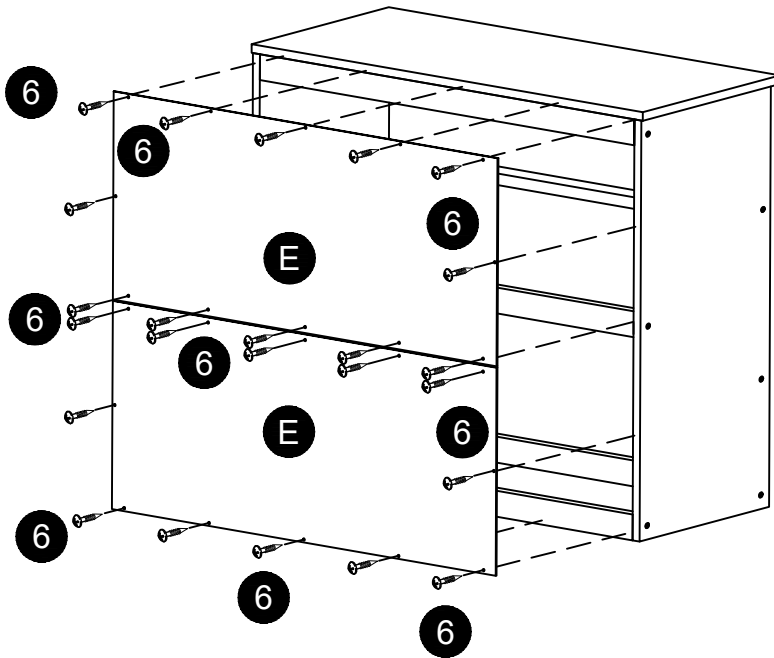

x 3

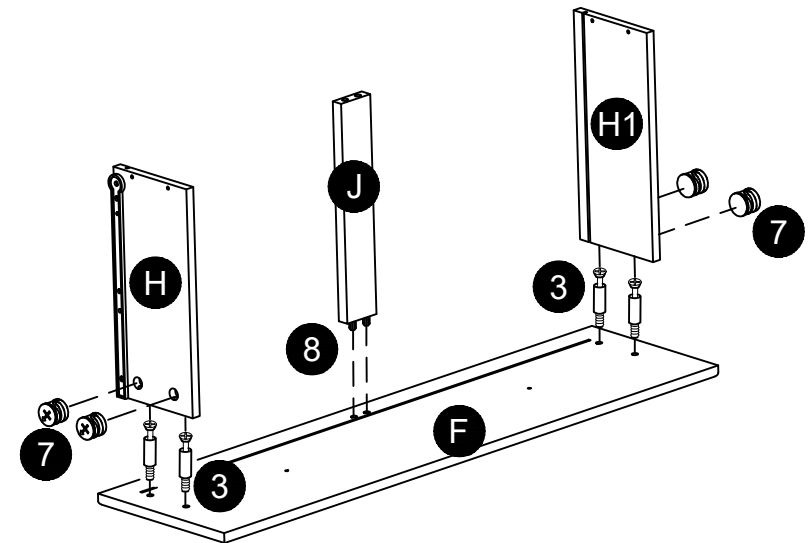

Assembly Instructions

816 - 011


6/7

7 Place and Align the Drawer Bottom Panel (I).


8 Assemble the back panel (G).

8.	Wood Dowel M6 x 25mm		x 6
----	-------------------------	---	-----

x 3

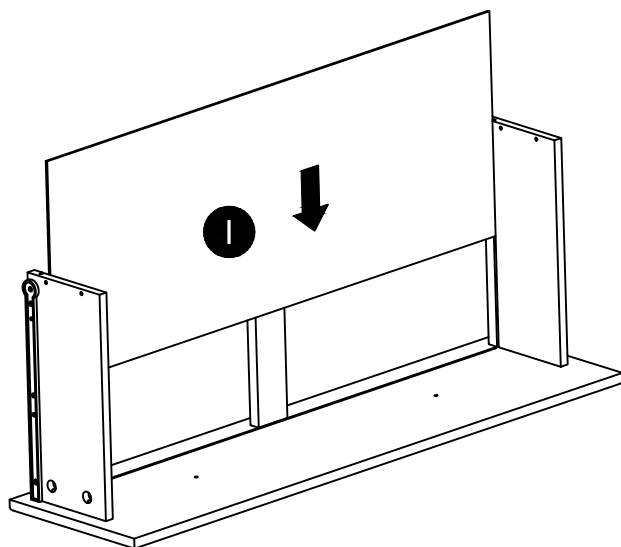

x 3

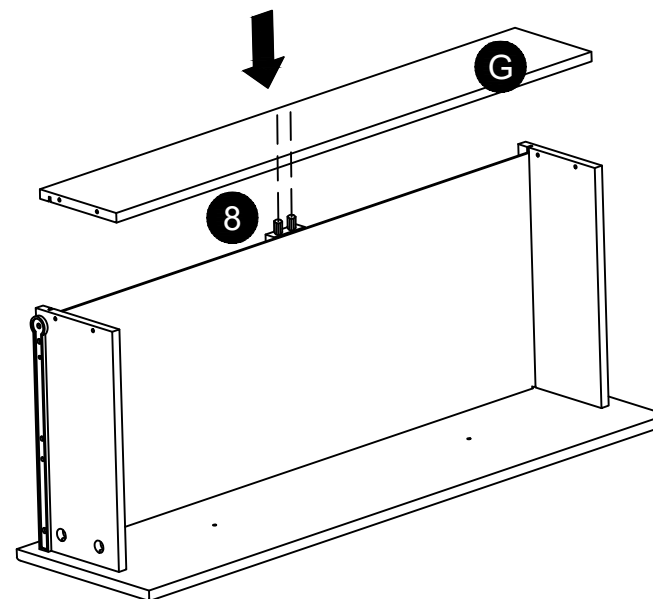



Assembly Instructions

816 - 011

7/7

9 Assemble the Handle (11) tighten the Back Panel Drawer (6).

6.	Csk Screw M4 x 25mm		x 12
10.	Handle Screw M4 x 28mm		x 6
11.	Handle		x 6

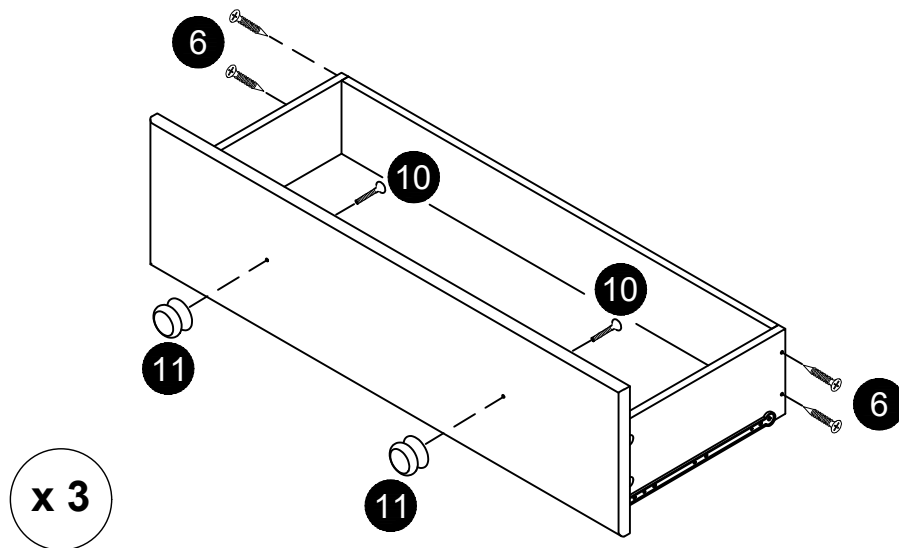

10 Align the finish Drawer to the Place.

