


HF-30022E-2

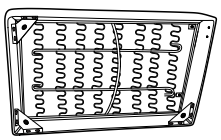


A1x1

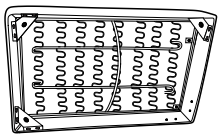

A2x1

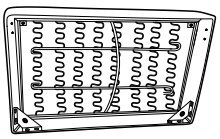


Bx1

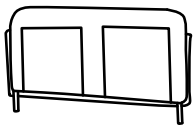


Cx1



Dx1

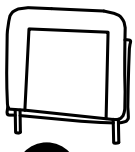

E1x1

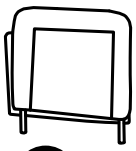


E2x1




F1x1




F2x1

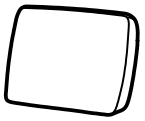

Gx2

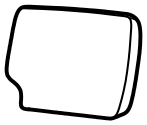

H1x1

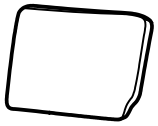

H2x1



Ix2




Jx1




Kx22



Lx6



Mx4




Nx12



Ox12




Px12




Qx4


Note: Please provide your own cutting tool.

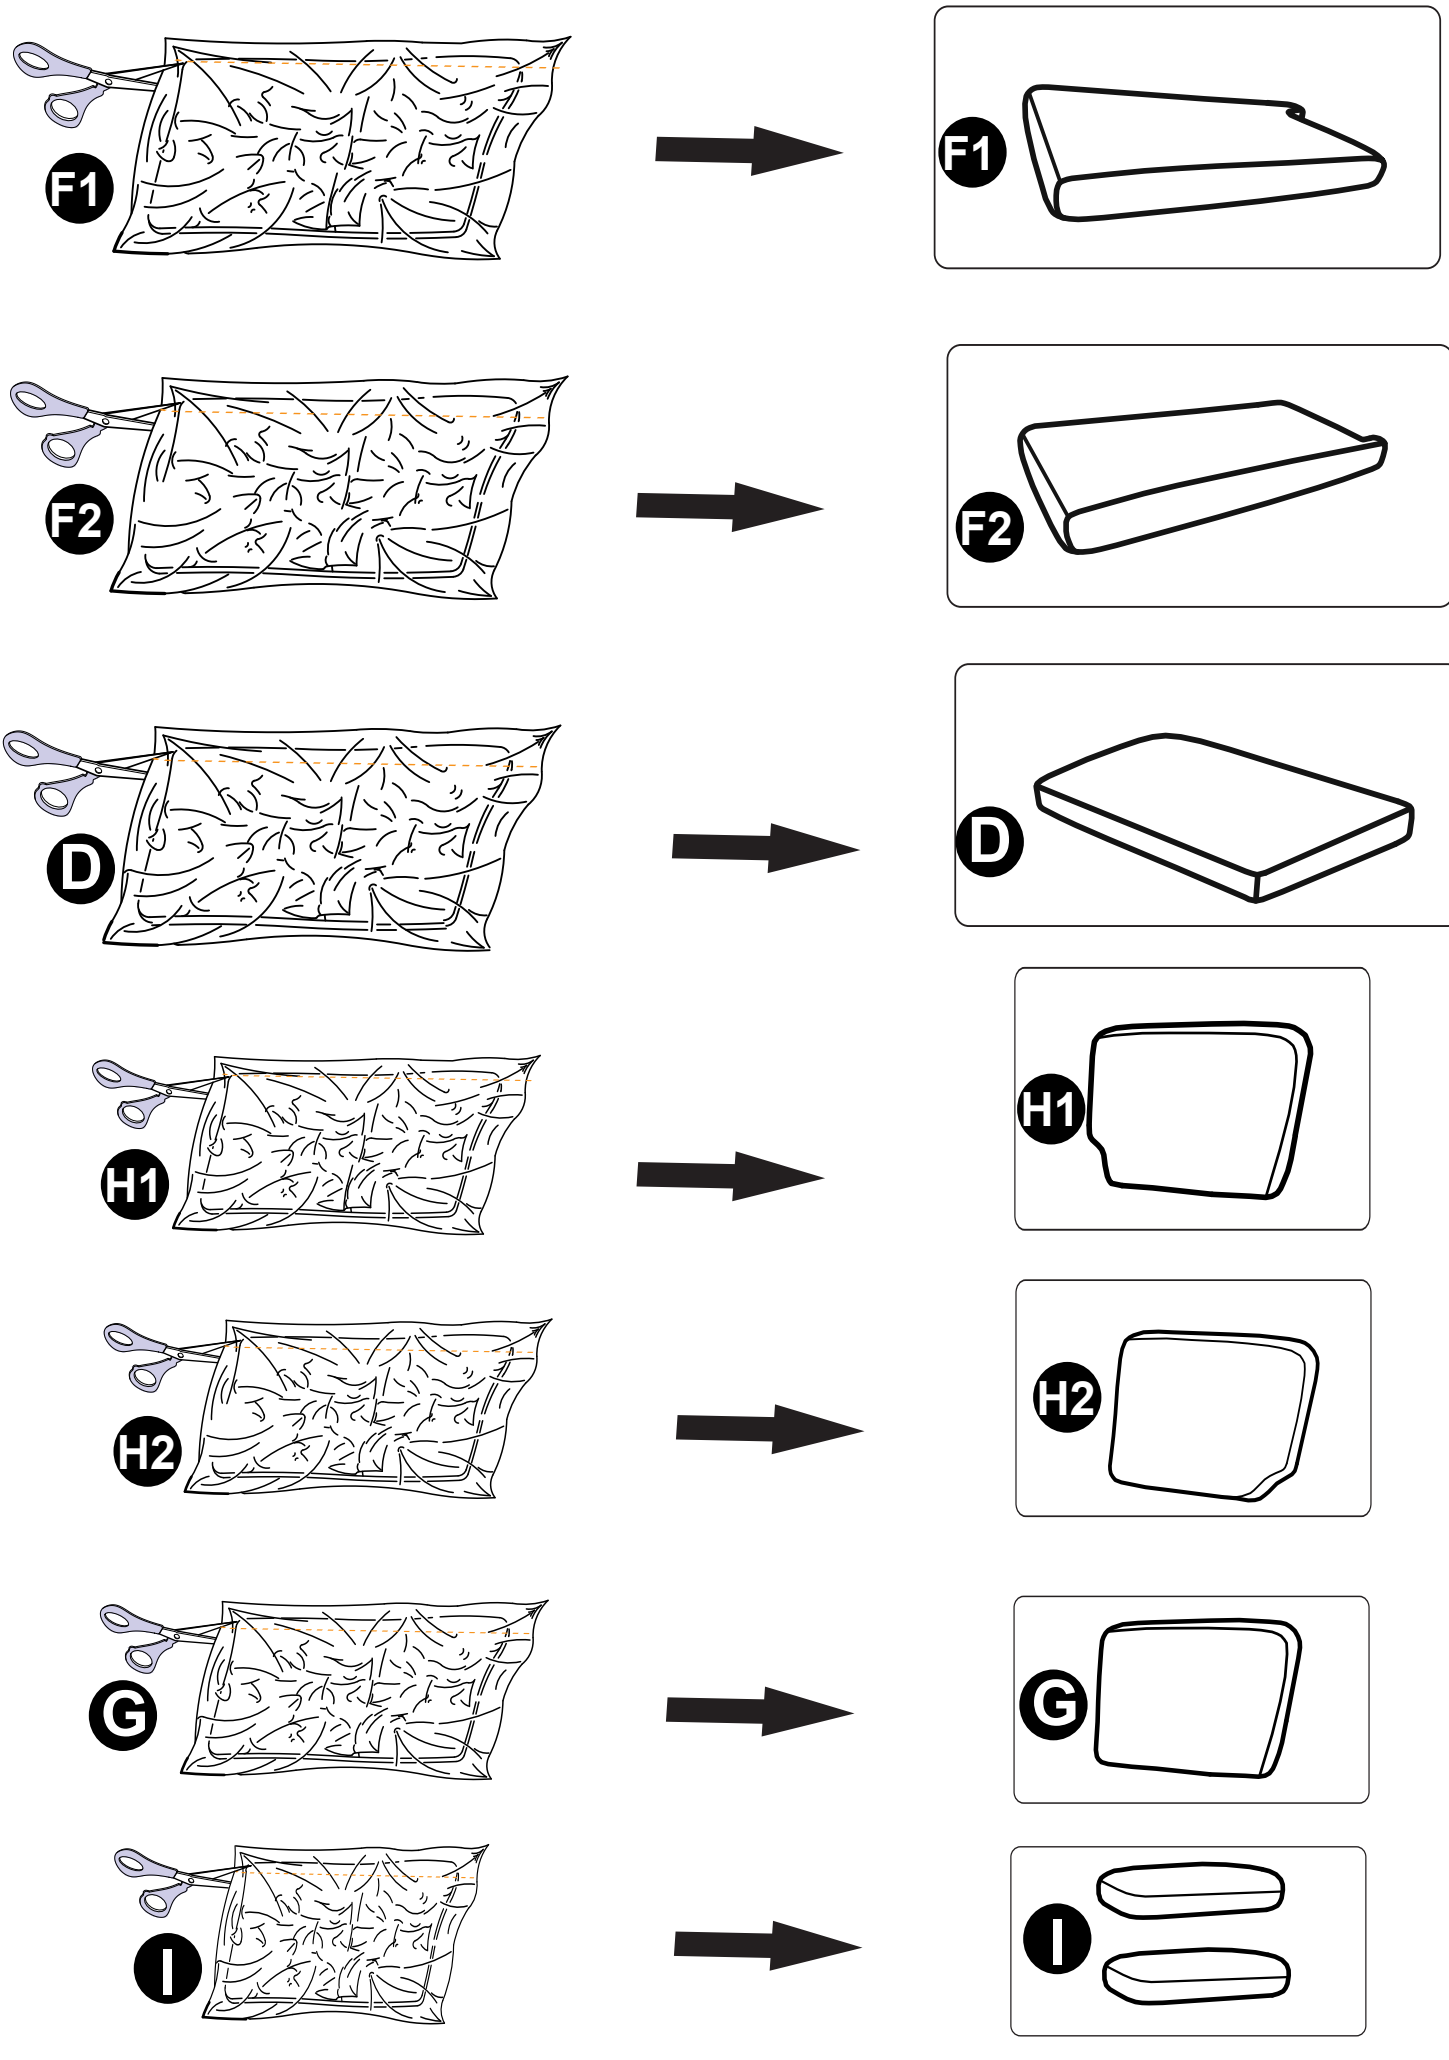


D F1 F2 H1 H2 G I Top & Bottom: Tap inward with both hands 3 times.

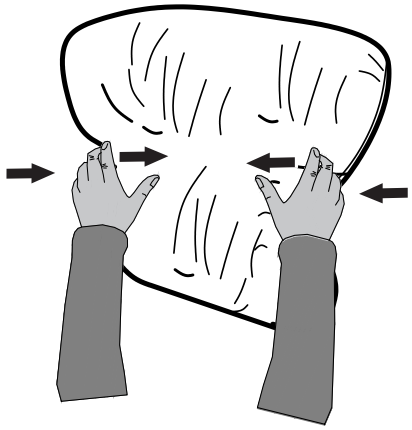


D F1 F2 H1 H2 G I Left & Right: Tap inward with both hands 3 times.

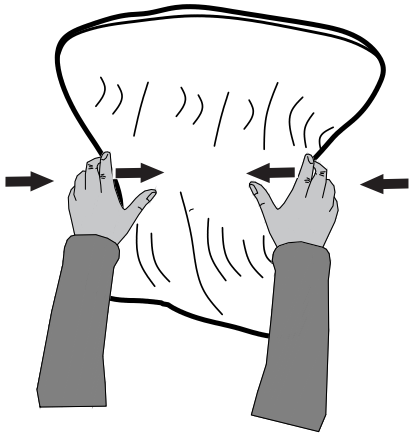



Front: Tap inward with both hands 3 times.

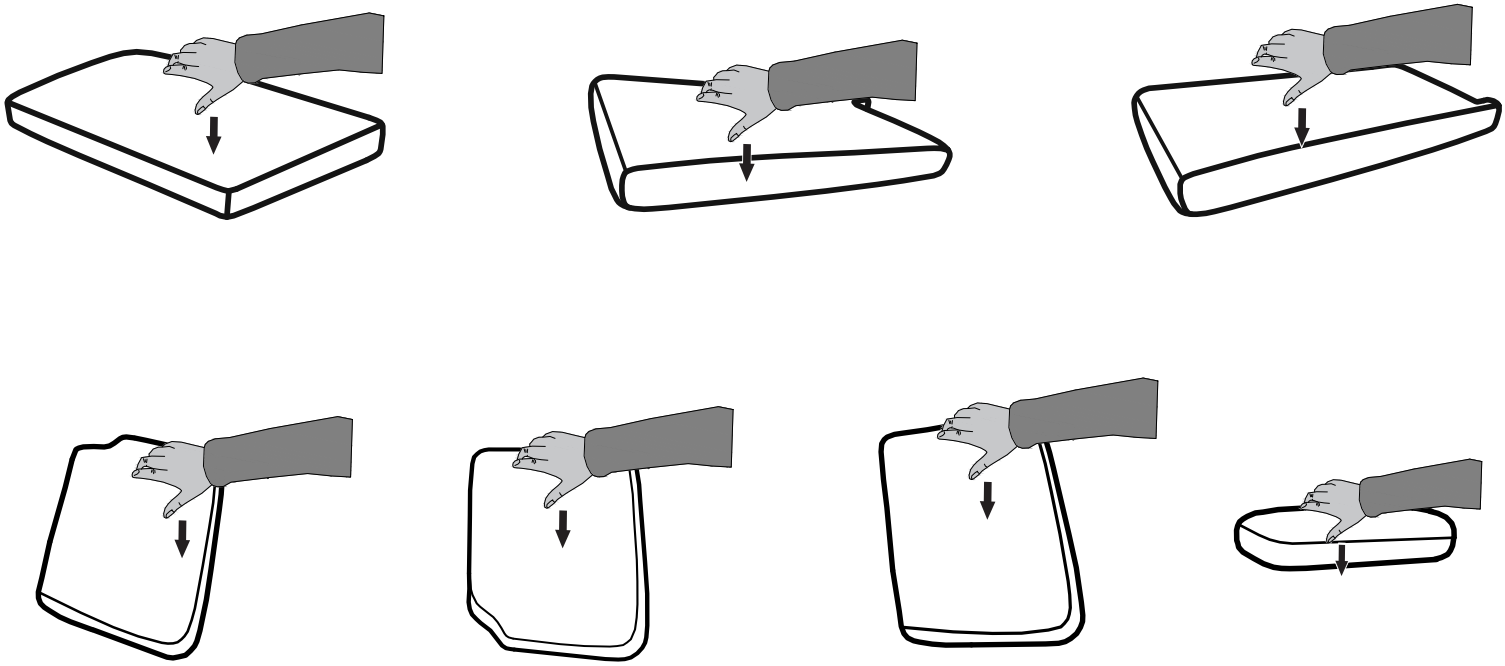


Step1:

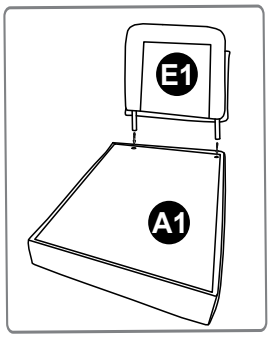


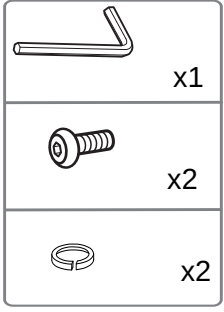

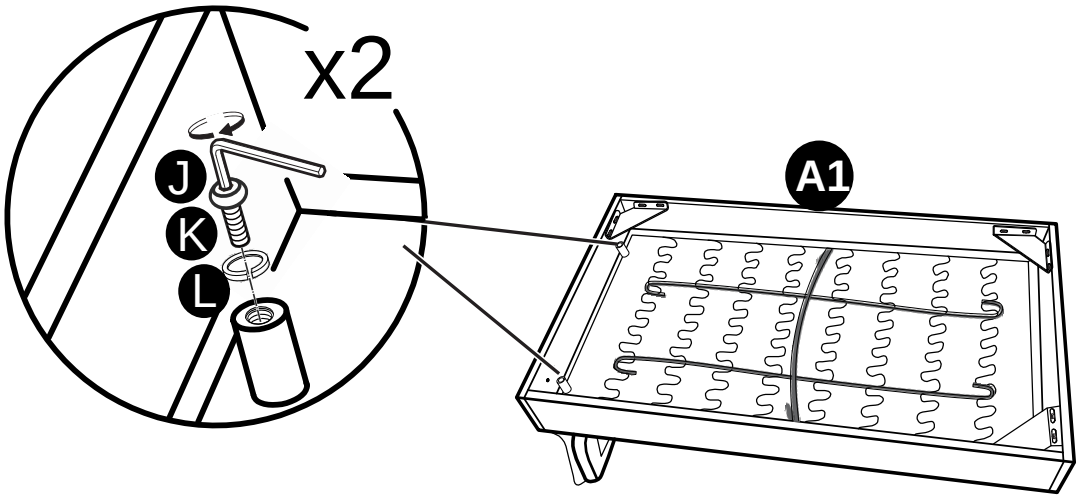



Step2:

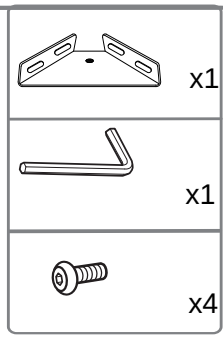


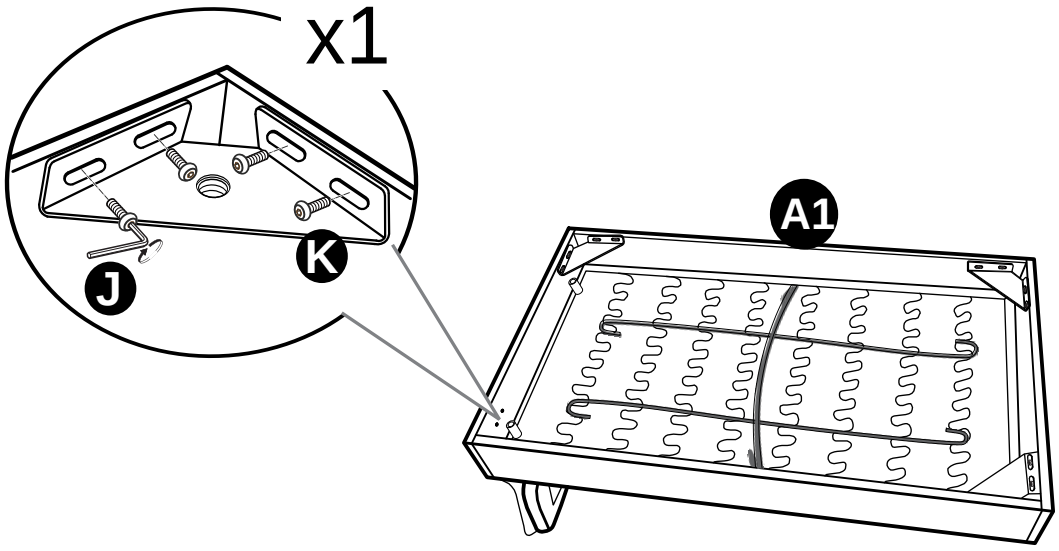


Step3:

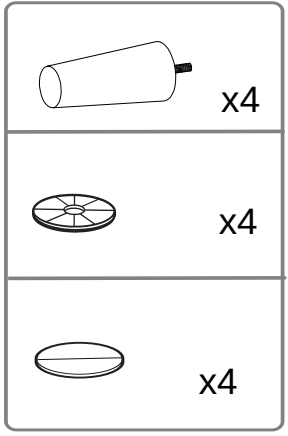

x4
x4
x4

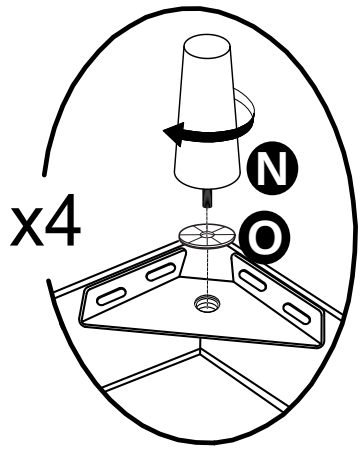

x4
N
O

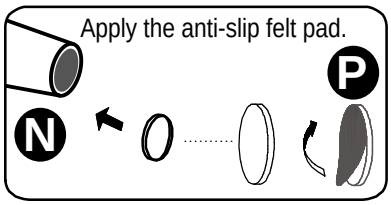

Apply the anti-slip felt pad.
N
P

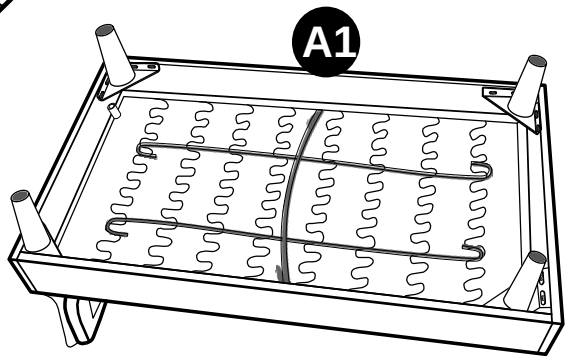
A1


Step4:

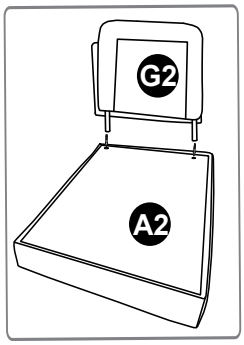

G2
A2

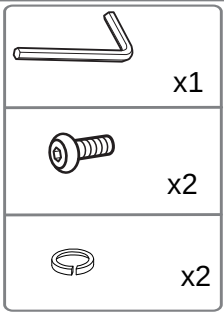
x1
x2
x2

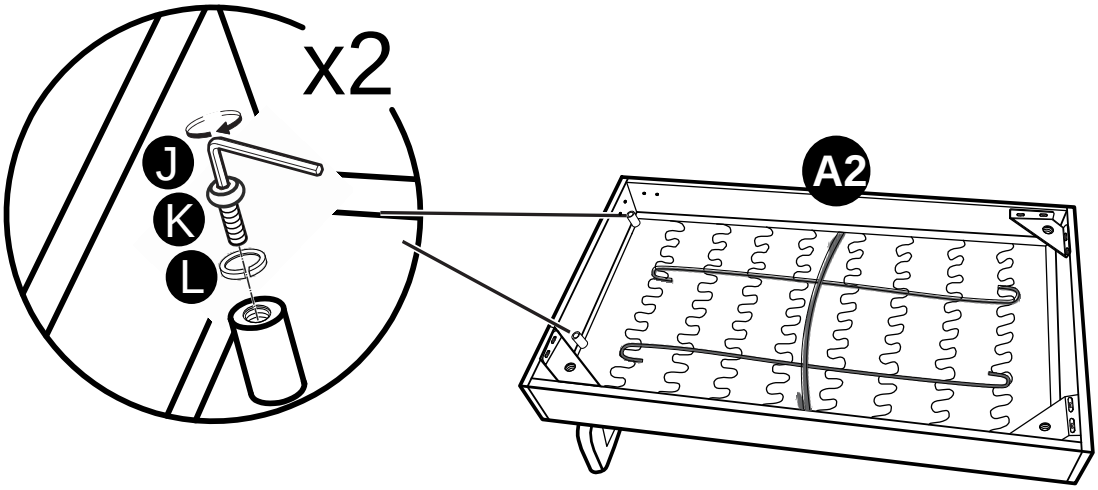

x2
J
K
L
A2


Step5:

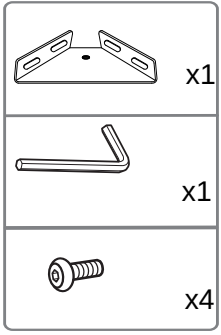

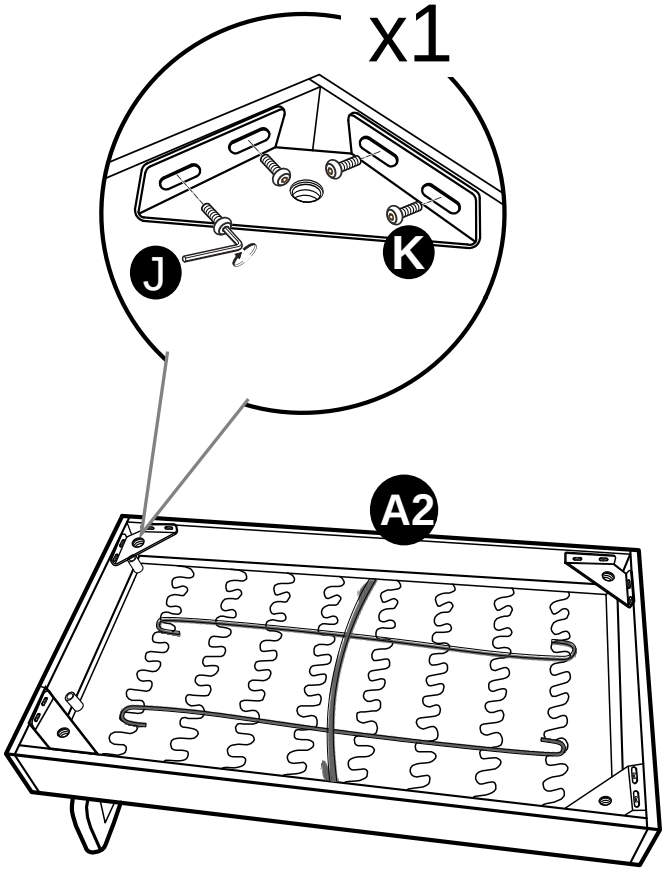



Step6:

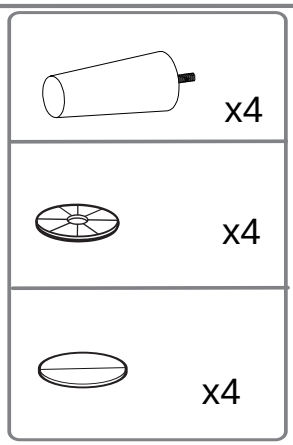


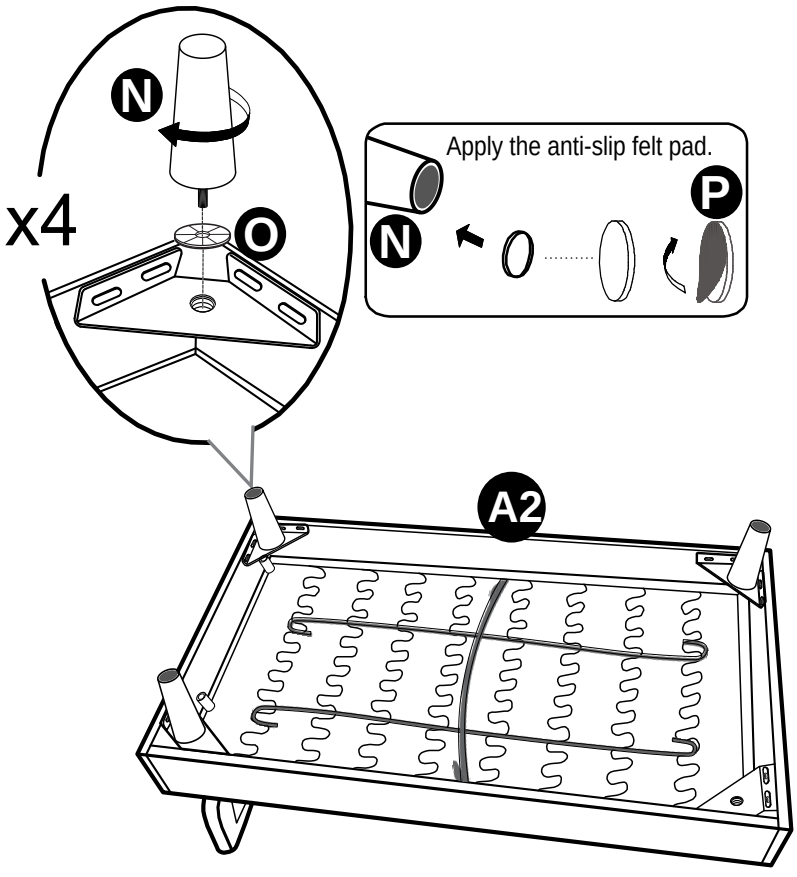


Step7:

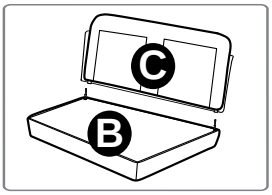


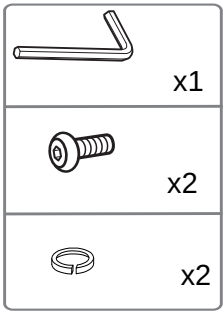

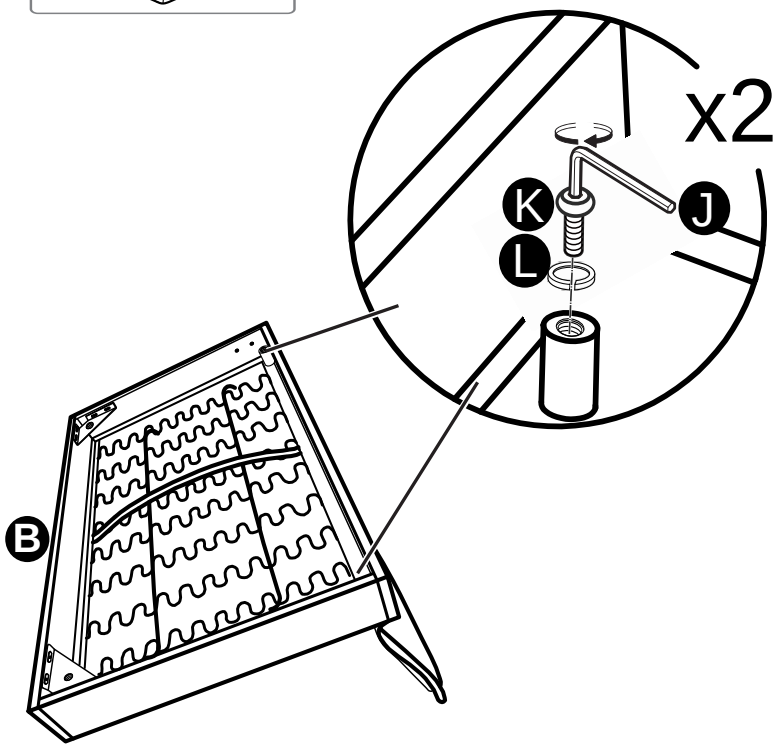



Step8:

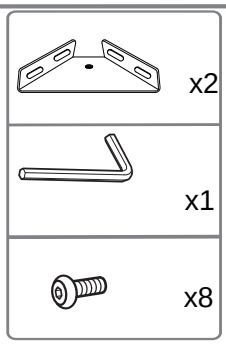

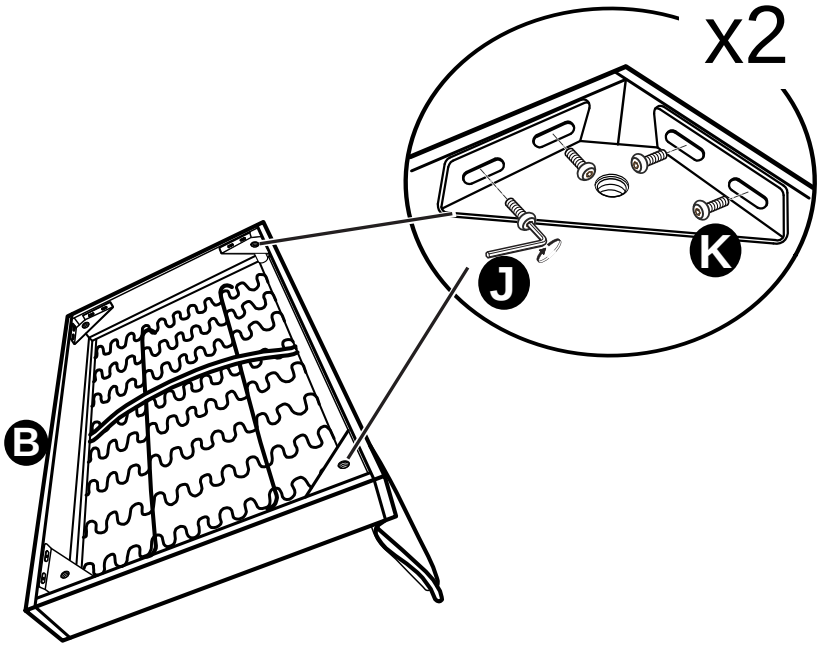



Step9:

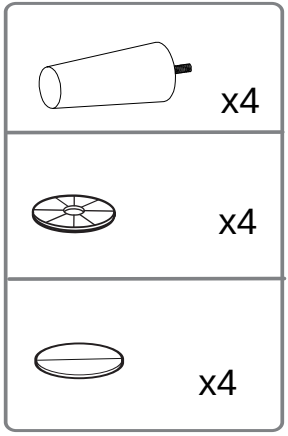

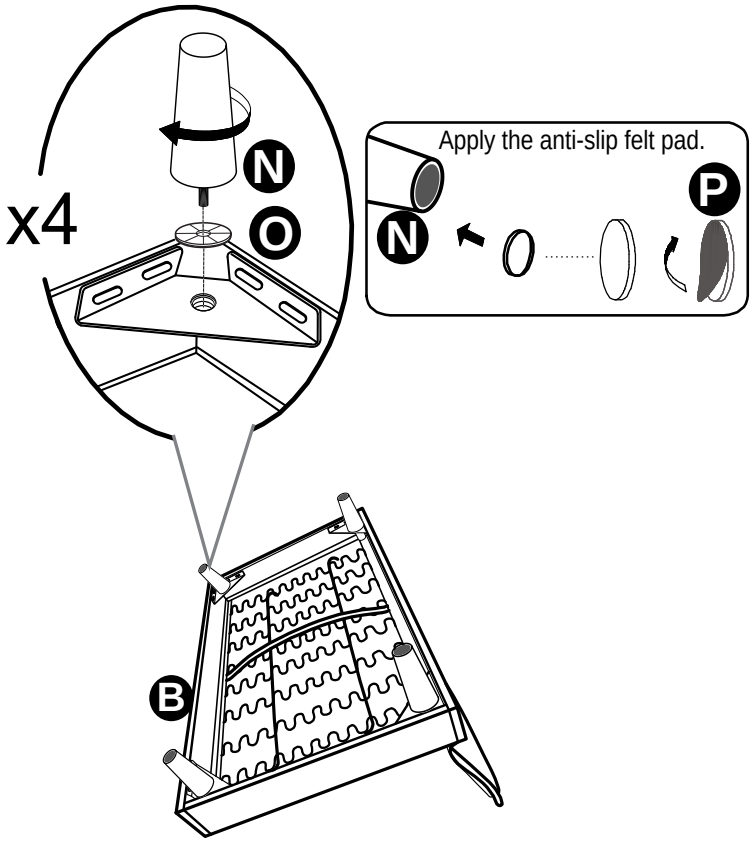


Step10:

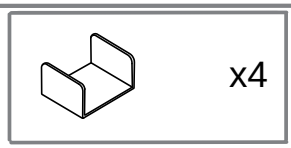


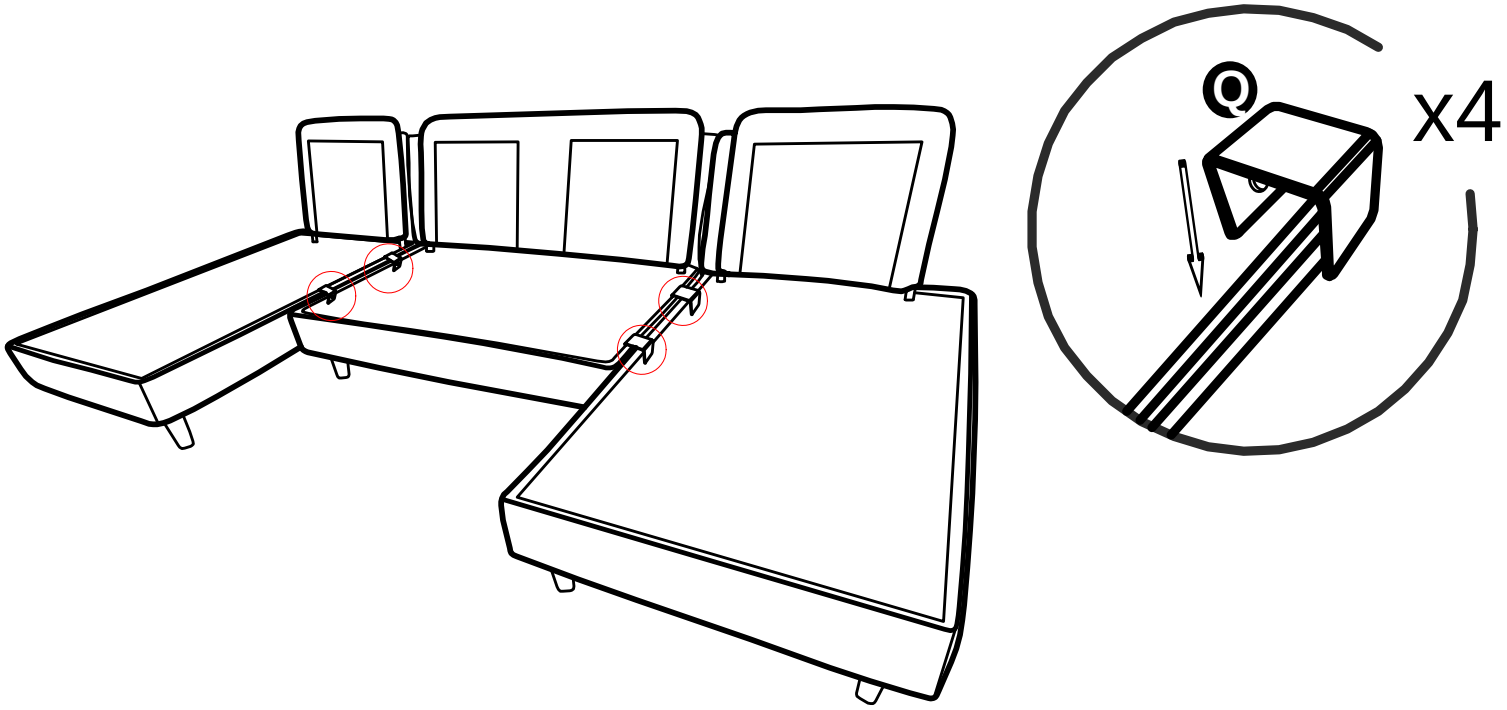


Step11:

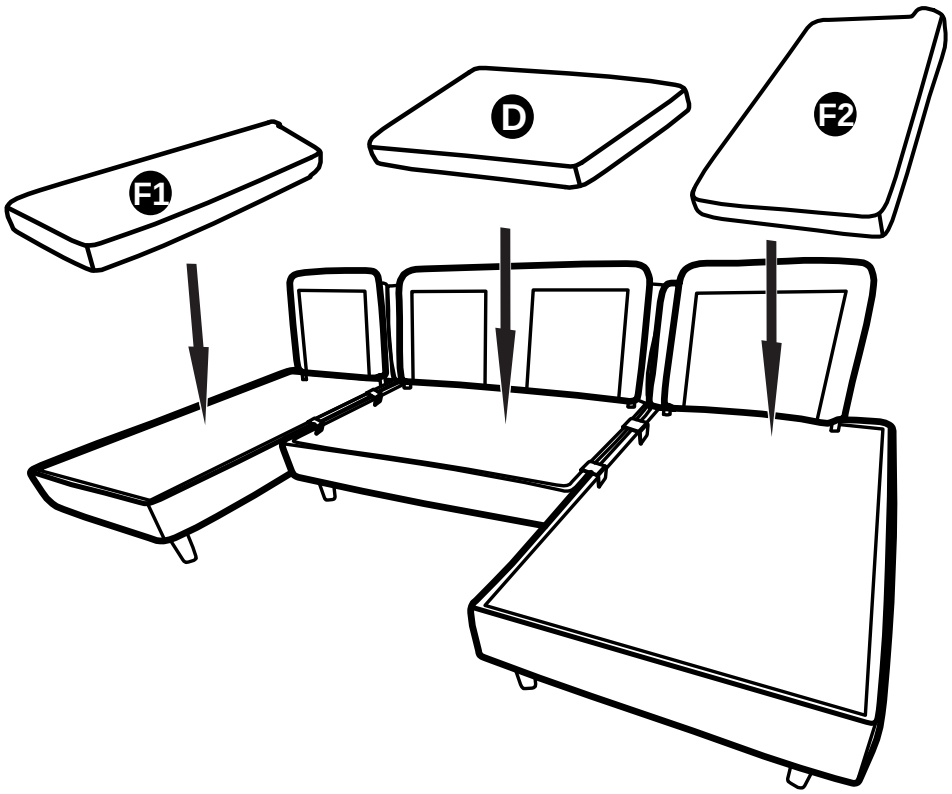

Step12:

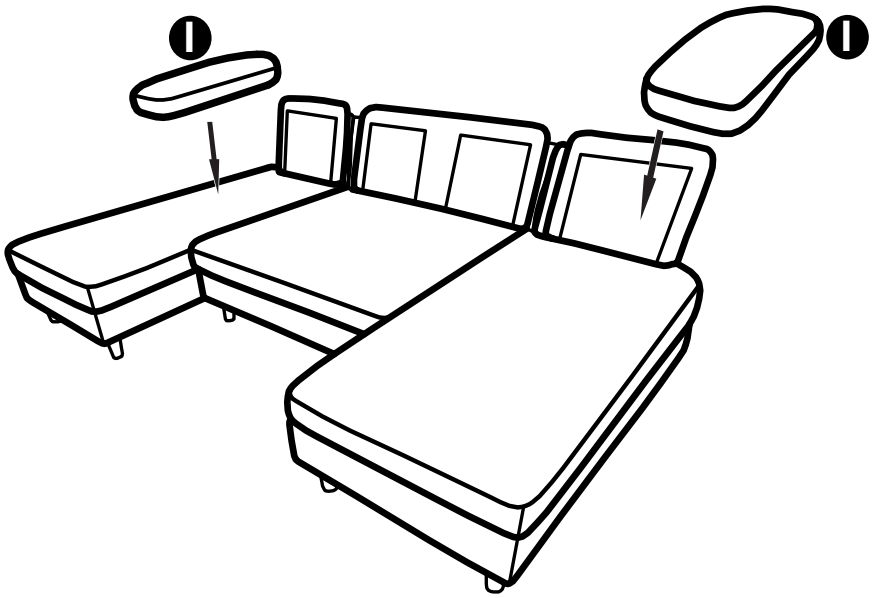

Step13:

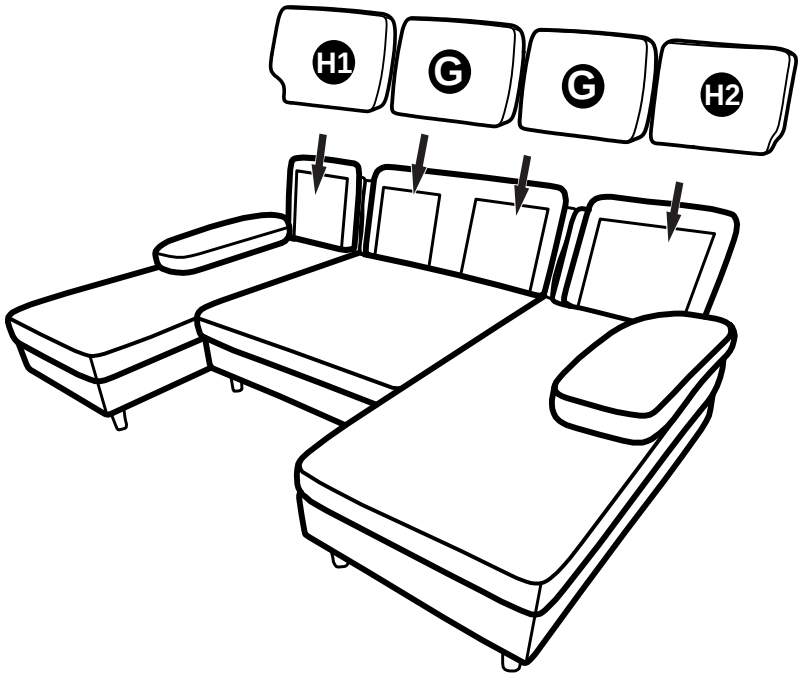

Step14:



Note: If there are indentations on the surface of the product after assembly, you can pat the indented areas and leave the product for 1-2 weeks, after which it will return to its original state.

