



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

A		SIDE PANEL	2 PCS
B		TOP PANEL	2 PCS
C		NIGHT STAND DRAWER BOX	2 PCS


HARDWARE IDENTIFICATION

1		ALLEN WRENCH M4(BALL SHAPE)110mm	1 PC
2		CONNECTION BOLT M6 x 50mm	12 PCS
3		WOOD DOWEL M8 x 30mm	8 PCS
4		FLAT HEAD SCREW M4 x 20mm	30 PCS
5		METAL BRACKET 3 x 25 x 150mm	6 PCS
6		L BRACKET BKT-4HC-01(2.0mm)	2 PCS


STEP 1

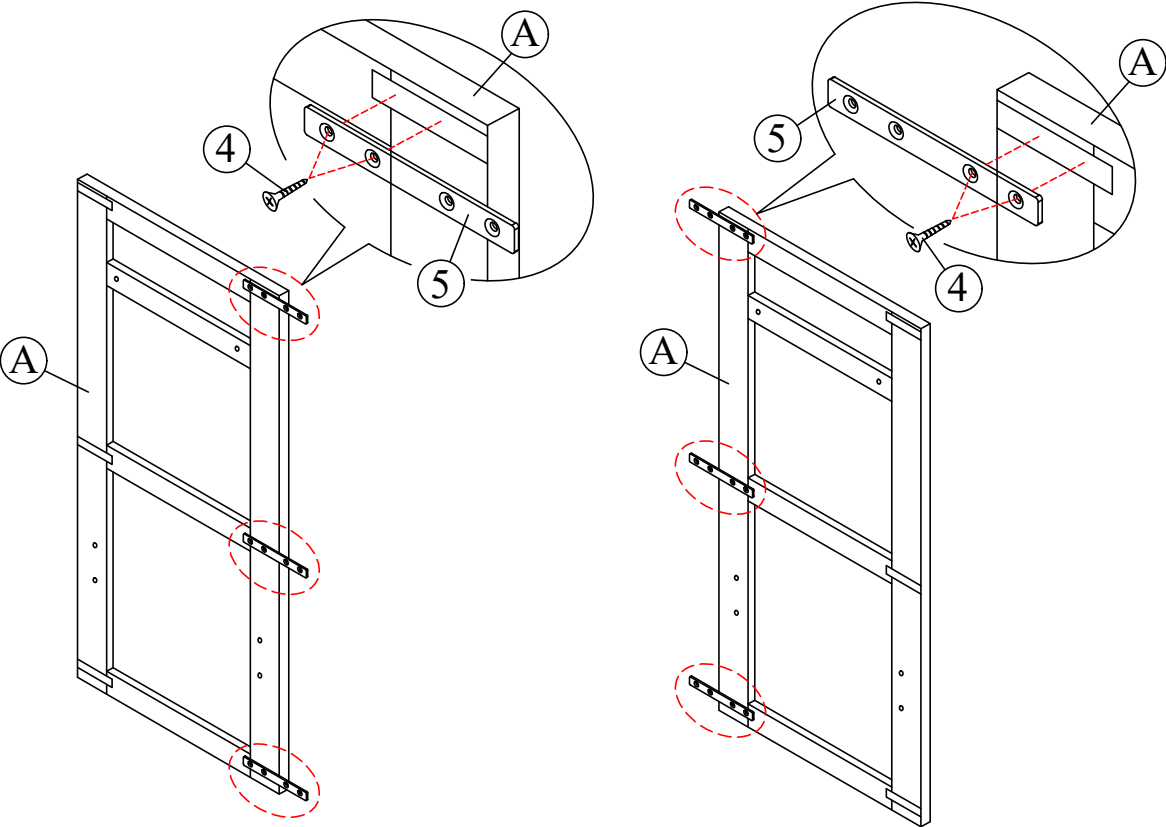


STEP 2

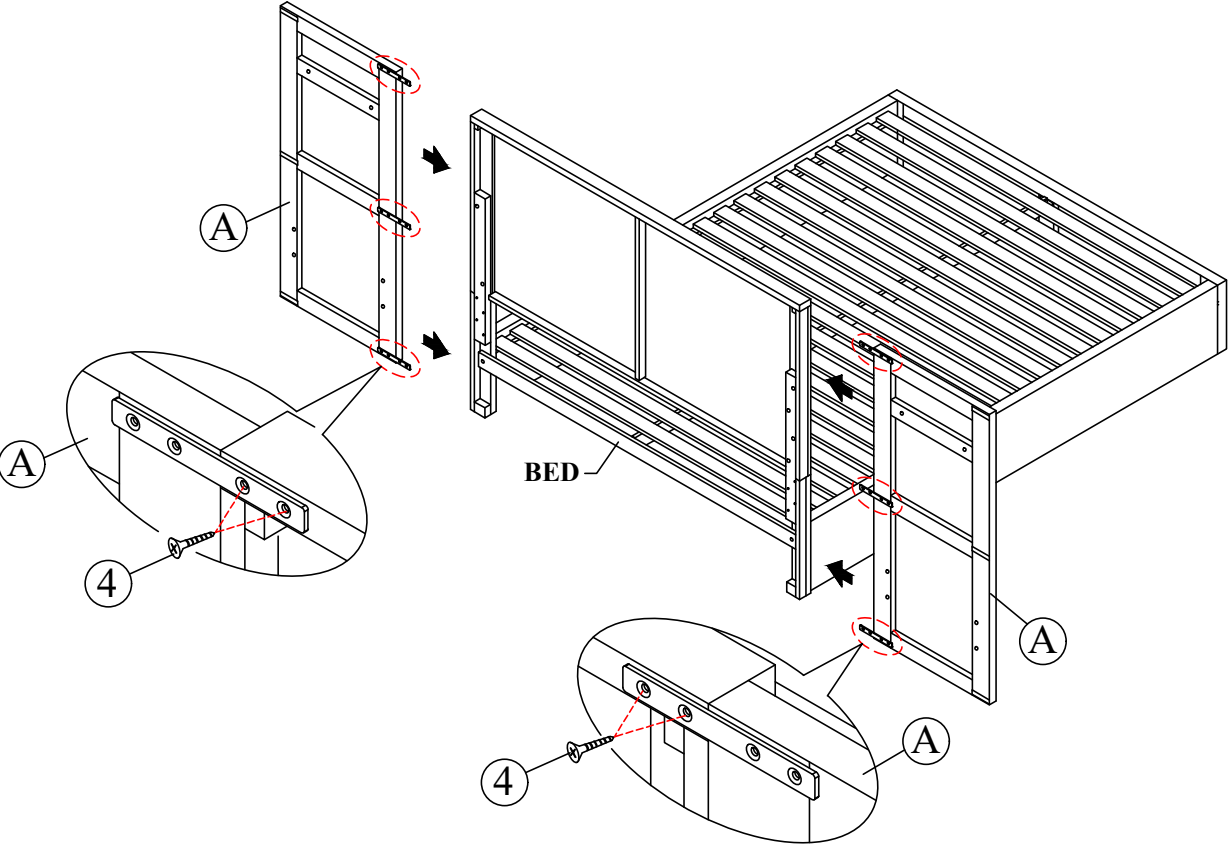

STEP 3

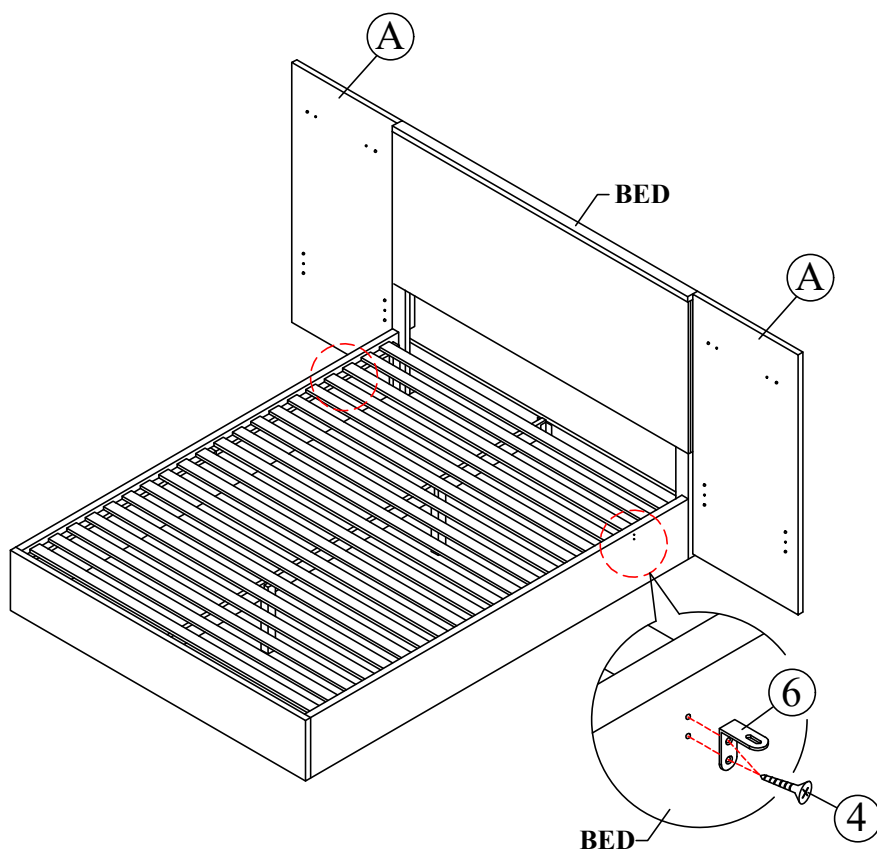


STEP 4

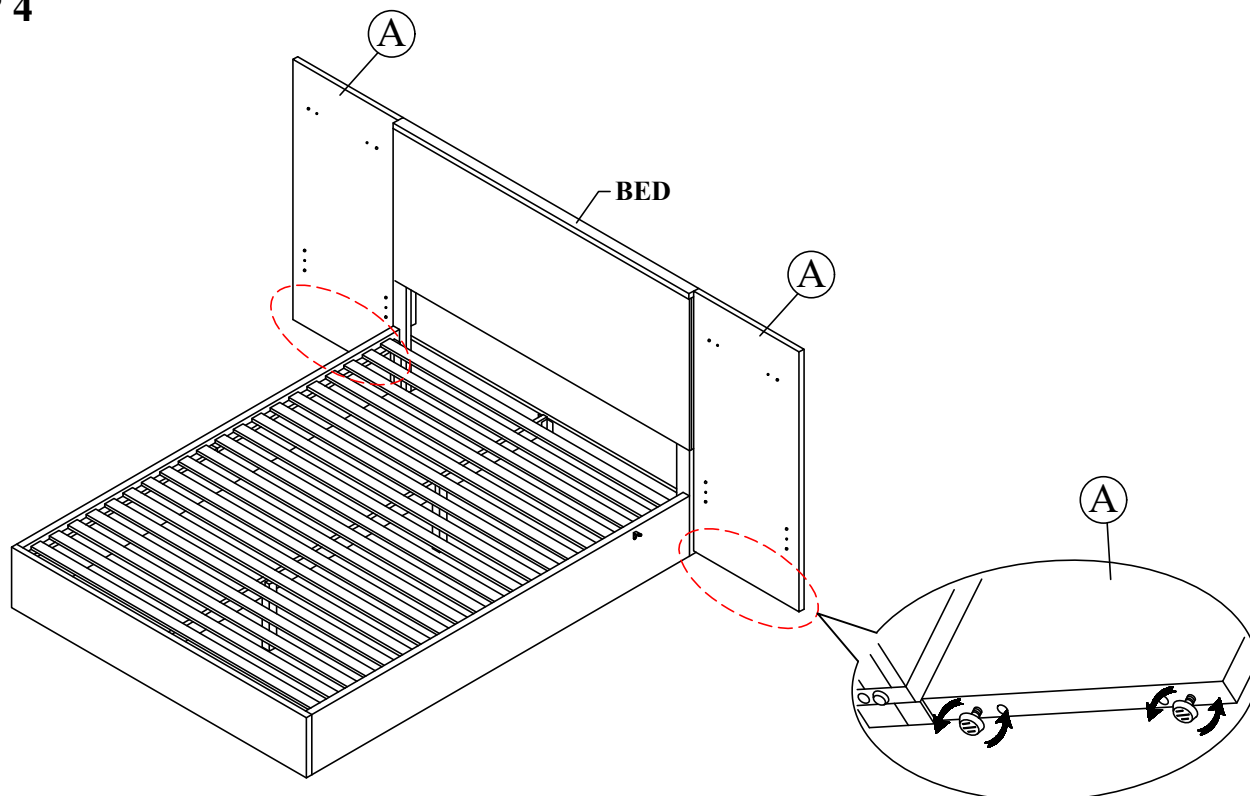


Note: Adjust the glides individually after assembly to properly align the headboard with the Side Pier.


STEP 5

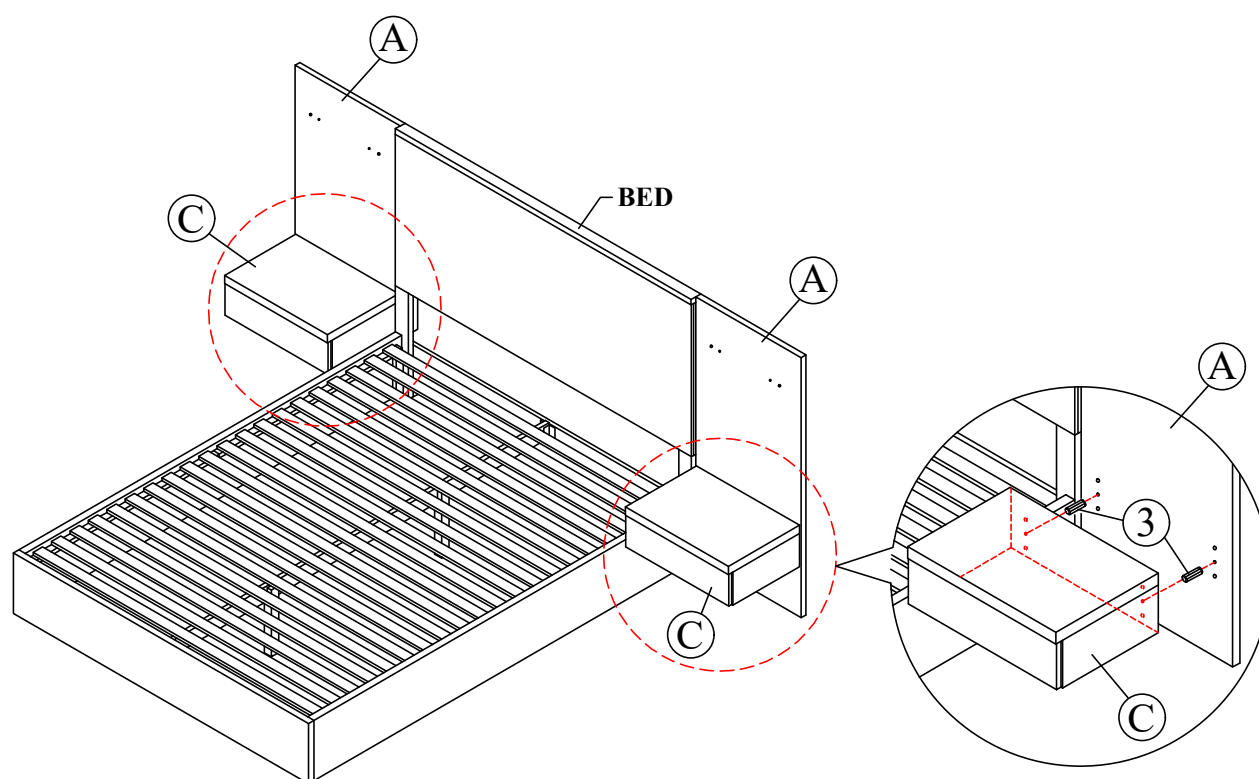


STEP 6

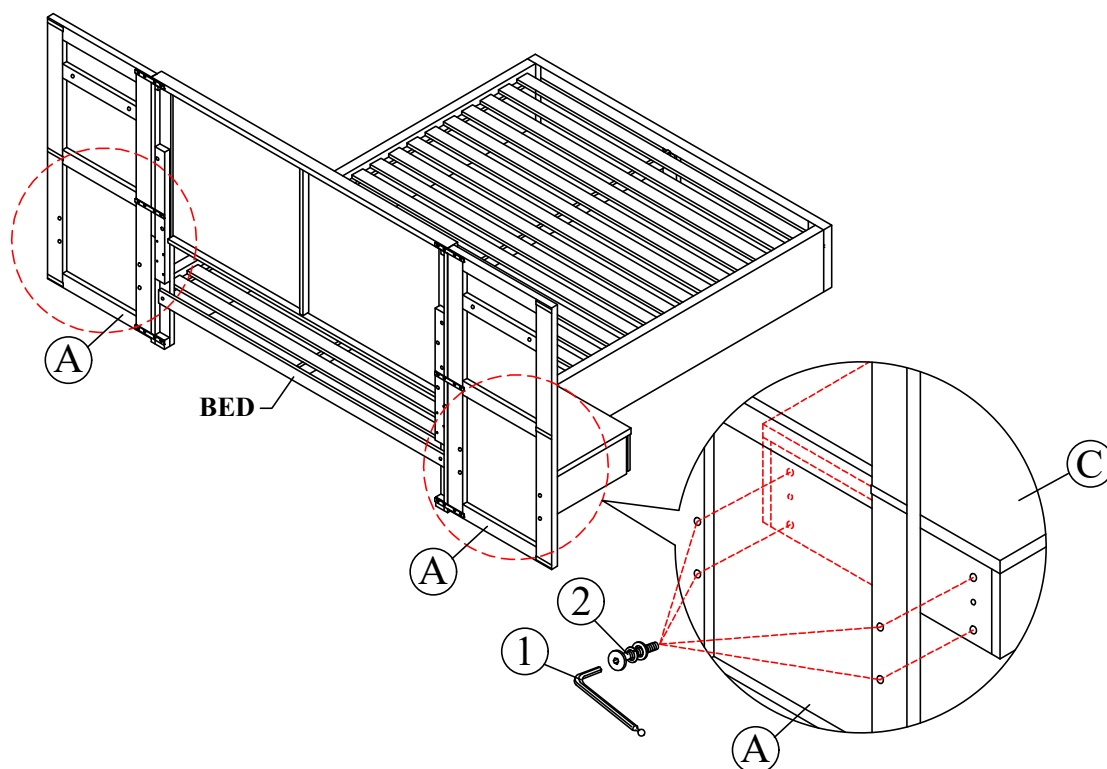

STEP 7

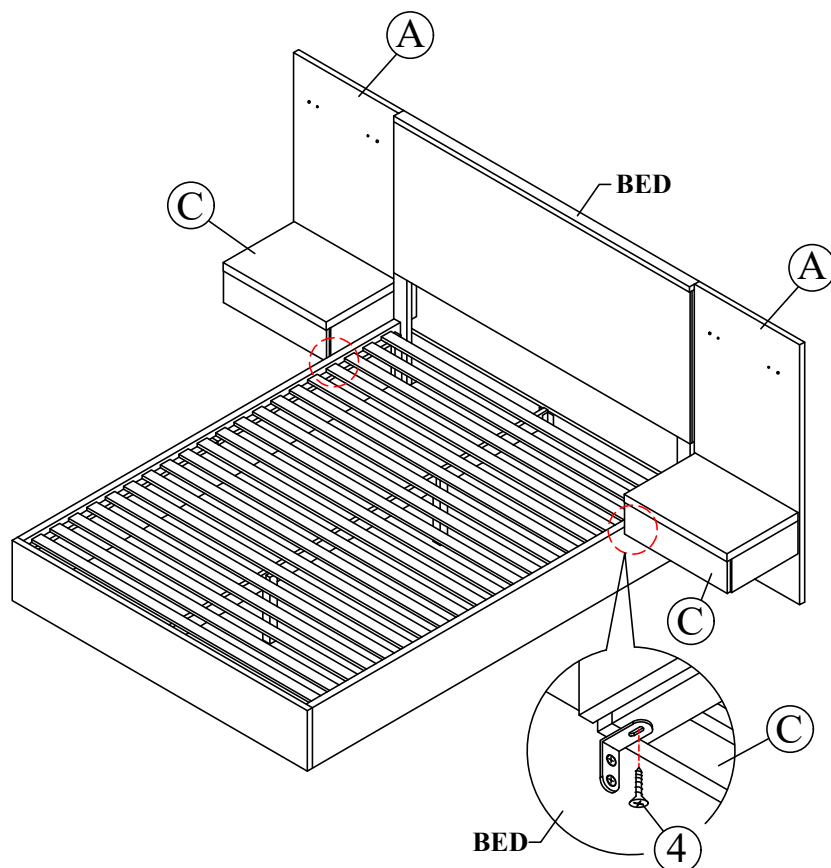

STEP 8

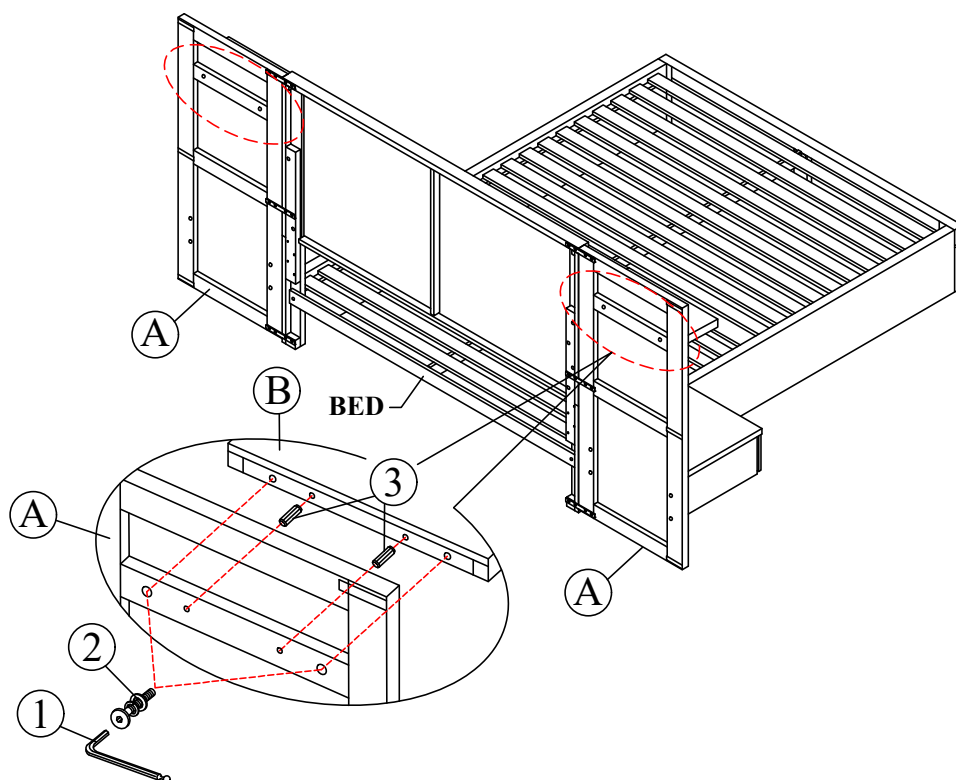

STEP 9

